




INSTALLATION INSTRUCTIONS APPLICATION □ 1997-98 HONDA CRV

TEL □ 1-866-XANATOS

SAFARI BAR ASSEMBLY

#17SS12/17BK12

MOUNT KIT B35

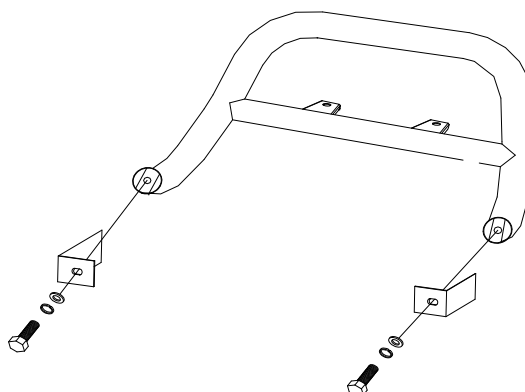

QTY	PARTS KIT CONTENTS DESCRIPTION	TOOLS REQUIRED
1	MOUNT BRACKET-DRIVER SIDE	1/2" SOCKET
1	MOUNT BRACKET-PASSENGER SIDE	1/2" WRENCH
2	M12×50 HEX BOLT	9/16" SOCKET
2	Φ12 SAE FLAT WASHERS	3/4" SOCKET
2	Φ12 LOCK WASHERS	3/4" WRENCH
2	M10×30 HEX BOLT	TORQUE WRENCH
4	Φ10 FLAT WASHER	PATCHET
2	Φ10 LOCK WASHER	
2	M8×25 HEX BOLT	
2	M8 HEX NUT	
4	Φ8 FLAT WASHER	
2	Φ8 LOCK WASHER	

STEP1: REMOVE THE CONTENTS FROM THE BOX AND CHECK FOR ANY DAMAGE. VERIFY ALL PARTS AGAINST PARTS LIST.

STEP2: READ AND UNDERSTAND INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION.

STEP3: INSTALL MOUNT BRACKET USING BOTTOM M8 AND M10MM FASTENERS THROUGH TABS AS SHOWN IN FIG 1, 2 AND 3. LEAVE LOOSE.

STEP4: INSTALL BACKING PLATE USING M10 FASTENERS AS SHOWN (FIG. 1 AND 3) LEAVE LOOSE.

STEP5: MOUNT SAFARI BAR USING M12 FASTENERS. (SEE FIG 3 TO 4)

STEP6. Center and level Safari Bar. TIGHTEN AND Torque fasteners as LISTED. M12 fasteners to 65FT.LBS, M10 -32 FT.LBS,M8-17 FT.LB

FIGURE 1

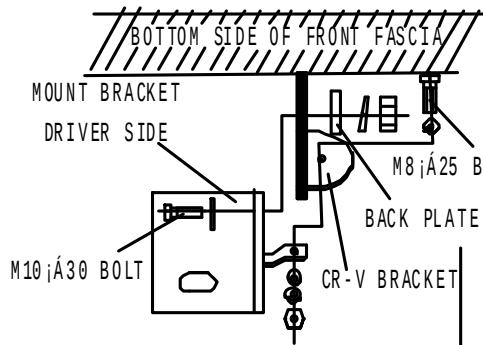


FIGURE 2

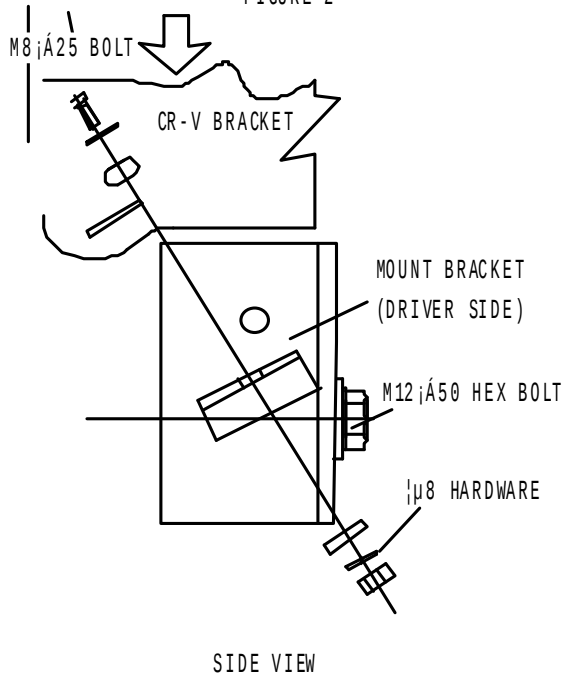


FIGURE 4
TOP VIEW

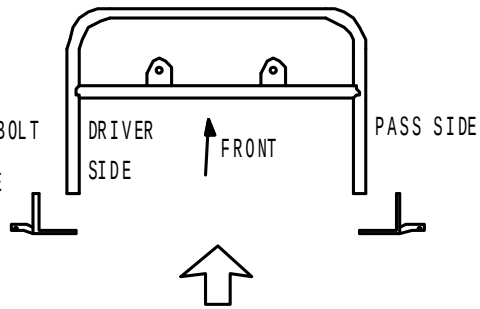


FIGURE 3

