



INSTALLATION INSTRUCTIONS

PREMIUM RUNNING BOARD BRACKET FOR HYUNDAI PALISADE 2021


PART # BR-H4

PARTS LIST

NO.	QTY	PICTURE	NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	Front bracket (L/R)	②	2	Middle bracket (L/R)	③	2	Rear bracket (L/R)
④	2	Connect plate	⑤	2	Hook bolt	⑥	12	T Bolt M6x20
⑦	6	T Bolt type 5 (M10x40 Hex Bolt)(60x16-15-5)(for φ22-24 hole)	⑧	6	M10 Plastic retainer	⑨	8	Hex nut M10
⑩	8	Lock washer D10	⑪	8	Flat washer D10 (10x30x2.5mm)	⑫	18	Flat washer D6 (6x22x2mm)
⑬	2	Hex bolt (full thread) M6_30	⑭	2	Hex bolt (full thread) M8_30	⑮	2	Flat washer D8 (8x24x2mm)

①6	18		①7	16		①8	2	
		Lock washer D6			Hex nut M6			Lock washer D8

Installation Figure:

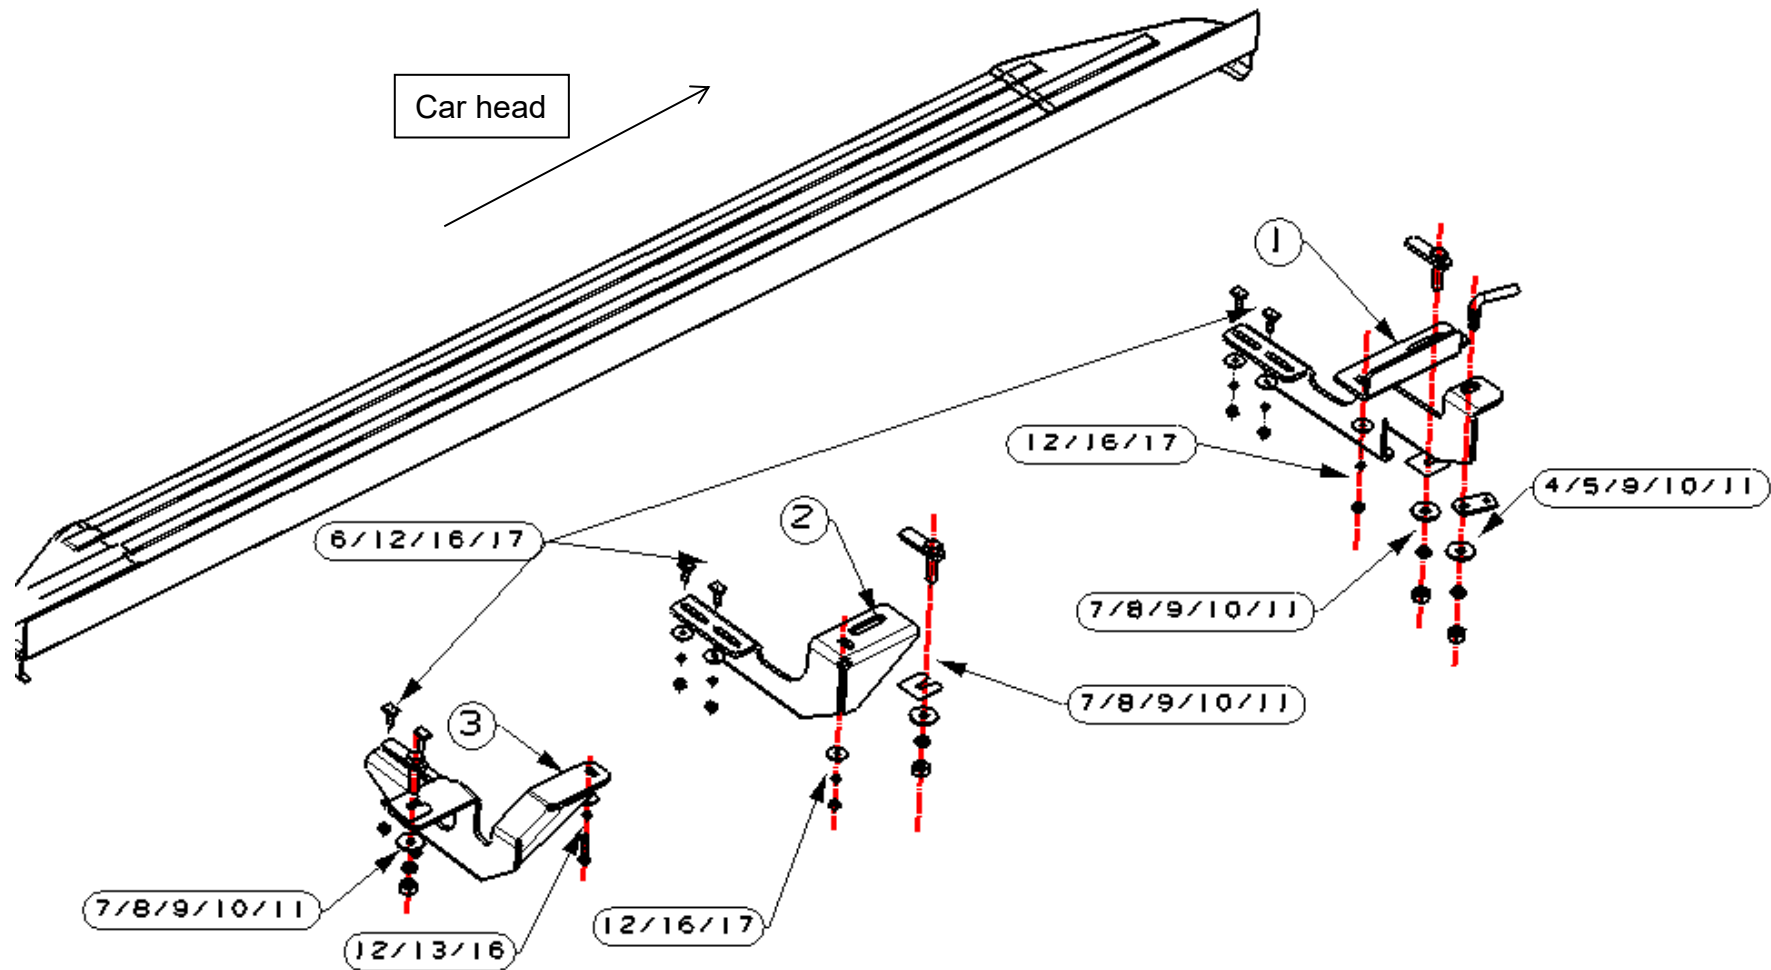


Step 1: Verify all parts are present.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation finished.

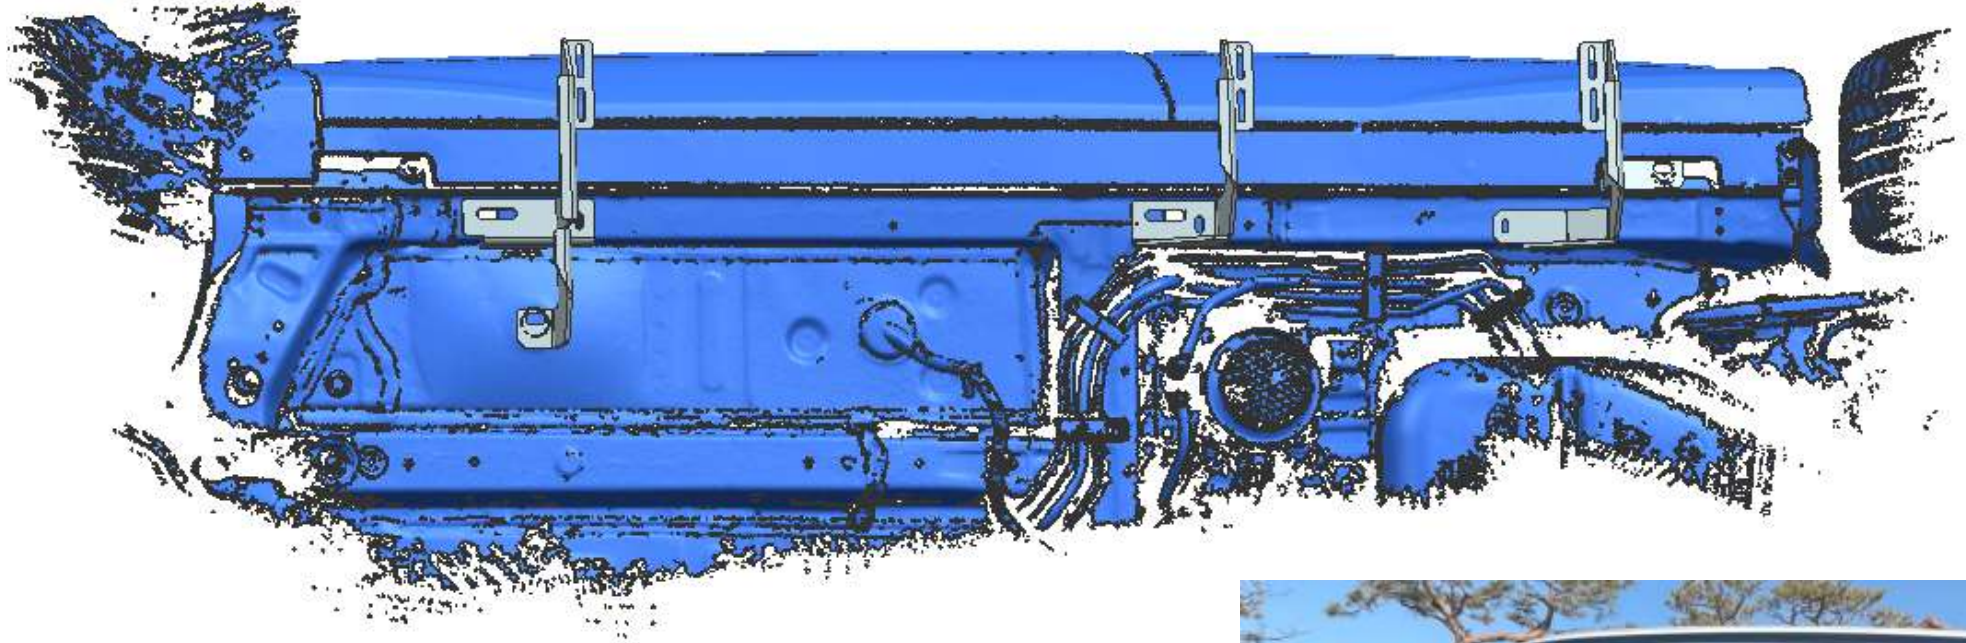

Complete Installation:

