

INSTALLATION INSTRUCTION

**18 Chevy Equinox Stainless
Double Layer Rear Bumper
Guard Brackets
PART # G9**



**BLACK HORSE
OFF ROAD**


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affect for your fitting.

PART LIST

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Rear Bumper Guard	1		9	Large Washer	12	$\Phi 12 \times 30 \times 3.0$
2	Bracket (left)	1		10	Spring Washer	8	$\Phi 12$
3	Bracket (right)	1		11	Hexagon Nut	6	M12
4	Bracket (left)	1		12	Plastic Fixture	2	$\Phi 12$
5	Bracket (right)	1		13	Hexagon Bolt	4	M8X25
6	T-Bolt 5-1	2		14	Large Washer	4	$\Phi 8 \times 25 \times 2.0$
7	hexagonal head screw (Fine Thread)	2	M12X1.25X35	15	Spring Washer	4	$\Phi 8$
8	Hexagon Bolt	4	M12X35				


INSTALLATION PICTURE

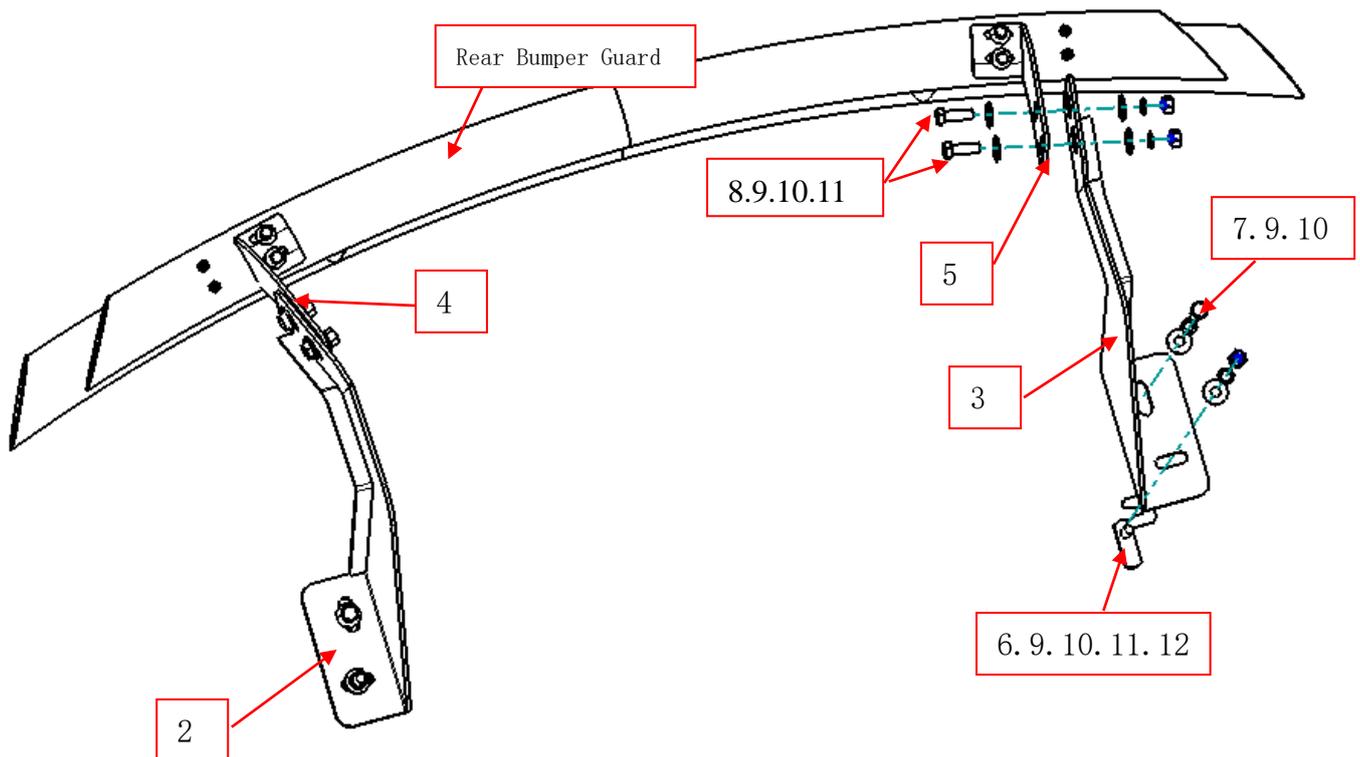

INSTALLATION PROCEDURES

Step 1: Refer to the Part list to check if all the hardware are included.


Step 1: Refer to the car bottom to install bracket 1 and bracket 2.

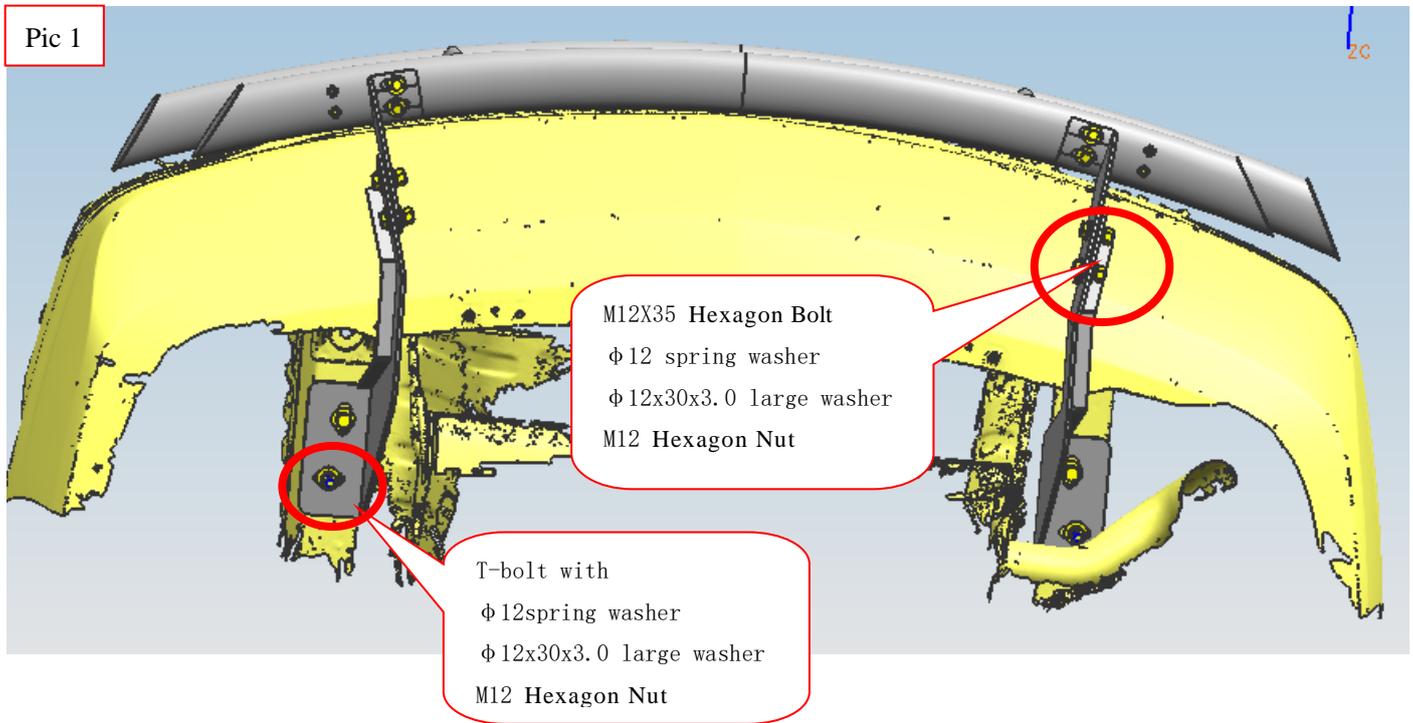

Step 3: install the rear bumper on the brackets and adjust the rear bumper to the proper position.

Step 4: Check if all hard ware are installed and fasten.

Step 5: Complete the installation.

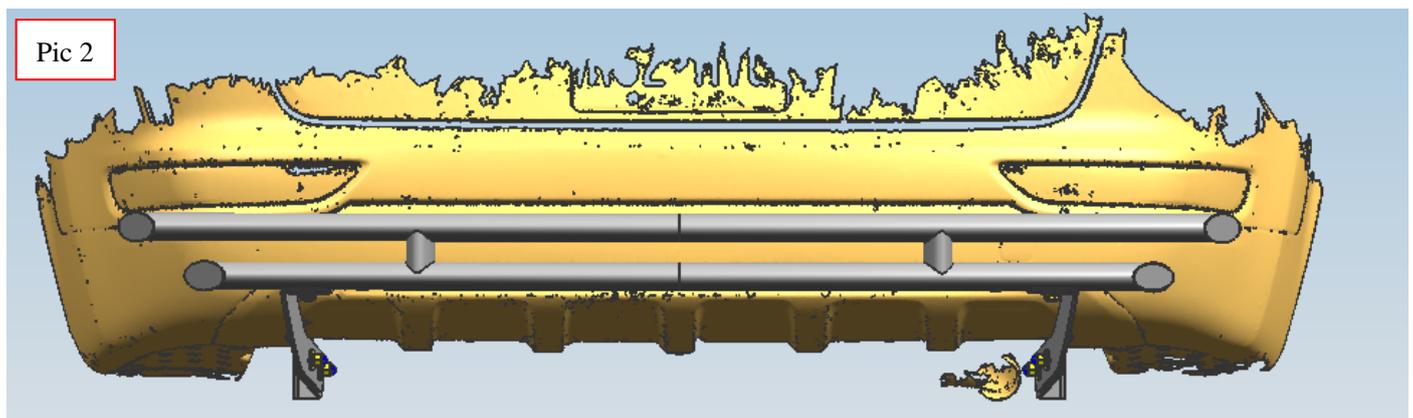

Disclaimer: Caused due to improper installation initiates some related problem and losses, are beyond our company's quality assurance