BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN PATHFINDER 13-16



INSTALLATION INSTRUCTIONS BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN PATHFINDER 13-16 PART # N2

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	Rear bumper guard	2	1	Bracket-A(L)
3	1	Bracket-A(R)	4	1	Bracket-B(L)
(5)	1	Bracket-B(R)	6	4	Assembling bolt M8*25

]	BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN PATHFINDER 13-16										
	7	4	Hex bolt M10*35	8	8	Flat washer D10 (10x20x2mm)					
	9	4	Lock washer D10	10	4	Hex nut D10					
	11)	4	Flat washer D12 (12x24x2.5mm)	12	4	Lock washer D12					
	(E)	4	Hex Bolt M12*35								


Installation Steps


- STEP 1: Check all the contents are available in accordance with the above list.
- STEP 2: Using M12*35 bolt to install Bracket-B-L/R as FIG.2. Do not tighten all the bolts.
- STEP 3: As the FIG.1, first Connect Bracket-A&B, then install the rear bumper guard on Bracket-A-L&B. Do not tighten all the bolts.
- STEP 4: Test and make sure that the rear bumper guard is steadily fixed, and then tighten all the hardware.
- STEP 5: Installation is finished.

BRACKETS FOR S/S UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN PATHFINDER 13-16 PIC1

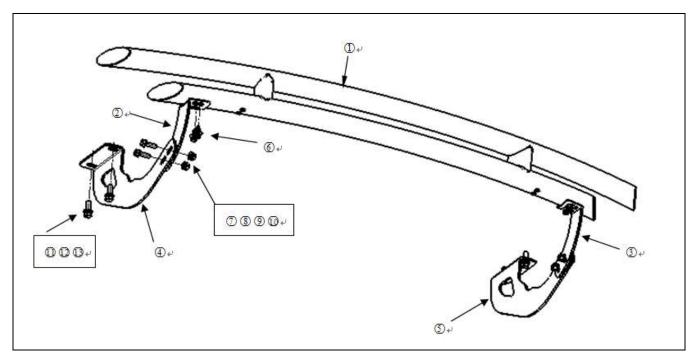

PIC2

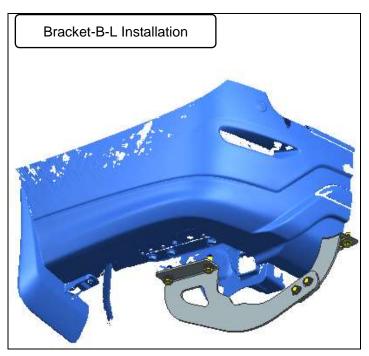

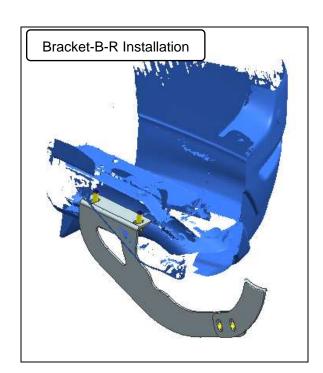

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.

Black Horse Off Road 39 St Mary's Place Freeport NY11520 Tel: 1(866) 926 2867 www.blackhorseoffroad.com