



INSTALLATION INSTRUCTIONS

**MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR WITH
BRAKE LIGHT FOR CHEVY COLORADO 15-21/GMC CANYON 15-21
(COMPATIBLE WITH TONNEAU COVER BASE)**

PART # RB1MT+RBT5








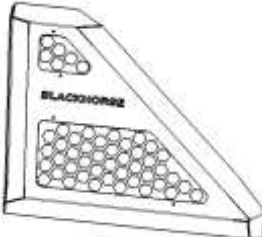
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.







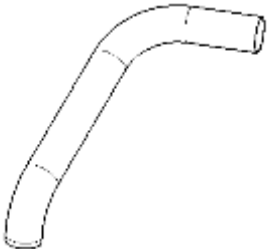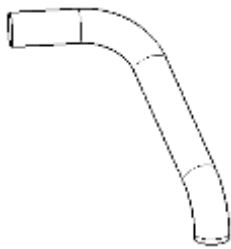




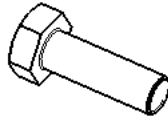



Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.














Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front middle tube	②	1	 Rear middle tube
③	1	 Front side tube (L)	④	1	 Front side tube (R)
⑤	1	 Rear side tube (L)	⑥	1	 Rear side tube (R)
⑦	1	 Middle decoration plate	⑧	1	 Decoration plate(L)

MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR WITH BRAKE LIGHT FOR CHEVY COLORADO 15-21/GMC CANYON 15-21


⑨	1		⑩	1	
		Decoration plate(R)			Allen wrench S=4
⑪	1		⑫	1	
		Allen wrench S=5			Allen wrench S=6
⑬	8		⑭	2	
		Lock washer D6			Lock washer D8
⑮	10		⑯	4	
		Large flat washer D6			Large flat washer D8
⑰	2		⑱	2	
		Hex bolts M6_20			Hex bolts M8_30
⑲	2		⑳	8	
		Hex Nut M8			Hexagon bolt M6_20
㉑	4				
		Bolt & Washer Assembly (M8_25)			
COLORADO MOUNTING BASE:					
㉒	2		㉓	2	
		Mounting base (L/R)			Front end cover (L/R)

MODULAR TEXTURED BLACK CLASSIC PRO ROLL BAR WITH BRAKE LIGHT FOR CHEVY COLORADO 15-21/GMC CANYON 15-21

②④	2	 Rear end cover (L/R)	②⑤	4	 Roll bar gum cover
②⑥	1	 Black adhesive tape 1 (1600x35x5mm)	②⑦	4	 Black adhesive tape 2 (250x35x5mm)
②⑧	4	 Black adhesive tape 3 (250x35x3mm)	②⑨	1	 Allen wrench S=4
③①	1	 Allen wrench S=6	③②	6	 Lock washer D10
③③	12	 Large flat washer D10	③④	6	 M10 HEX NUT
③⑤	6	 Hex head bolts M10_35	③⑥	4	 Hex bolts M10_45
③⑦	4	 Bolt & Washer Assembly M6_20			

Installation Steps


Installation Diagram.

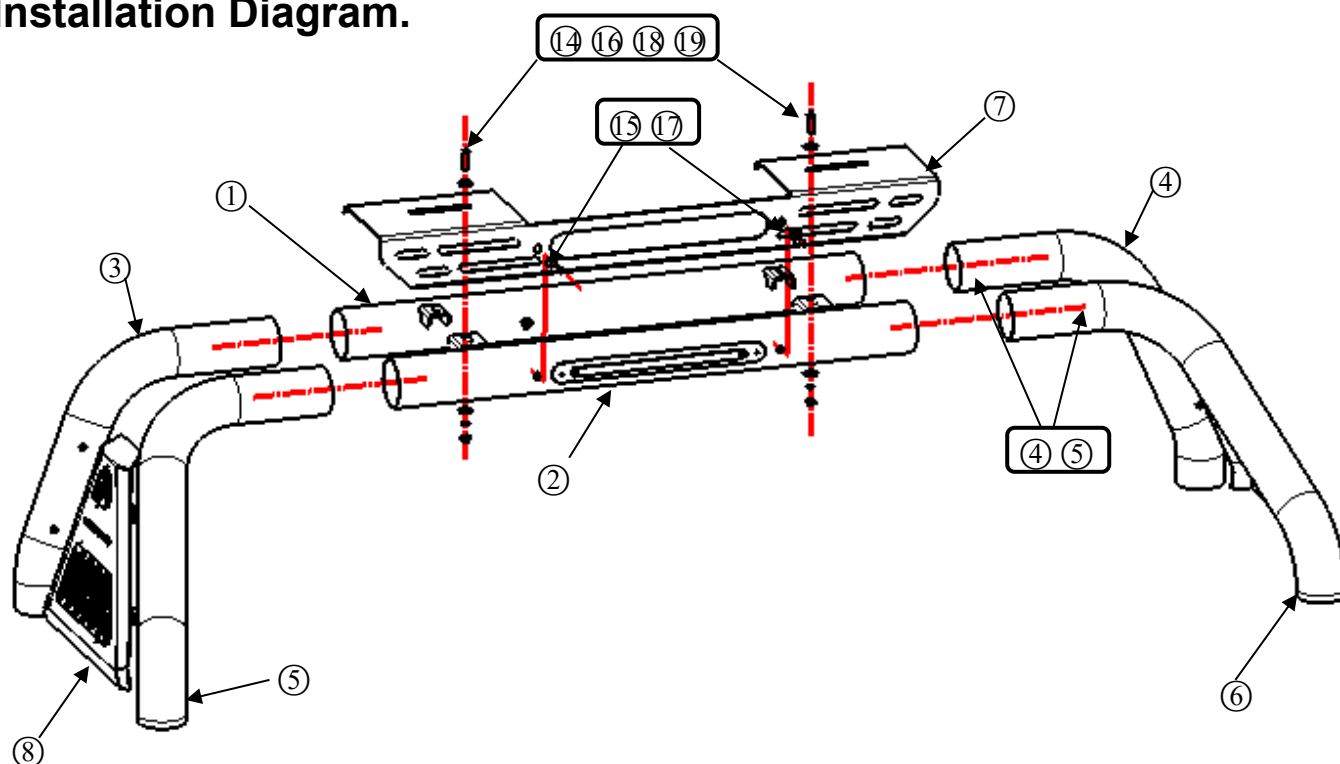


Step 1: Verify all parts are present.

Step 2: Put these parts in the corresponding positions according to the above installation diagram, assemble the tubes parts each other and ensure the roll bar can stand up. Install front middle tube ①, rear middle tube ② and middle decoration plate ⑦ with standard parts ⑮ ⑰ and ⑭ ⑯ ⑱. (Do not lock tighten standard parts to provide sufficient adjustment space for subsequent installation)



Step 3: Assemble left decoration plate ⑧ and right decoration plate ⑨ with standard parts ⑬ ⑮ ⑰, the standard parts can be pre-tightened (During installation if you find the place is not enough, can adjust the gap size of the middle tube position in Step 2).

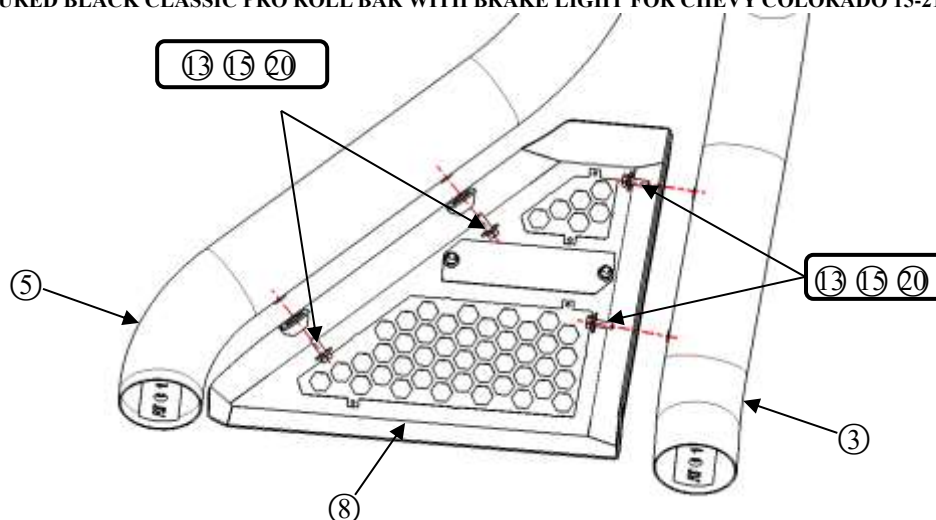


Step 4: After the preceding components are preinstalled, connect the side tube and middle tube with standard part (21). (To adjust tubes to appropriate position, lock tighten all accessories except standard part (21)) PS: These adjustable holes can control the width of roll bar.

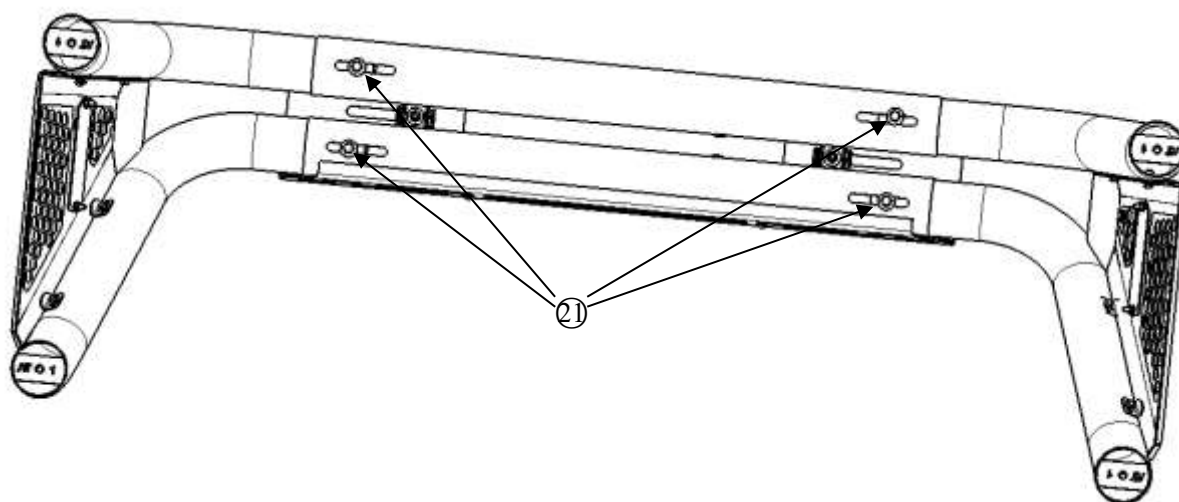


Step 5: Put mounting base(L/R) on both sides of the truck rail, to adjust the mounting base on suitable position, then mark down the installation holes for drilling(Ps: To make sure the drilling holes can go through with M10 standard parts). Install the mounting base on truck rail with standard parts (31) (32) (33) (34), as the following picture shown.

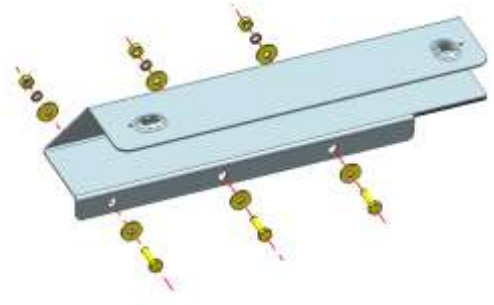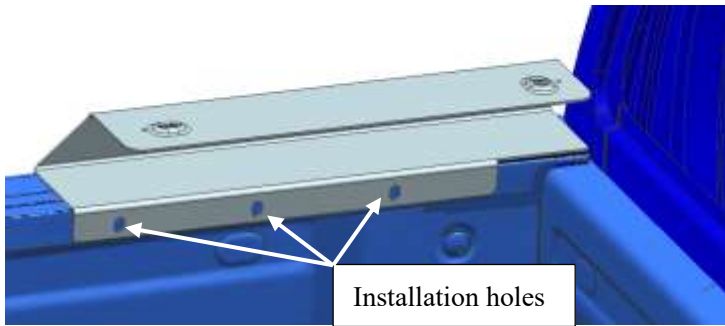


Step 6: Install the roll bar, mounting base and roll bar gum covers with standard part ③⑤

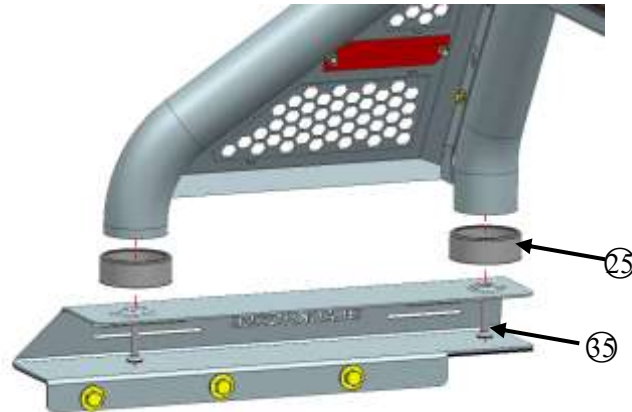


Step 7: Install the front and rear end cover with standard part ③⑥, lock tighten all standard parts.

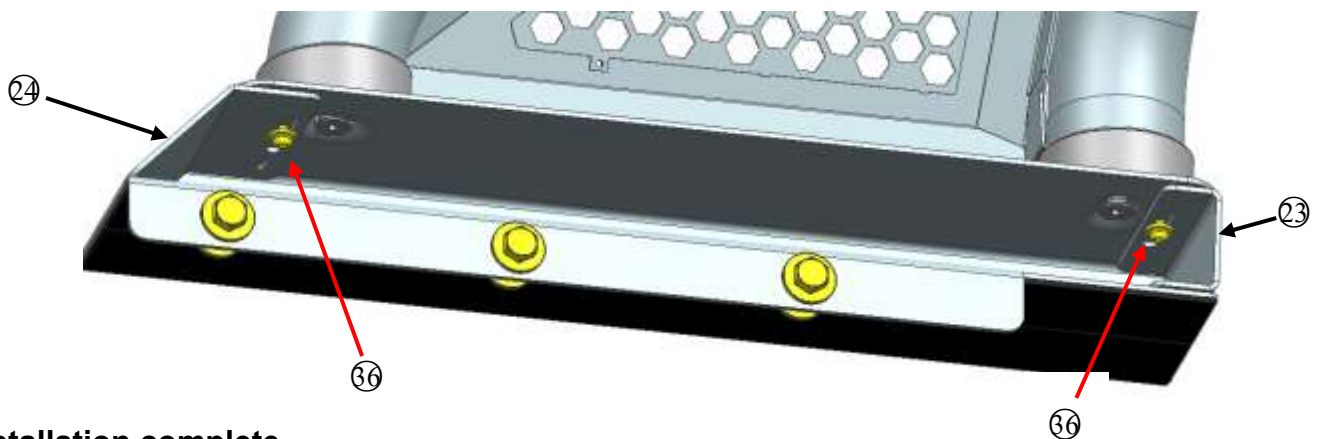

Installation complete

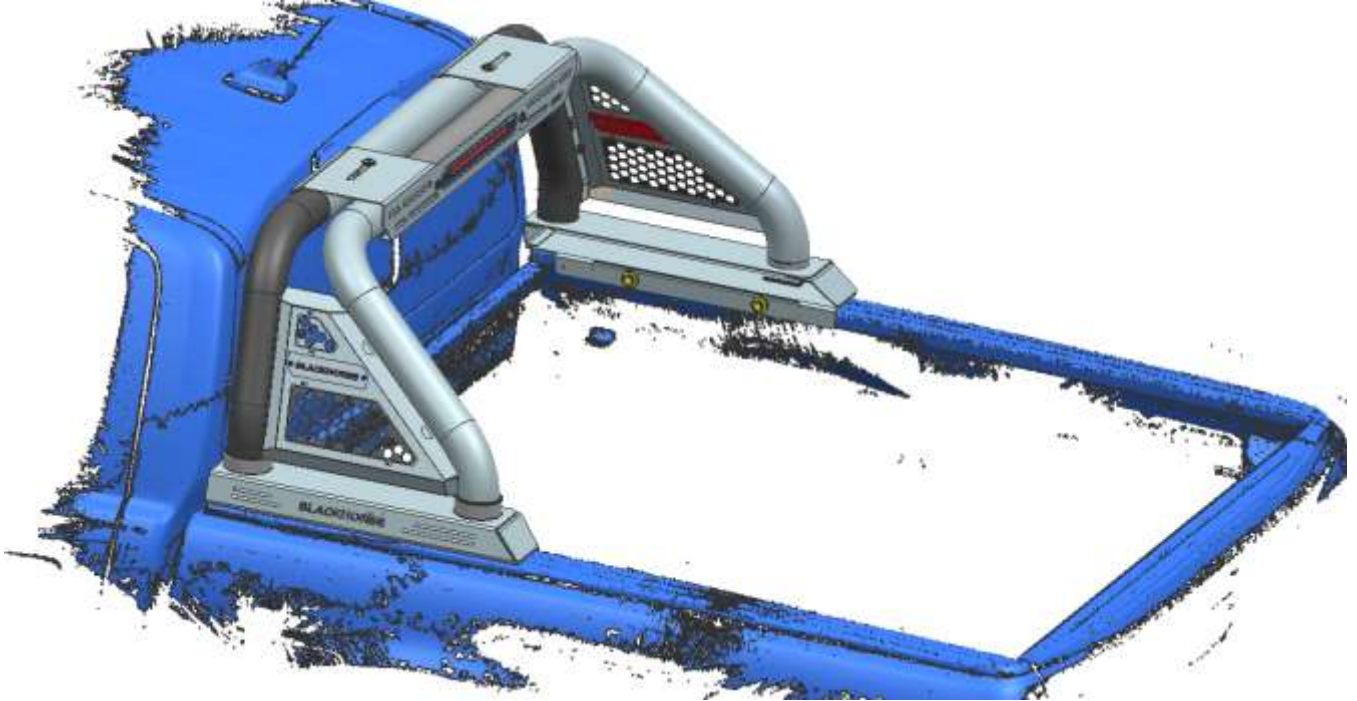

Note: When compatible with hard tri-fold tonneau cover, stick the black adhesive tape ②6 ②7 ②8 on truck rail to cover gap between cover and truck rail.

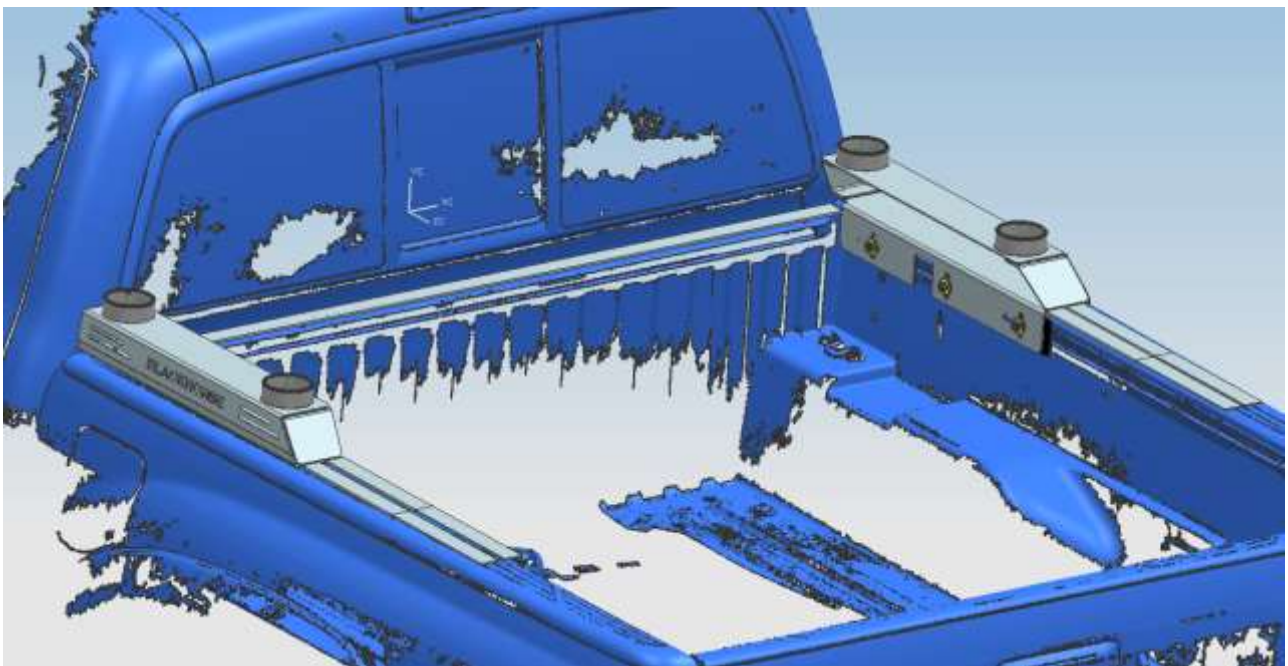

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.