

MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA TACOMA 15-21 (COMPATIBLE WITH TONNEAU
COVER BASE) TEXTURED BLACK



INSTALLATION INSTRUCTIONS

**MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA
TACOMA 15-21 (COMPATIBLE WITH TONNEAU COVER BASE)**

TEXTURED BLACK

PART # RBT6















Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.




















Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.



Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front middle tube	②	1	 Rear middle tube
③	1	 Front side tube (L)	④	1	 Front side tube (R)
⑤	1	 Rear side tube (L)	⑥	1	 Rear side tube (R)
⑦	1	 Middle decoration plate	⑧	1	 Decoration plate (L)
⑨	1	 Decoration plate (R)	⑩	1	 Allen wrench S=4
⑪	1	 Allen wrench S=5	⑫	1	 Allen wrench S=6
⑬	8		⑭	2	

MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA TACOMA 15-21 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK


		Lock washer D6			Lock washer D8
⑮	10	 Flat washer D6 (6x18x1.6mm)	⑯	4	 Flat washer D8 (8x24x2mm)
⑰	2	 Hex bolts M6_20	⑱	2	 Hex bolts M8_30
⑲	2	 Hex nut M8	⑳	8	 Hex bolt M6_20
㉑	4	 Assembly bolt (M8_25)			
TACOMA MOUNTING BASE:					
㉒	2	 Mounting base (L/R)	㉔	2	 Front end cover (L/R)
㉖	2	 Rear end cover (L/R)	㉘	4	 Roll bar gum cover
㉚	1	 Black adhesive tape 6 (1600x35x5mm)	㉜	4	 Black adhesive tape 4 (250x35x5mm)
㉞	4	 Black adhesive tape 5 (250x35x3mm)	㉠	1	 Allen wrench S=4
㉢	1	 Allen wrench S=6	㉤	6	 Flat washer D8 (8x28x3mm)
㉦	6	 Hex lock nut M8_35	㉨	4	 Hex bolts M10_45

MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA TACOMA 15-21 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK

33	4	 <p>Assembly bolt M6_20</p>	34	6	 <p>T blot M8_25</p>
----	---	--	----	---	---

Installation Steps

Installation Diagram:

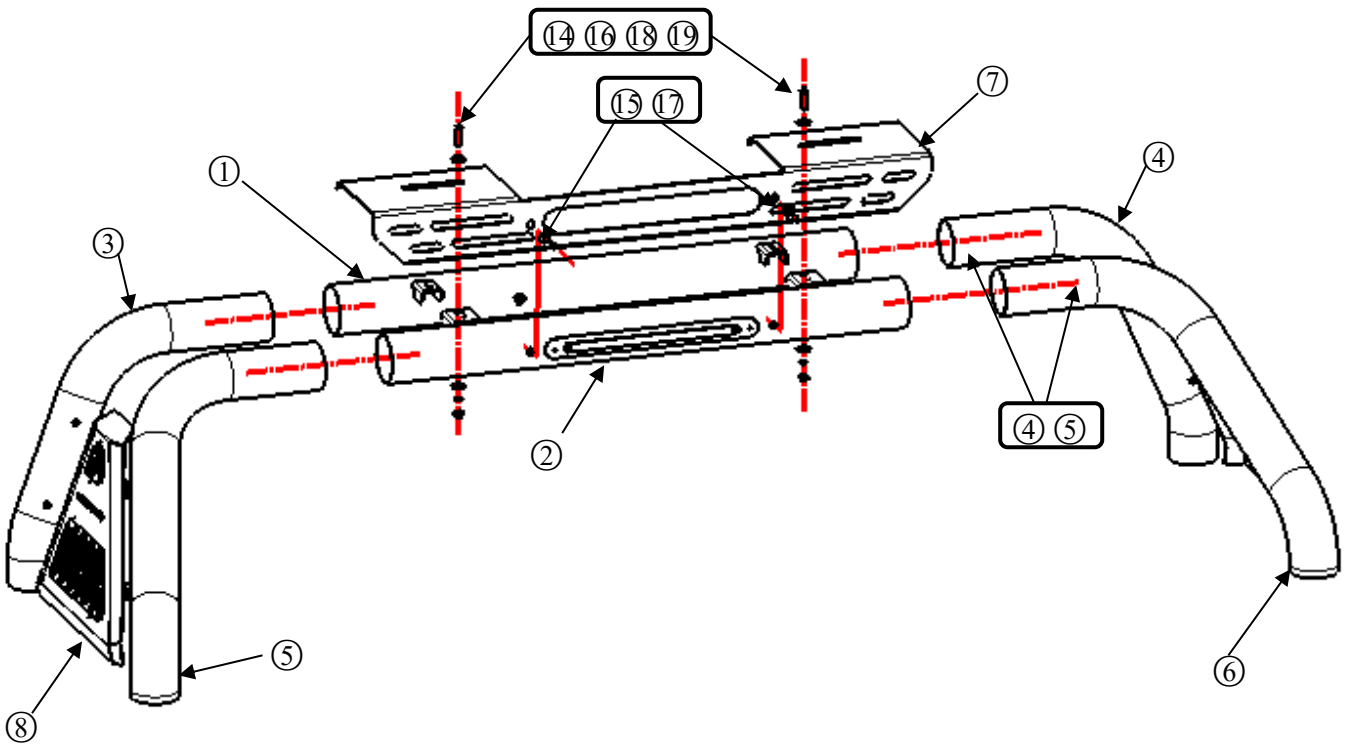


Step 1: Verify all parts are present.

Step 2: Put these parts in the corresponding positions according to the above installation diagram, assemble the tubes parts each other and ensure the roll bar can stand up. Install front middle tube ①, rear middle tube ② and middle decoration plate ⑦ with standard parts ⑮ ⑰ and ⑭ ⑯ ⑰. (Do not tighten standard parts to provide sufficient adjustment space for subsequent installation)


Step 3: Assemble left decoration plate ⑧ and right decoration plate ⑨ with standard parts ⑬ ⑮ ⑯, the standard parts can be pre-tightened (During installation if you find the place is not

MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA TACOMA 15-21 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK

enough, can adjust the gap size of the middle tube position in Step 2.


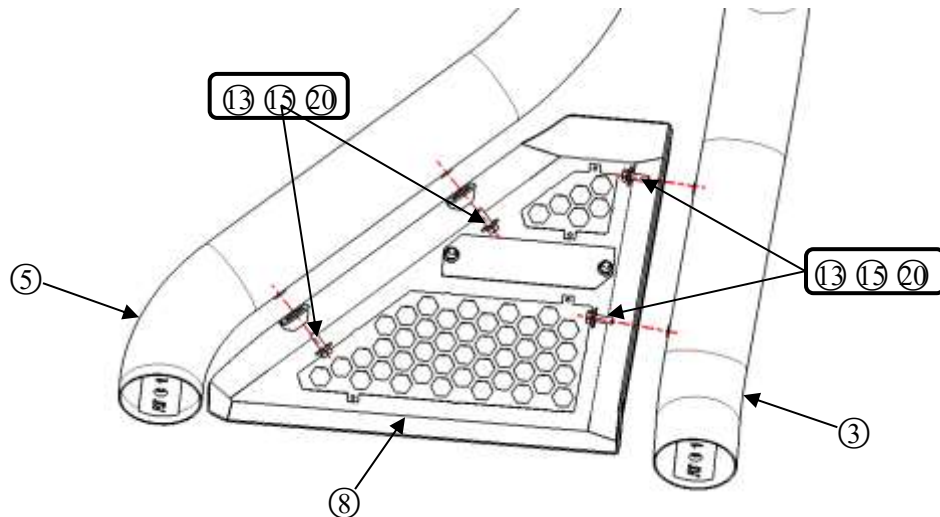


Step 4: After the preceding components are preinstalled, connect the side tube and middle tube with standard part 21. (To adjust tubes to appropriate position, lock tighten all accessories except standard part 21) PS: These adjustable holes can control the width of roll bar.

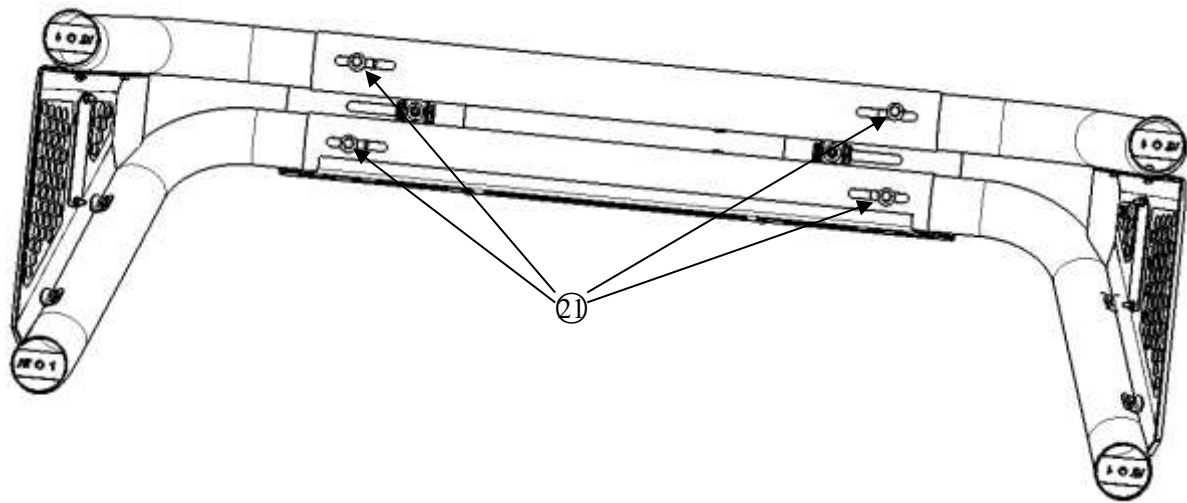


Step 5: Slip each 3 pieces T-bolts 34 into both sides of utility side trail as the following picture shown, and put mounting base on the truck rail and adjust base to appropriate position, install them with standard parts 30 31.


MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA TACOMA 15-21 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK

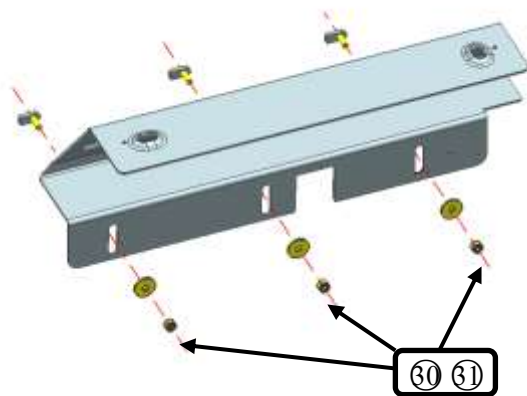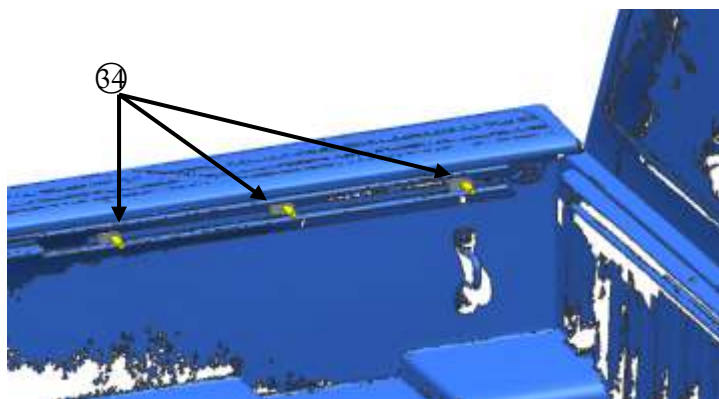

Step 6: Put the gum covers on each legs of roll bar, then install roll bar on mounting base with standard part 32. To adjust roll bra to appropriate position and lock tighten all standard parts.

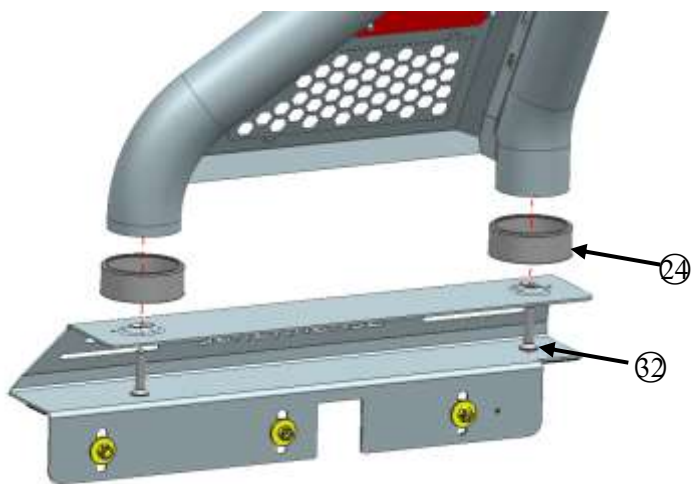


Step 7: Install the front and rear end cover with standard part 23.

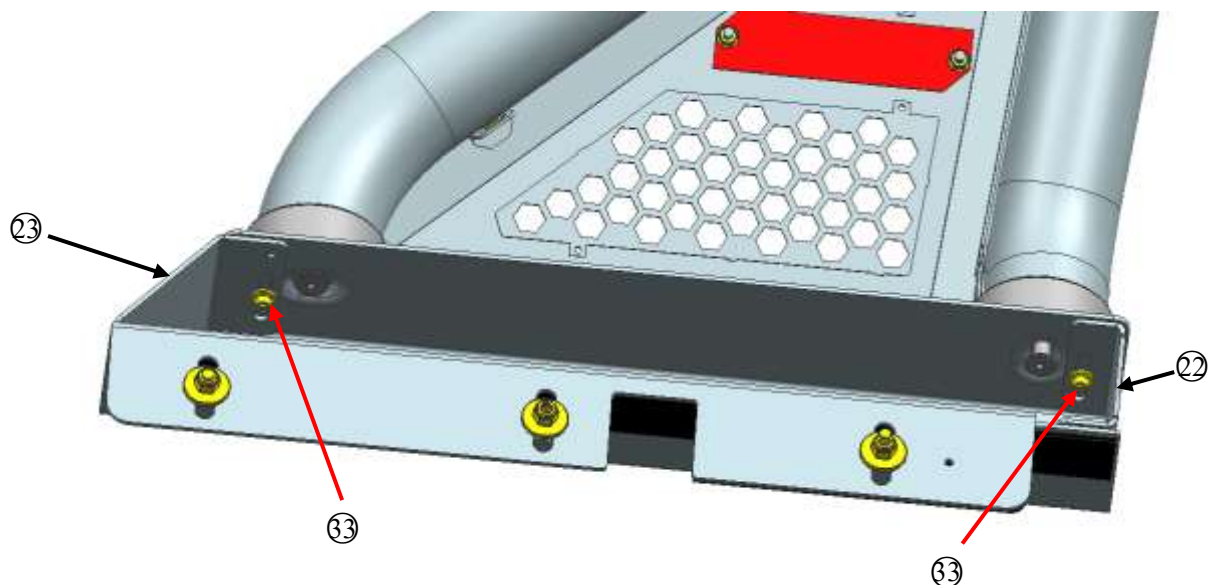


Installation complete

MOUNTING BASE OF CLASSIC PRO ROLL BAR FOR TOYOTA TACOMA 15-21 (COMPATIBLE WITH TONNEAU COVER BASE) TEXTURED BLACK

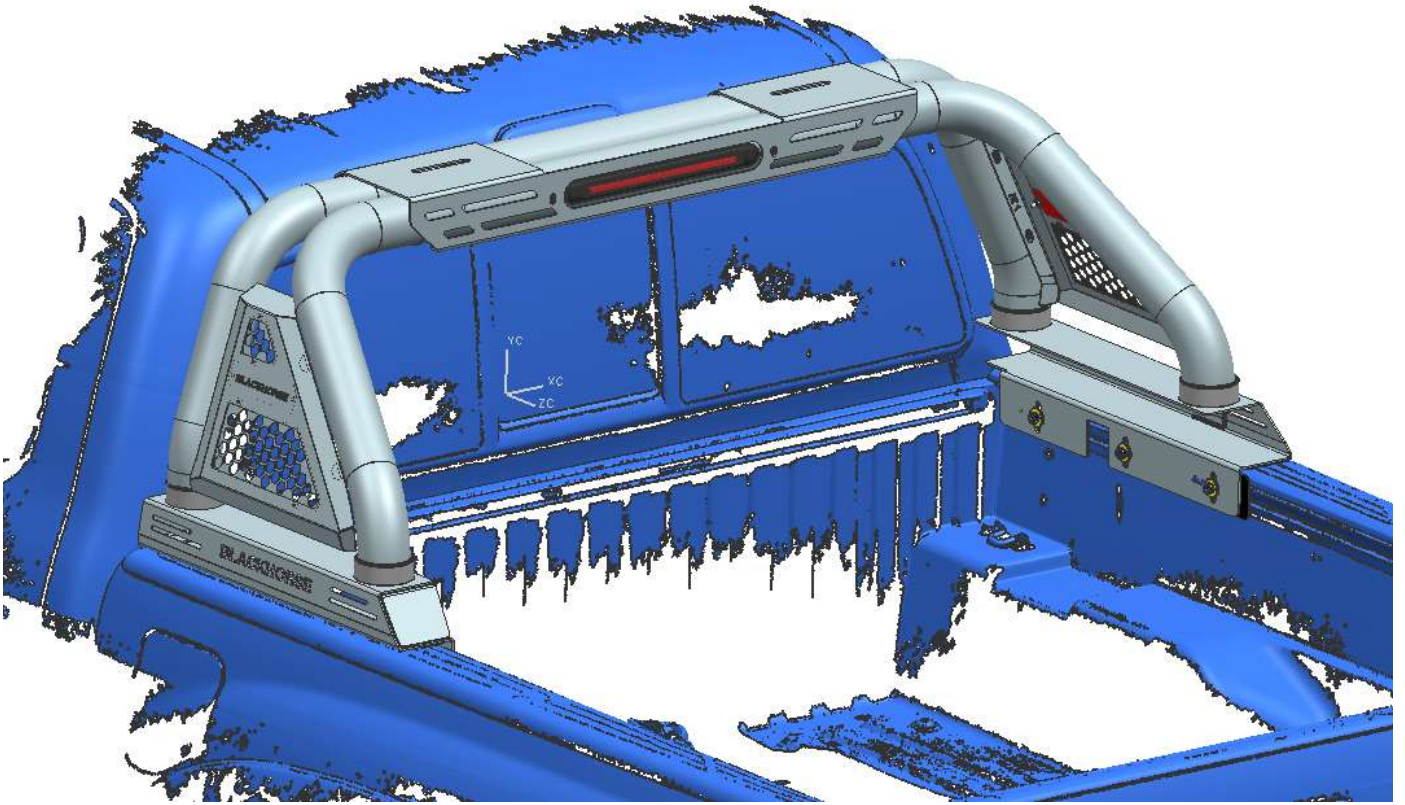

Note: When compatible with hard tri-fold tonneau cover, stick the black adhesive tape ②⑤ ②⑥ ②⑦ on truck rail to cover gap between cover and truck rail.

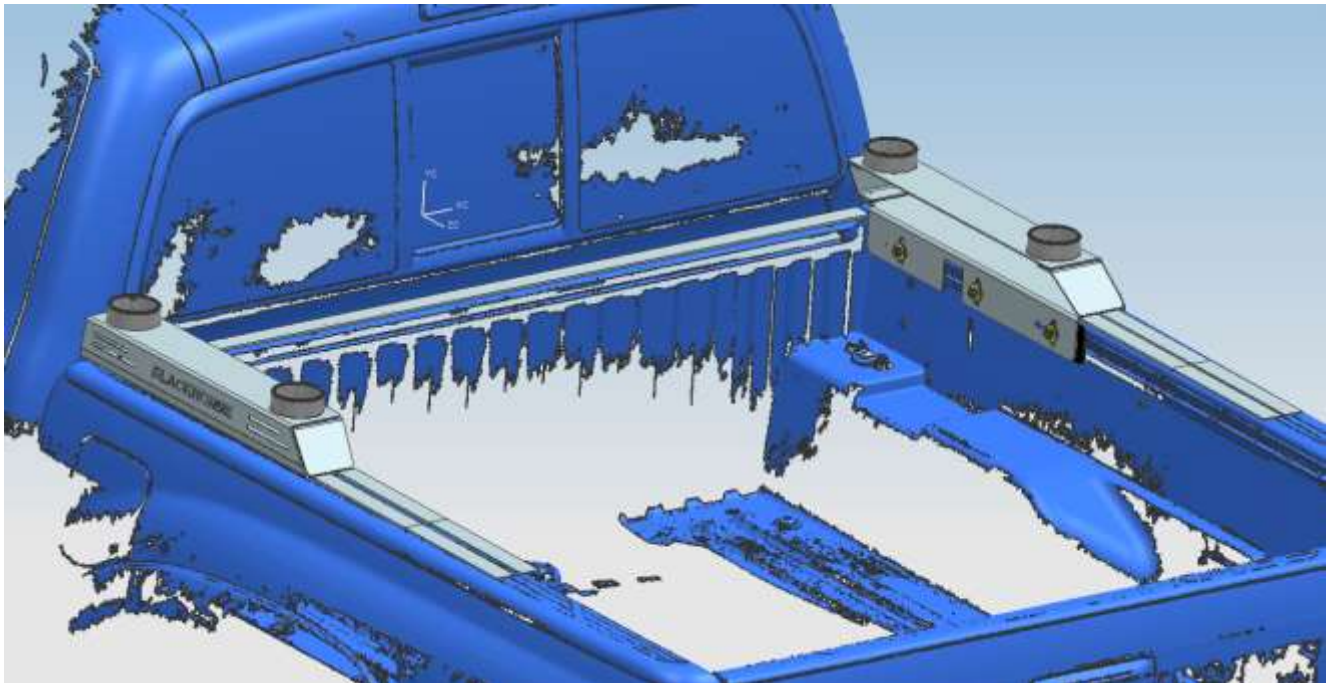

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.