

UNIVERSAL VIGOR ROLL BAR FOR 15-20 CHEVROLET COLORADO/15-20 TOYOTA TACOMA/ 19-20 FORD
RANGER /05-20 NISSAN FRONTIER (WITH ADJUSTABLE SQUARE LIGHT)



INSTALLATION INSTRUCTIONS

UNIVERSAL VIGOR ROLL BAR FOR 15-20 CHEVROLET

COLORADO/15-20 TOYOTA TACOMA/ 19-20 FORD RANGER /05-20

NISSAN FRONTIER (WITH ADJUSTABLE SQUARE LIGHT)

PART # RBV01B

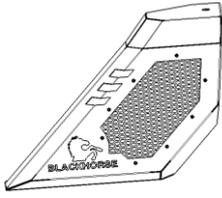
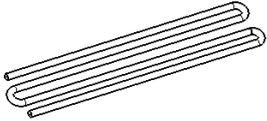

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Left installation part	②	1	 Right installation part
③	1	 Connection plate	④	2	 LED light
⑤	1	 LED light line	⑥	6	 Button head allen bolts M8_25
⑦	6	 Hex nut M8	⑧	6	 Spring washer D8
⑨	10	 Flat washer D8	⑩		

Installation Steps


Step1:

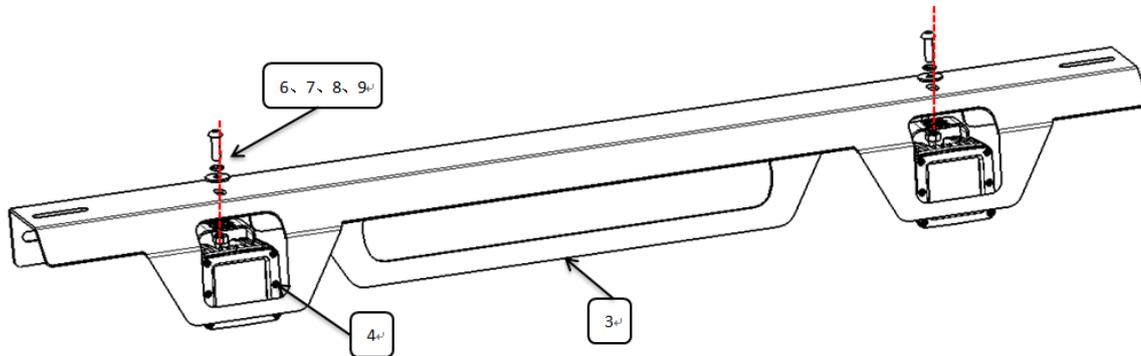Install ③ and ④ with ⑥⑦⑧⑨ as below diagram shows.



Step2:

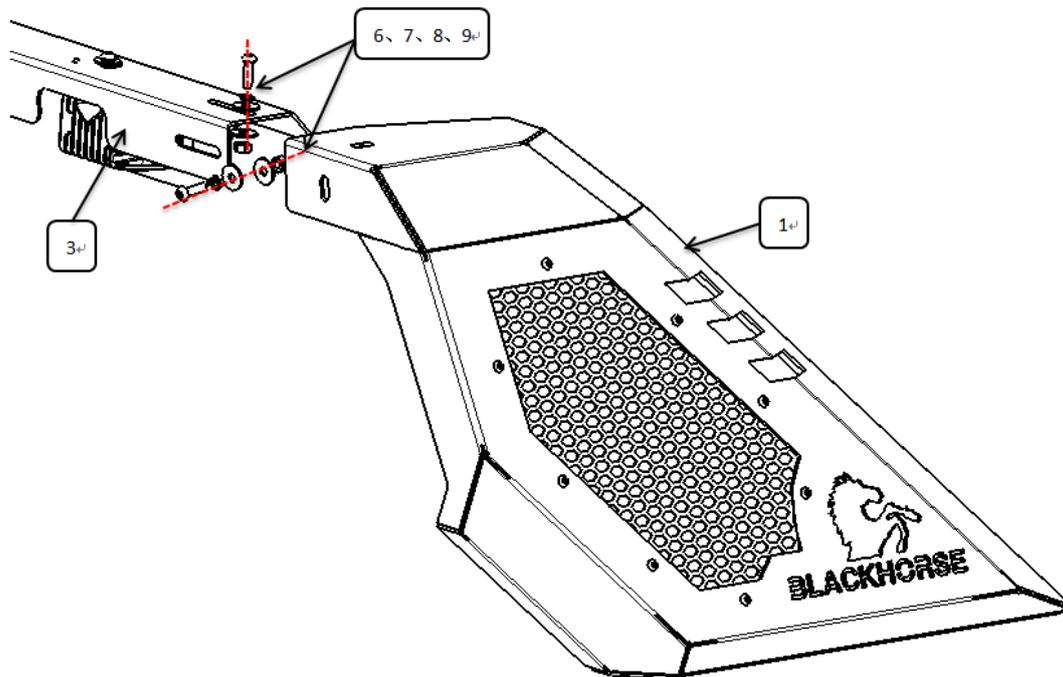Install ①②③ and ④ with ⑥⑦⑧⑨ as below diagram shows.



Step 3: Test and make sure that the roll bar is steadily fixed, fully tighten all hardware.

Step 4: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.