



TEL: 1-866-XANATOS

# **INSTALLATION INSTRUCTIONS**

**ARMOUR II ROLL BAR WITH BASKET FOR JEEP GLADIATOR 19-23**

**PART # AR2-09BA3**

**PROTECTED BY ONE OR MORE PATENT**

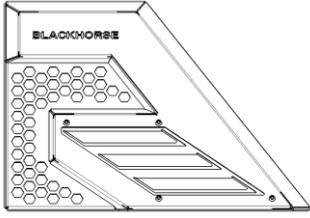
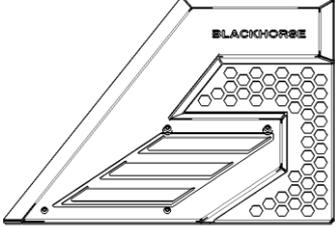
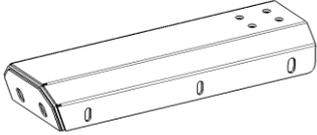
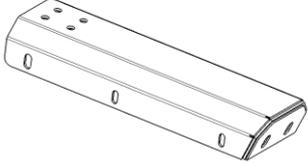
## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.






## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list


NO.	QTY	NAME	NO.	QTY	NAME
①	1	 SIDE PLATE (L)	②	1	 SIDE PLATE (R)
③	2	 CONNECTING PLATE 1	④	1	 CENTRE BAR
⑤	1	 CONNECTING PLATE 3 (L)	⑥	1	 CONNECTING PLATE 3 (R)
⑦	1	 MOUNTING BASE (L)	⑧	1	 MOUNTING BASE (R)
⑨	26	 FLANGE HEX NUT M8	⑩	32	 FLAT WASHER D8 (8x24x2mm)

ARMOUR II ROLL BAR WITH BASKET FOR JEEP GLADIATOR 19-23


<p>⑪</p>	<p>26</p>	 BUTTON HEAD ALLEN BOLT M8_30	<p>⑫</p>	<p>6</p>	 ASSEMBLY BOLT M6_20
<p>⑬</p>	<p>6</p>	 FLANGE HEX NUT M6	<p>⑭</p>	<p>6</p>	 FLAT WASHER D10 (10x30x2.5mm)
<p>⑮</p>	<p>6</p>	 LOCK WASHER D10	<p>⑯</p>	<p>6</p>	 HEX NUT M10
<p>⑰</p>	<p>6</p>	 LOCK WASHER D8	<p>⑱</p>	<p>6</p>	 BUTTON HEAD ALLEN BOLT M8_40
<p>⑲</p>	<p>6</p>	 T-BOLT 3-M10x35	<p>⑳</p>	<p>6</p>	 BLOCK PLATE
<p>㉑</p>	<p>1</p>	 ALLEN WRENCH S=4	<p>㉒</p>	<p>1</p>	 ALLEN WRENCH S=5
<p>㉓</p>	<p>4</p>	 BLACK ADHESIVE 1	<p>㉔</p>	<p>2</p>	 BLACK ADHESIVE 2
<p>㉕</p>	<p>2</p>	 BLACK ADHESIVE 3	<p>㉖</p>	<p>2</p>	 BLACK ADHESIVE 4
<p>㉗</p>	<p>2</p>	 BLACK ADHESIVE 5	<p>㉘</p>	<p>1</p>	 BLACK ADHESIVE 6

## Installation Steps

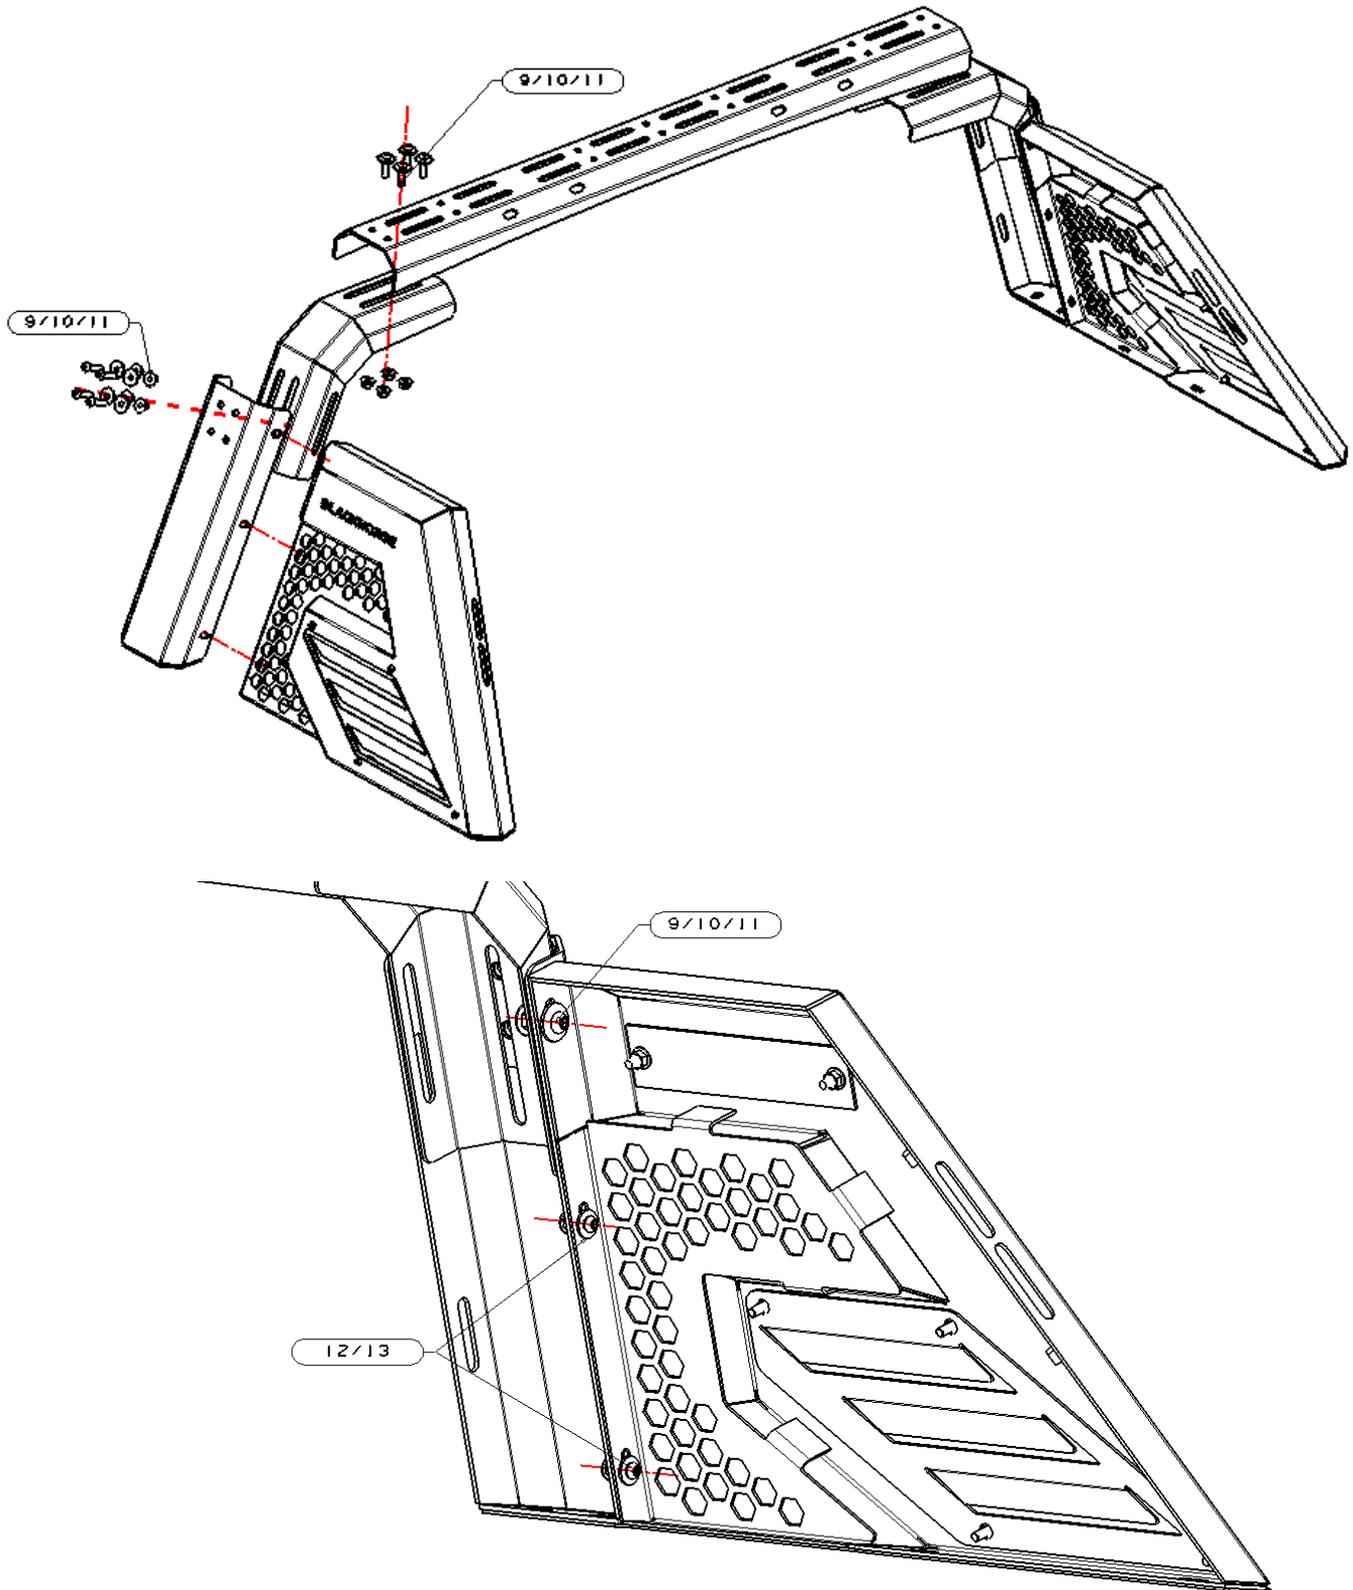
**Step1:** Assemble connecting plates 1&3&centre plates and side plates with standard parts ⑨ ⑩ ⑪ / ⑫ ⑬, as the following picture shown. Lock all the standard parts once adjust the position to be proper.



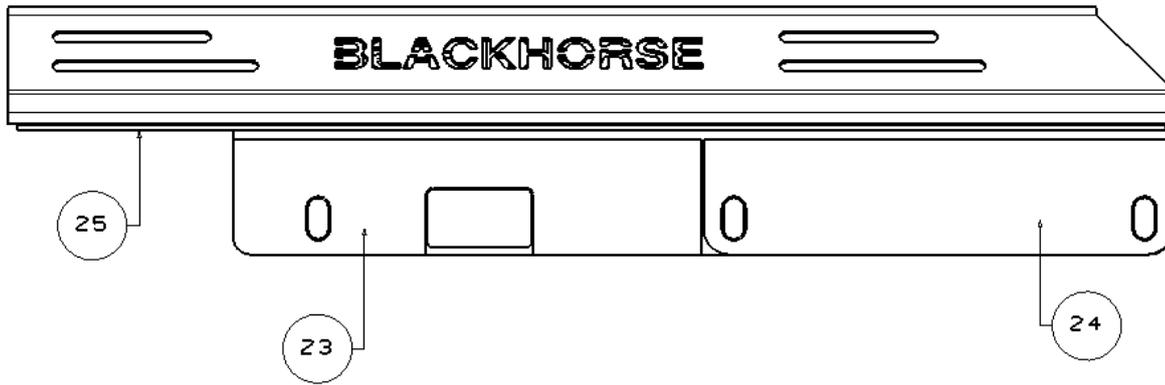
**Step2:** Stick the black adhesive (23) (24) (25) on the mounting bases (L&R)



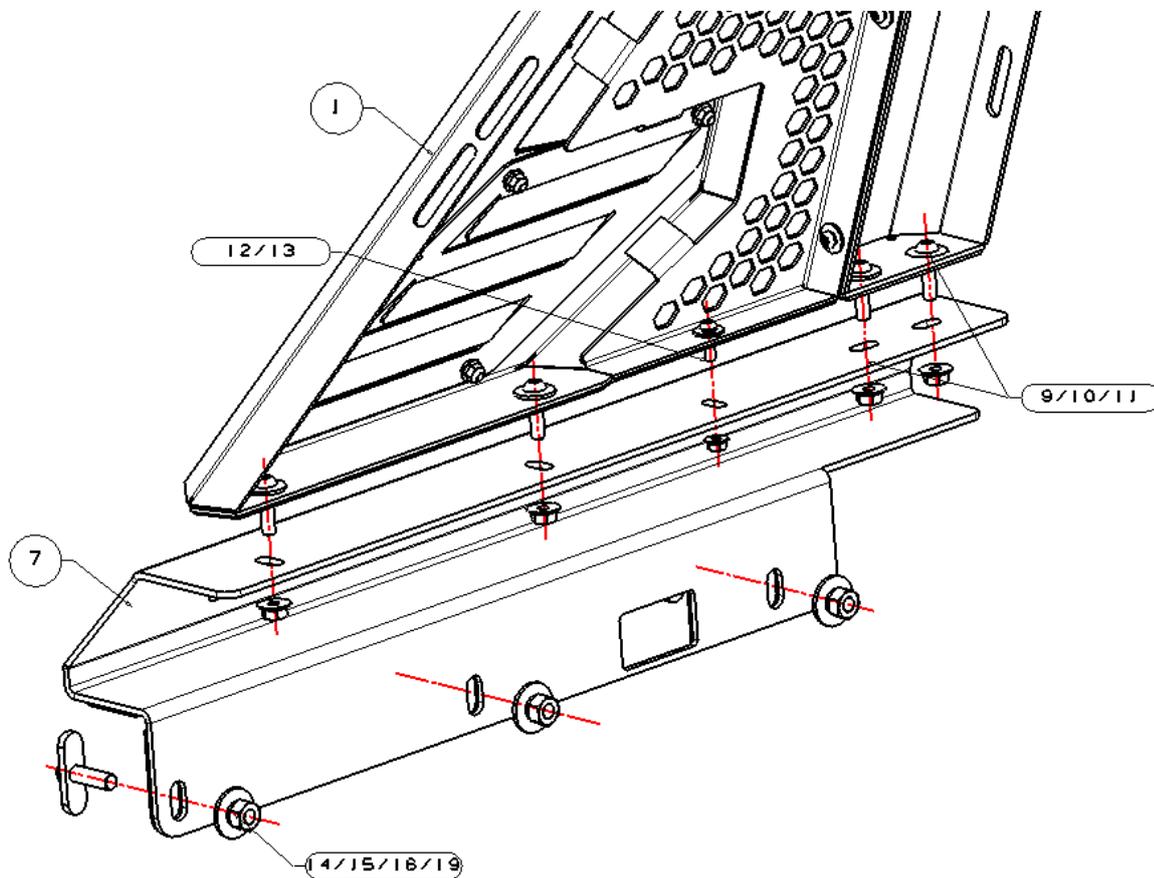**Step3:** Connect the roll bar with mounting base by the standard parts (9) (10) (11) / (12) (13).



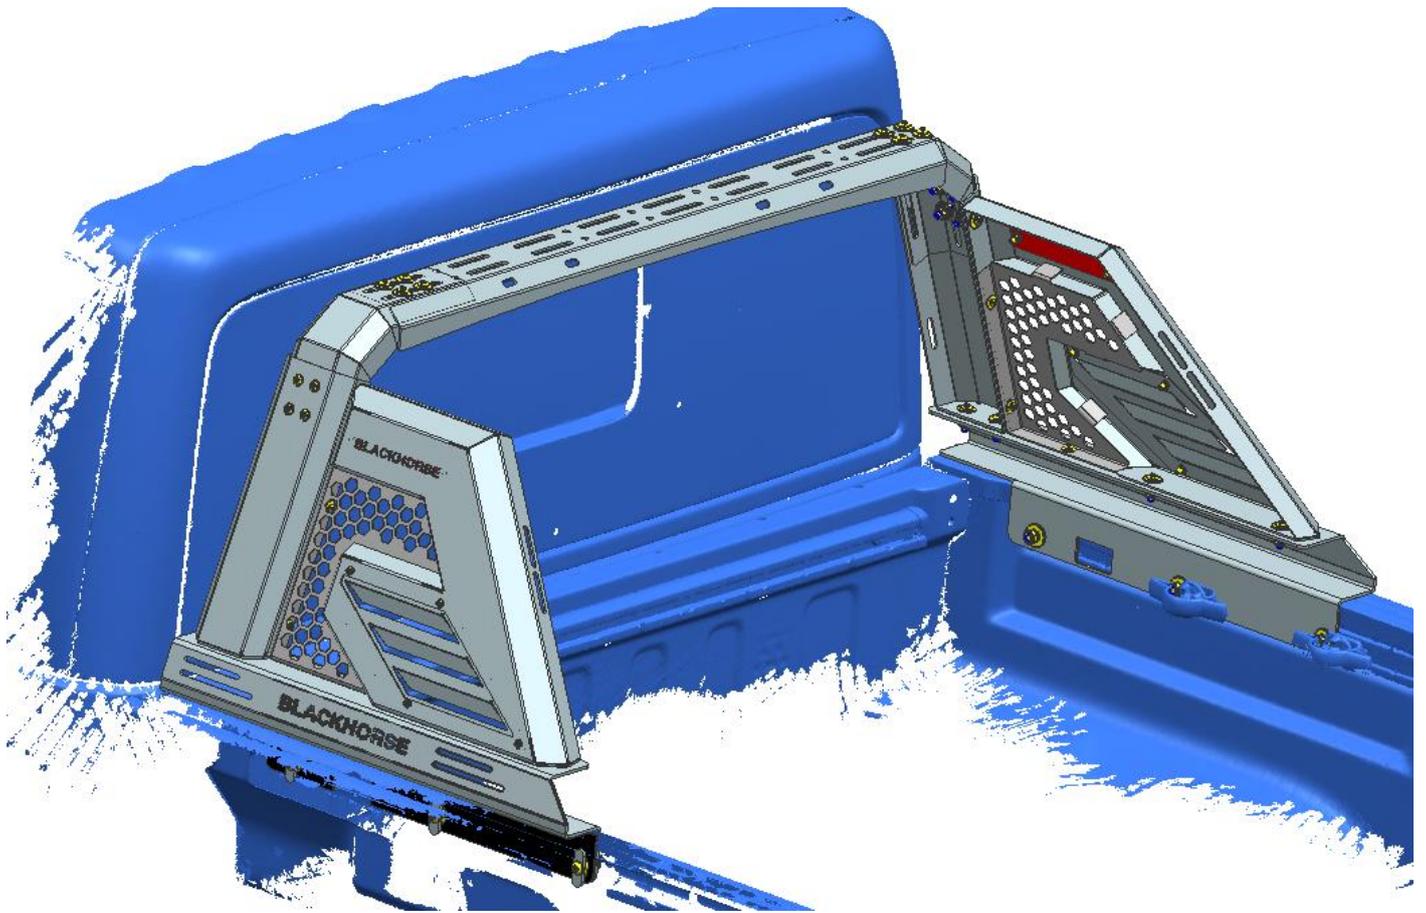**Step 4:** Install roll bar on truck rail by hard standard parts ⑭ ⑮ ⑯ ⑰



Installation completed and pick up all the tools.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.