



BLACK HORSE OFF ROAD®

Installation Instructions

Workhorse Auto Safe

Part# ASTS01 Fits: - TOYOTA SIENNA 2021-2023

Parts List:

□ **4 pcs** Self-tapping screws

□ **4 pcs** Acorn nuts

Hole Punch

Tools Needed:

Socket Wrench

Phillips Screwdriver

Installation:

- 1) Completely remove contents from your factory console including the factory “liner” at the bottom of your console. Reset your lock.
- 2) Remove the rear cover/panel at the top rear of the console. Remove by gently pulling forward on both sides.
- 3) Take the bottom, hinged support piece and place it in the bottom of the console. This piece is ambidextrous and can go in either way, just make sure that the front hinged piece is on top.
- 4) Next take the lid assembly and position it into the console (nose first, on an angle). Now as you start lifting the front of the assembly gently rotate it into proper position. The lid assembly should sit on top of the console light in the rear. Next open the lid assembly and reach down and lift the hinged support front section and fold it up to meet the lid assembly. The slots in the support line-up with the threaded studs on the lid assembly. Now take two of the flange nuts that came with your kit and finger tighten them on the threaded studs. Repeat this step for the rear of the hinged support and finger tighten the two flange nuts. Now reattach the cover/panel that was removed in step two.
- 5) With your free hand reach under the front of the lid assembly and make sure that the assembly is pulled up tight against the bottom lip of the console. Using a wrench in the other hand tighten down these nuts firmly. Now repeat this step for the back of the lid assembly.
- 6) Next notice on each side of the upper/inside edge of the lid assembly are threaded fitting, two on each side. Take the self-threading/cutting screws and finger tighten them in each fitting. Starting on the driver's side, start turning these screws. These screws are designed to cut their holes as you turn them.
VERY IMPORTANT!!!! DO NOT OVER TIGHTEN THESE SCREWS, ONCE THE SCREWS ARE FULLY DOWN STOP. OVER TIGHTENING WILL CAUSE DAMAGE TO THE FITTING. Repeat this step for the passenger side.
- 7) Put the factory “liner” back in the bottom of the console and the install is complete.

Fig A


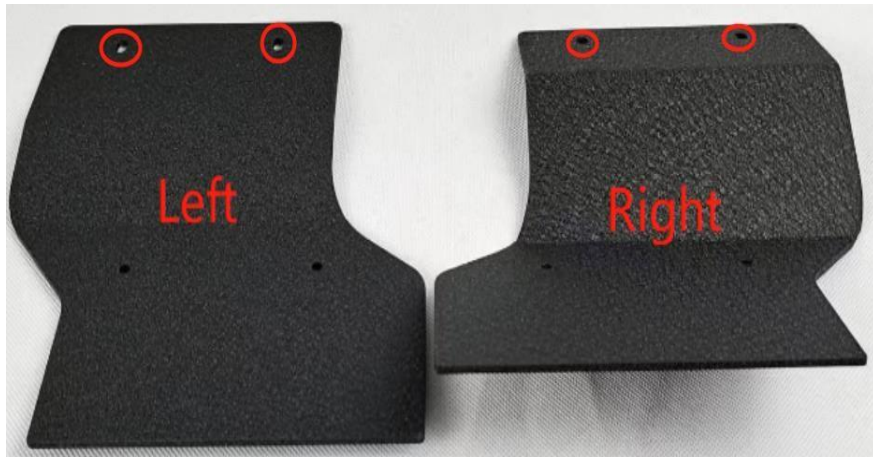


Fig B

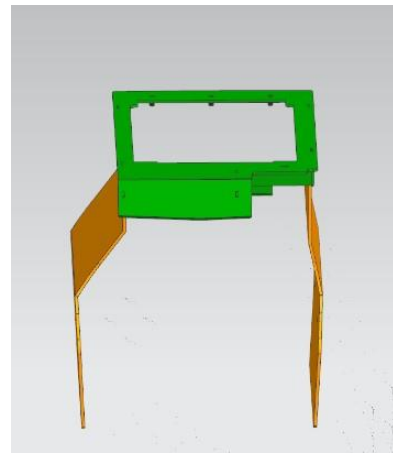

STEP 4 Install the acorn nuts on the exposed threads on the top panel and tighten down.

STEP 5 Use the hole punch to punch four pilot holes in the inner wall of the armrest box using the predrilled holes in the brackets as templates. Screw the 4 self-tapping screws into the side panels through into the 4 pre - drilled holes in the side panel. **DO NOT OVER-TIGHTEN,** **STEP 6** Re-insert the padding.

Black Horse Off Road 39 St. Mary's Place Freeport NY11520 USA Tel: +1 866 926 2867 Website: www.blackhorseoffroad.com

Installation Instructions Ref# INS – ASTS01



Setting the Combination

The factory preset combination is 0-0-0-0

Please keep the safe door open when changing the combination.

To change the combination, insert the coding pin provided into the hole in the side of the lock.



Remove the coding pin to lock in the combination. Test the lock operation before closing the safe door. Please note: The combination can only be changed again by setting the saved combination and inserting the pin. Please record the combination on the card provided.