

UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO 2015-FORD F150 2015) HIGH BASE WITH TONNEAU COVER AND LED BRAKE LIGHT



# **INSTALLATION INSTRUCTIONS**

**UNIVERSAL ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO  
2015-FORD F150 2015) HIGH BASE WITH TONNEAU COVER  
AND LED BRAKE LIGHT(MODULAR)**

**PART # RB20BK**

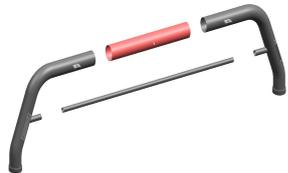
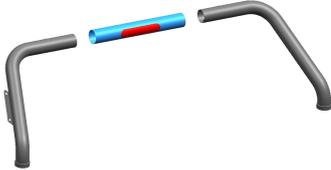
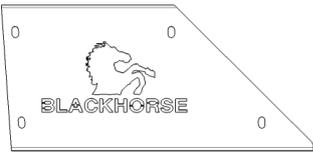
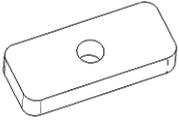
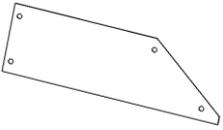
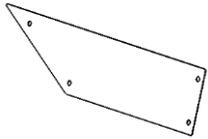
## Before Installation











- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Pipe 1	②	1	 Pipe 2
③	1	 Decoration plate-L	④	1	 Decoration plate-R
⑤	1	 Connecting plate (FOR LED LIGHT INSTALLATION)	⑥	2	 Block
⑦	2	 Red decoration plate	⑧	2	 Decoration plate backboard

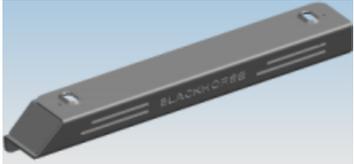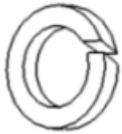⑨	4	 Gum cover	⑩	2	 Support Bracket
⑪	6	 Spring washer D8	⑫	2	 Hex nut M8
⑬	1	 Allen wrench S=8	⑭	1	 Allen wrench S=4
⑮	1	 Allen wrench S=5	⑯	2	 Button head allen bolts M8_40
⑰	12	 Flat washer D10	⑱	8	 Large washer D8
⑲	14	 Spring washer D6	⑳	22	 Large washer D6
㉑	14	 Button head allen bolts M6_20	㉒	6	 Hex nut M10_35
㉓	6	 Hex nut M10	㉔	8	 Hex nut M6
㉕	6	 Spring washer D10	㉖	4	 Flat head allen bolts M12_40
			㉘	4	 Button head allen bolts M8_20


## Installation Steps
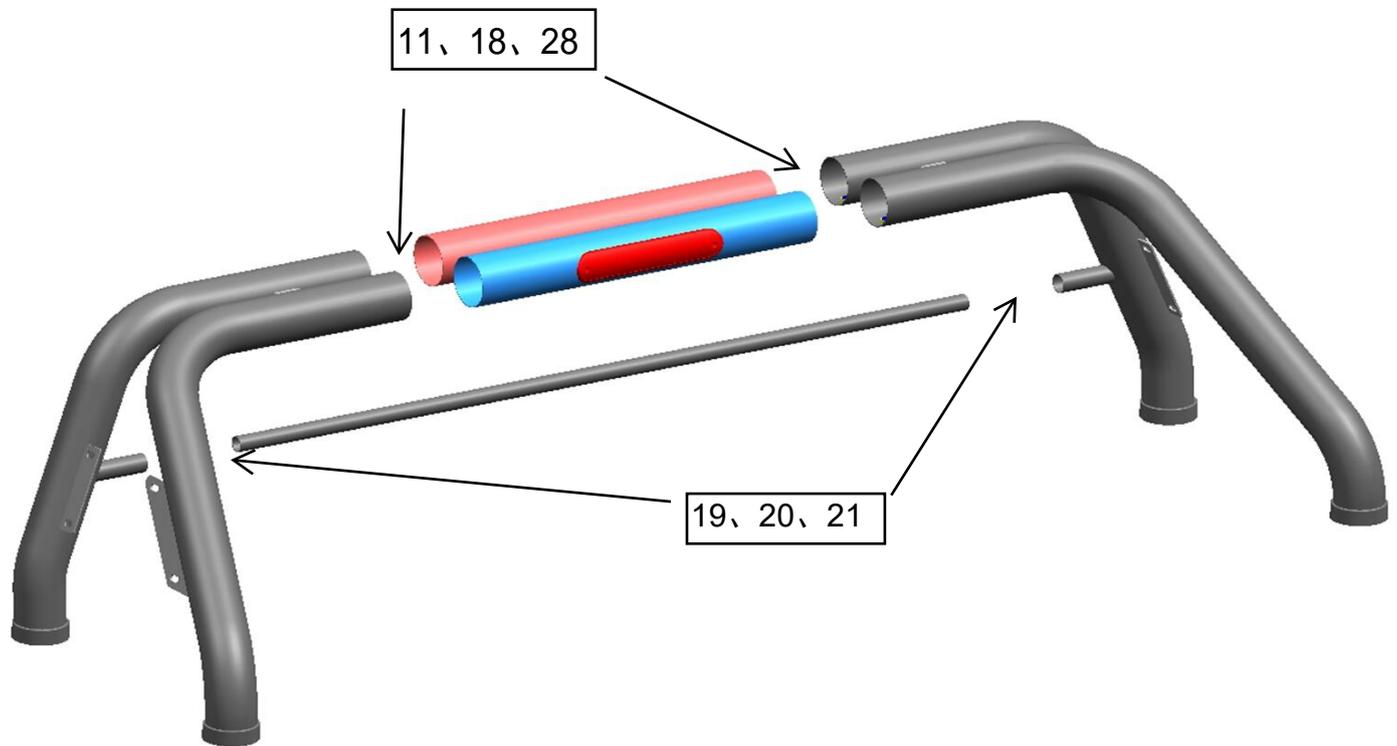
### Installation Figure:


Step 1: Using wrench 14、 15, install 1/2 main pipes together with parts 11/18/28, 19/20/21 as shown.



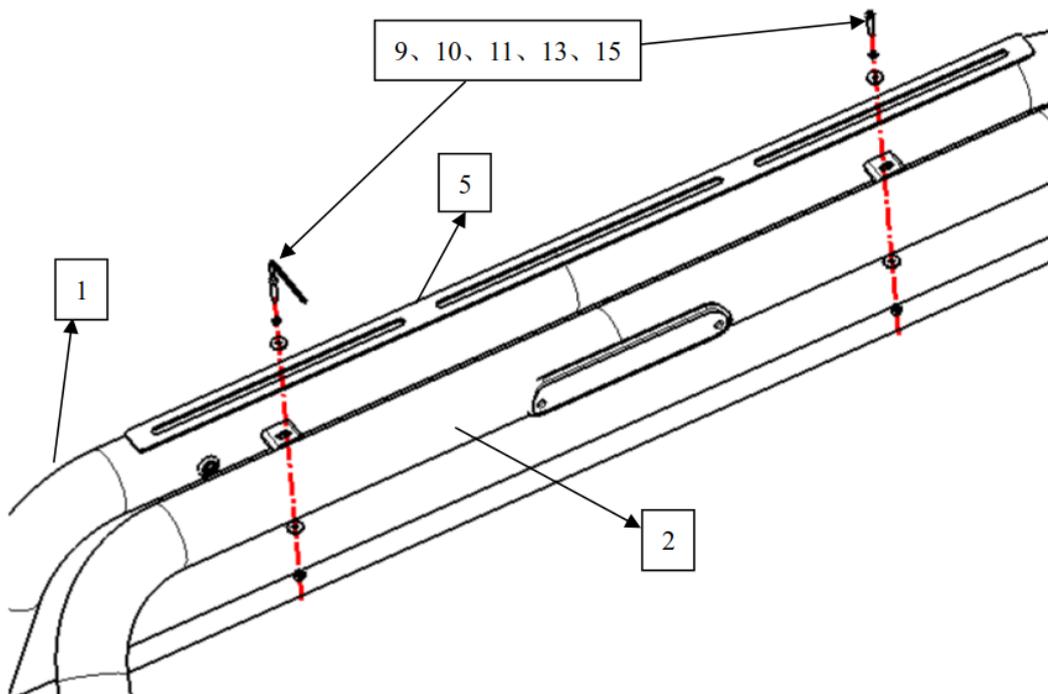
Step 2: Using wrench 15, install 1/2 main pipes and connecting plate 5 together with parts 9/10/11/13 as shown.



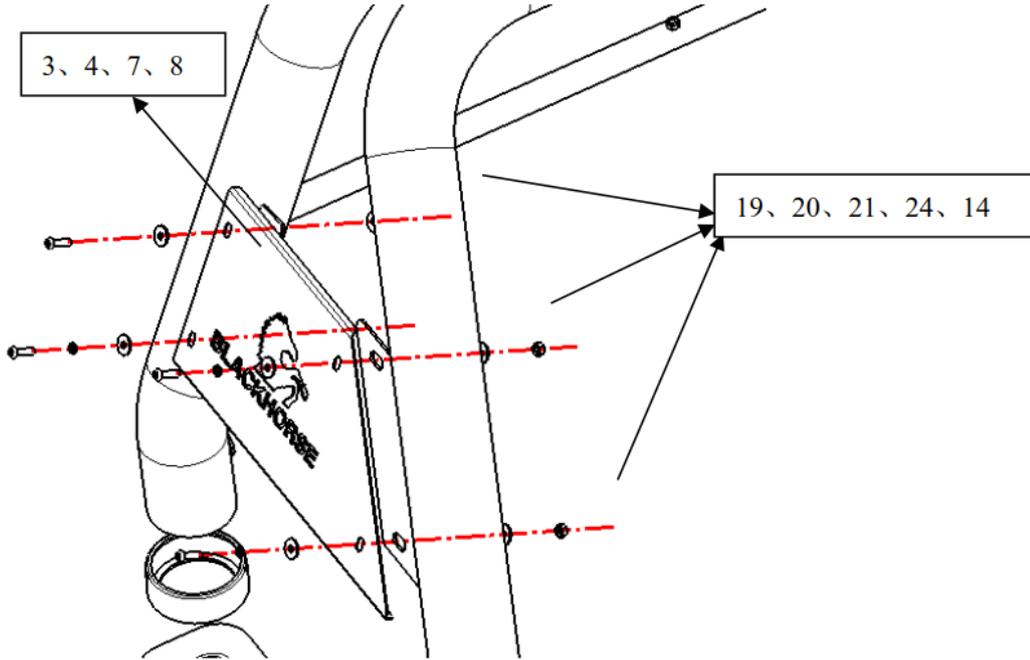
Step 3: Using wrench 14, install 3/4/7/8 decoration plate together with parts 19/20/21/24 as shown.



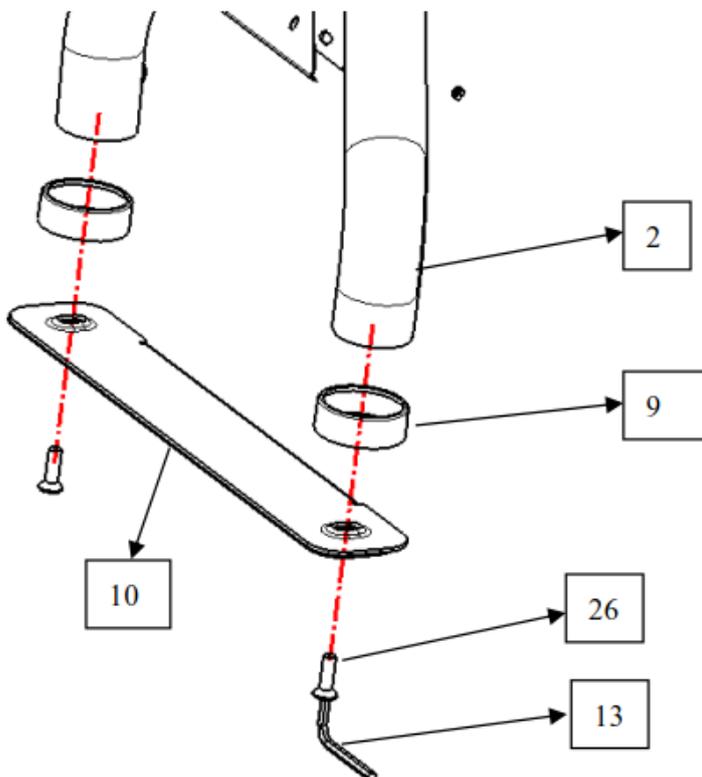
Step 4: Using wrench 13, install support plate 10 and gum cover 9 with part 26.



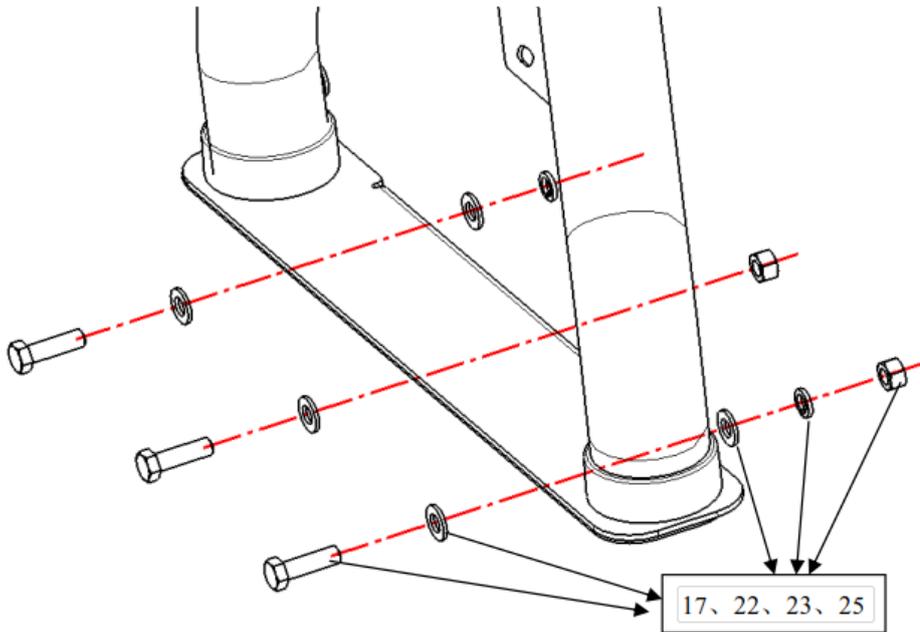Step 5: Fix the roll bar on the truck with parts 17/22/23/25. Drill holes on the truck if there are no installation holes. Test and make sure that the roll bar is steadily fixed, and then tighten all the hardware.



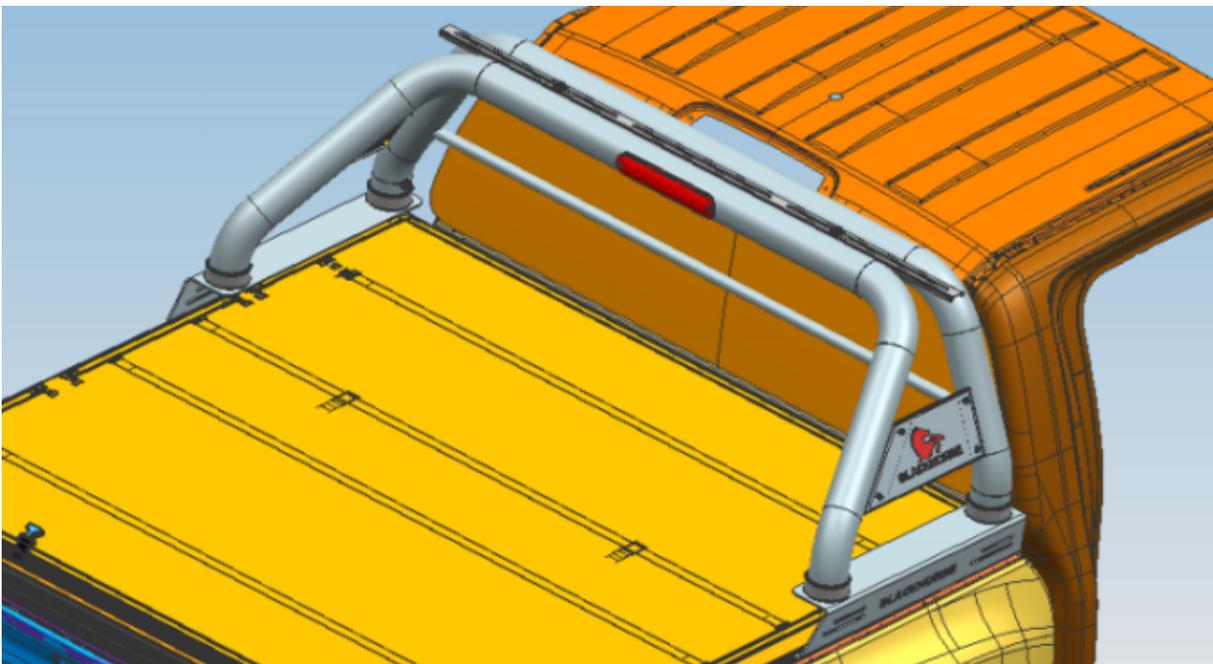Step 6: Installation is finished, pick up all tools.



**NOTE:**

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.