

TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

INTERCEPTOR TIRE CARRIER

PART # STC03

PROTECTED BY ONE OR MORE PATENT

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
1	1	Cross Bar	2	1	Universal Lug Plate
3	4	Connecting Plate	4	4	Lock Washer D12
3	4	Flat Washer D12 (12x37x3mm)	6	4	Hex Bolt Assembly M8_25
7	4	Hex Bolt M12_45	8	8	Lock Washer D10
9	8	Rivet Nut M10_18	10	8	Hex Bolt M10_35
(1)	8	Flat Washer D10(10x30x2.5mm)			


Installation Steps

Installation Figure:

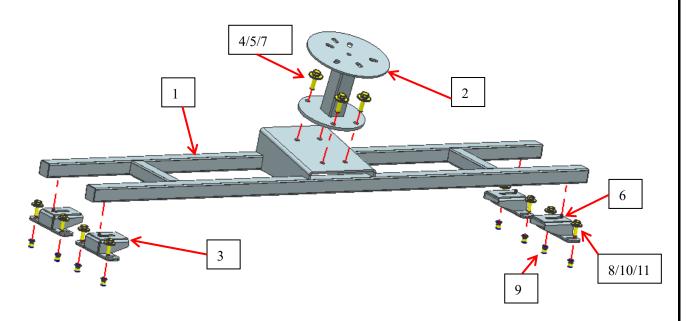


Step 1: First, check if all components are complete.


Step 2: Use Hex Bolt Assembly M8_25 (6) to install Connecting Plates (3) with Cross Bar (1)

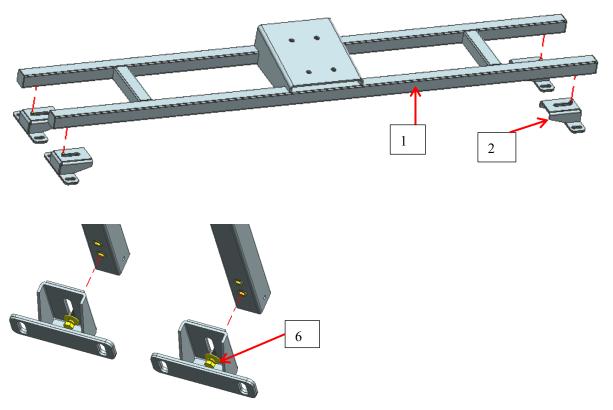


Step 3: Next, place the installed tire carrier assembly (1) in the appropriate position on the trunk, and mark the mounting points of the Connecting Plates (3). Drill a hole with a diameter of 13.8 on the trunk, then install the rivet nut M10_18 (9) onto the trunk.

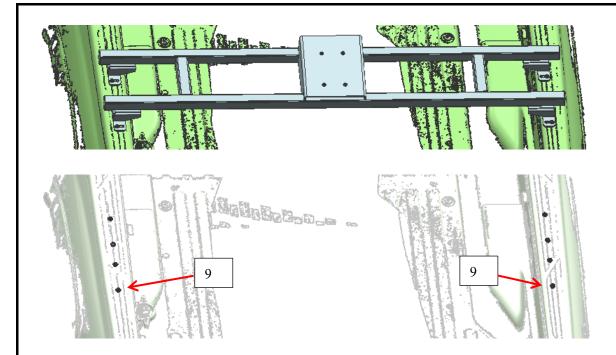


Step 4: Use standard parts (8/10/11) to install the tire carrier assembly (1) onto the trunk.

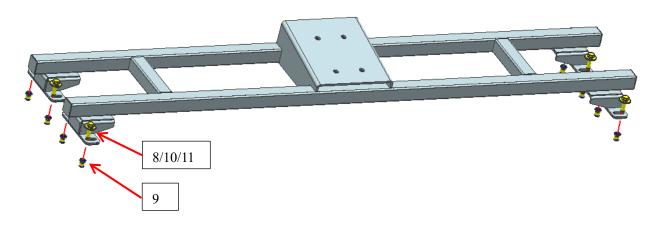

Step 5: Final use the standard parts (4/5/7) to install Universal Lug Plate (2) on tire carrier assembly (1).

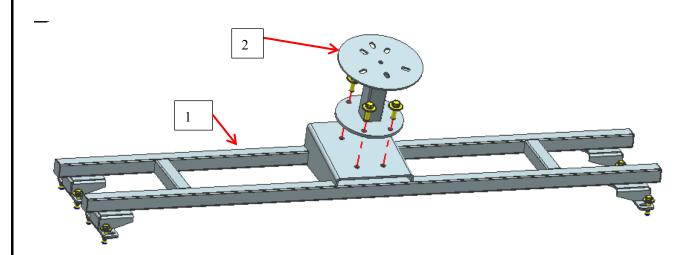

Step6: Finished installation.

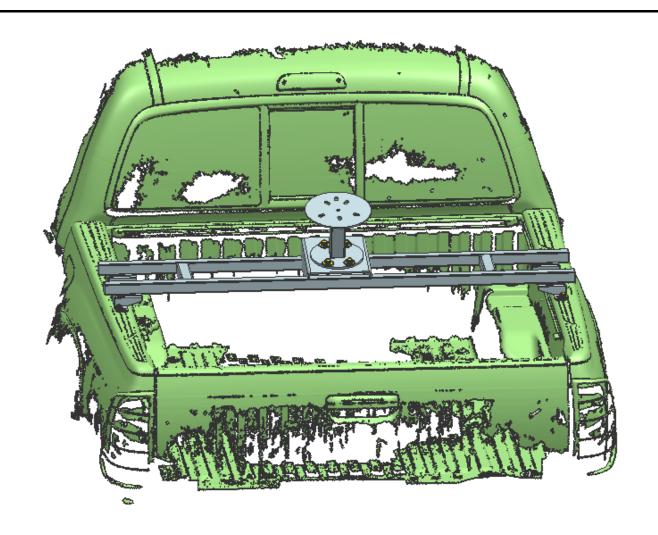

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.