

INSTALLATION INSTRUCTIONS

ASTT24

[2024 Toyota Tacoma]

Thank you for purchasing our products! Please contact us for any issues!

Accessories List:

- 4 PCS Self-Tapping Screws
- 4 PCS Acorn Nuts

Tools Needed:

- Phillips Screwdriver
- punching cone
- Wrench


Note 1 When you receive this product, we recommend that you should check the accessories before the installation.

Note 2 The password should be set with the **DOOR OPEN** to test the lock effectively without locking yourself out.

Safe Installation:

STEP 1 Clear out the contents of the center console for now, including the factory mat at the bottom of the armrest box.

STEP 2 Place the two side brackets into the armrest box, pay attention to the brackets, the right, and left brackets are different,

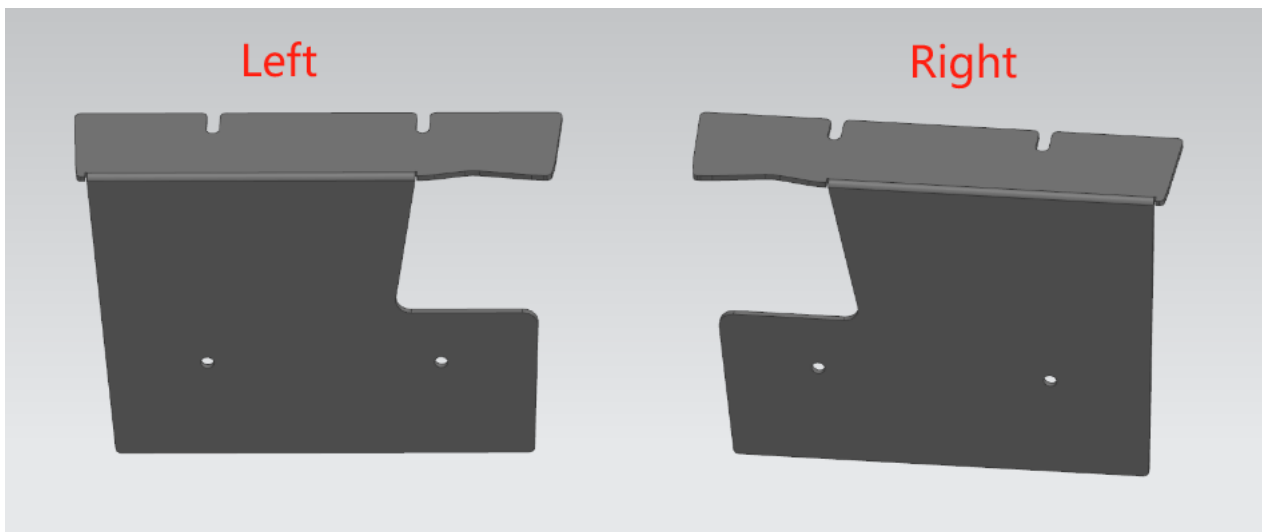

please see above Fig a.

STEP 3 Use the punching cone to poke holes through **reserved holes of the brackets into the wall of the armrest box**, and use a Phillips screwdriver to tighten the screws, **DO NOT OVER-TIGHTEN, over-tightening will result in armrest box damage.**

STEP 4 Put the top panel of the safe on the brackets, and make sure the studs of the top panel are inserted into the reserved holes.

STEP 5 Open the lid and hand the acorn nuts on the studs of the panel and use the wrench to tighten the acorn nuts, **DO NOT OVER-TIGHTEN.**

STEP 6 Enjoy your purchase.