



INSTALLATION INSTRUCTIONS
ROLL BAR TONNEAU COVER BASE FOR GM SILVERADO
2015-2019(5.5FT&6.5FT)
PART #RBB-GM




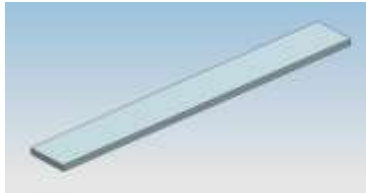
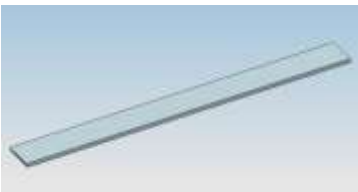
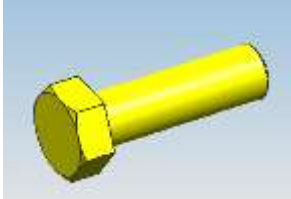
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.






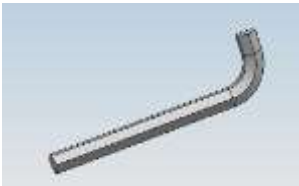
Care and Cleaning

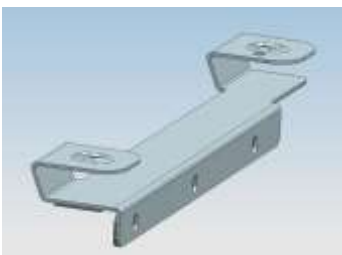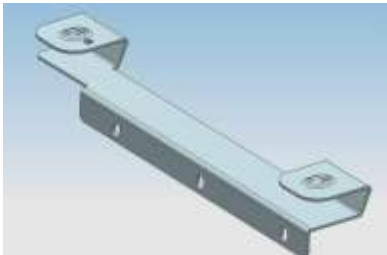- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Bracket-L	②	1	 Bracket-R
③	1	 Seal 3 (5mm*1800)	④	2	 Seal 4 (5mm*250)
⑤	2	 Seal 5 (3mm*250)	⑥	6	 Hex bolt M12*40

ROLL BAR TONNEAU COVER BASE FOR GM SILVERADO 2015-2019(5.5FT&6.5FT)


⑦	6		⑧	6	
		Large washer D12			Flat washer D12
⑨	6		⑩	6	
		Spring washer D12			Hex nut M12
⑪	4		⑫	1	
		Flat head allen bolts M12*40			Allen wrench S=8

Installation Steps

FIG.1

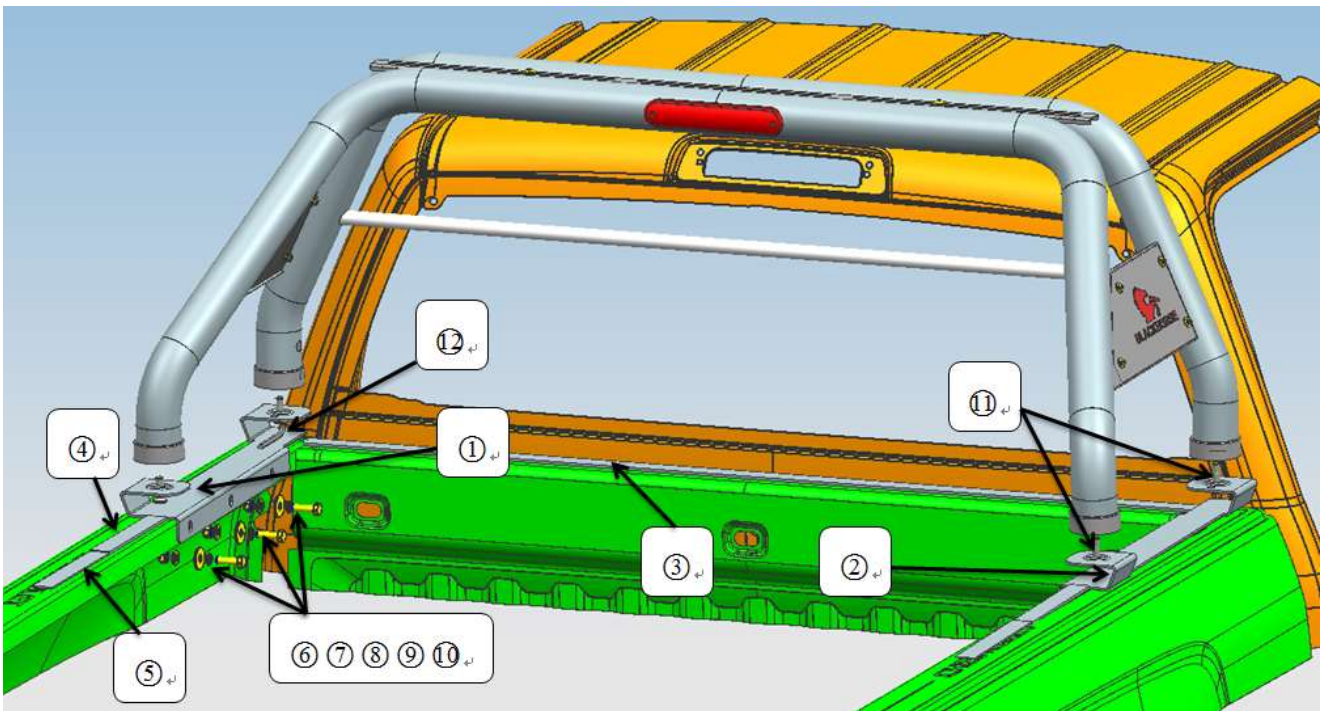

Installed as below show:

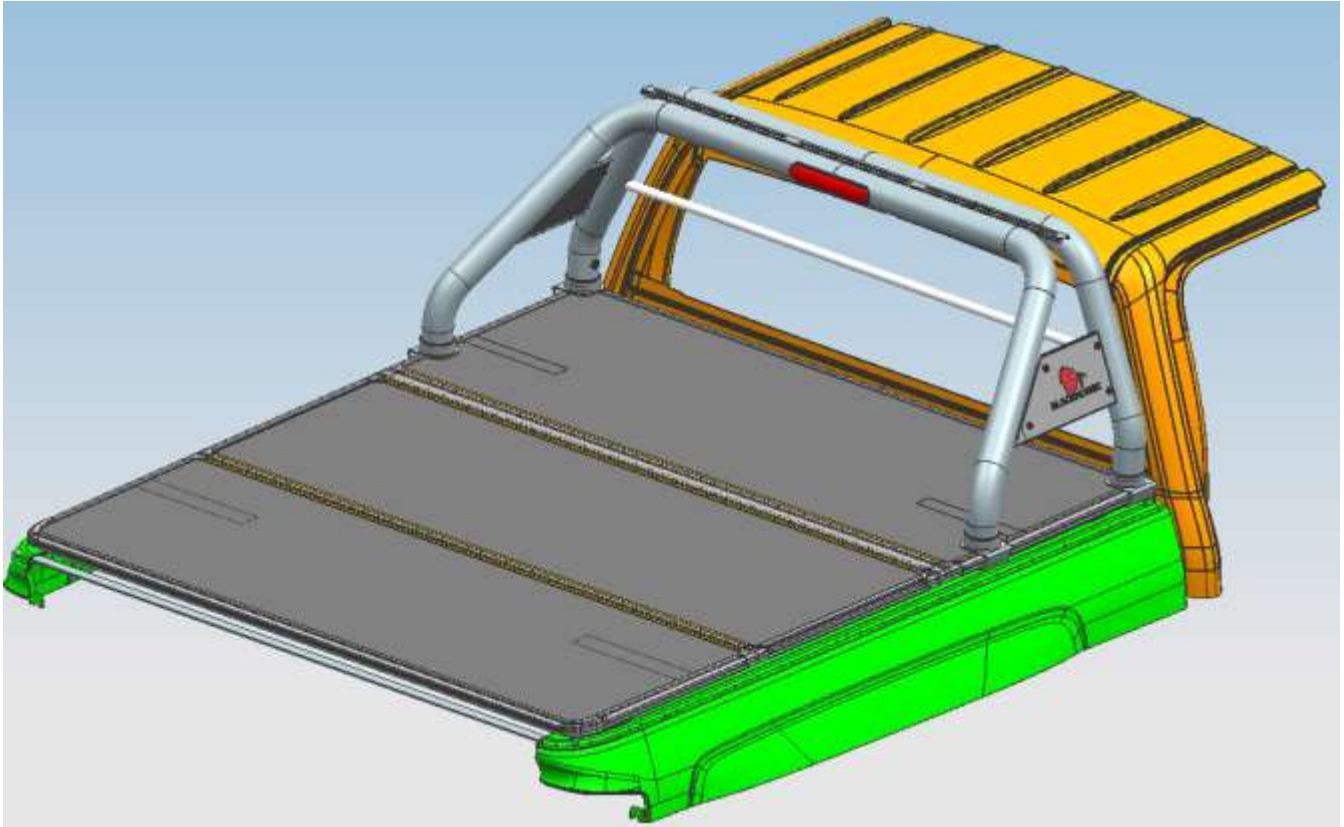

Step 1: Check all the contents are available in accordance with the above list.

Step 2: Prepared the SA roll bar, bracket ① and bracket ②, then use Allen wrench S=8 ⑫ and Flat head allen bolts M12*40 ⑪ to connect roll bar and brackets without locking them.

Step 3: Use accessories ⑥ ⑦ ⑧ ⑨ ⑩ to fasten roll bar and brackets on the truck at appropriate positions. Then fasten with Flat head allen bolts M12*40 ⑪.

Step 4: Stick seal ③ ④ ⑤ as FIG.1 shows for avoiding gaps between truck and hard tri-fold cover.

Step 5: Installation is finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.