



# **INSTALLATION INSTRUCTION**

**Black Bull Bar  
With Skid Plate  
16-21 Jeep Renegade  
PART #BBJPRE-SP**


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affect for your fitting.

PART LIST

1	Bull Bar	8	10mm x 27mm OD x 3.0mm Flat Washers
1	Driver/Left Mounting Bracket	4	10-1.5mm x 30mm Hex Bolts
1	Passenger/Right Mounting Bracket	4	10mm Lock Nuts



## INSTALLATION PICTURE

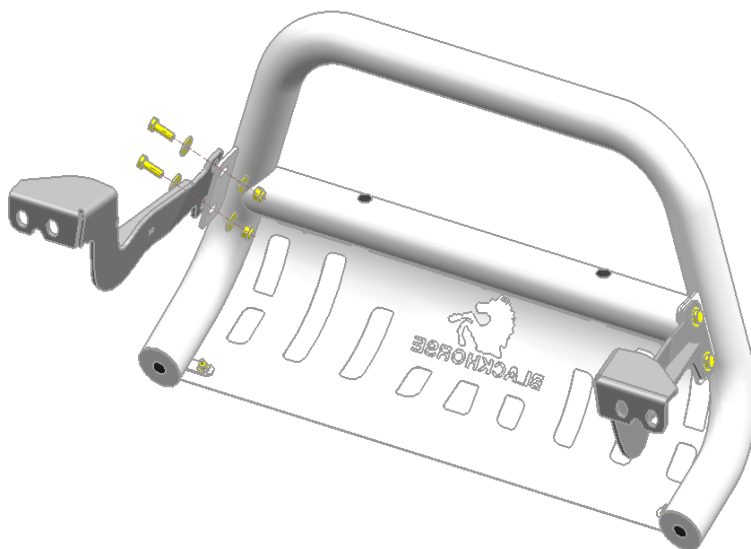


## Driver Side Installation Pictured



Remove hardware attaching the top of the grille to the radiator core support. Remove the hardware attaching the bottom of the bumper cover to the bottom of the radiator core support.

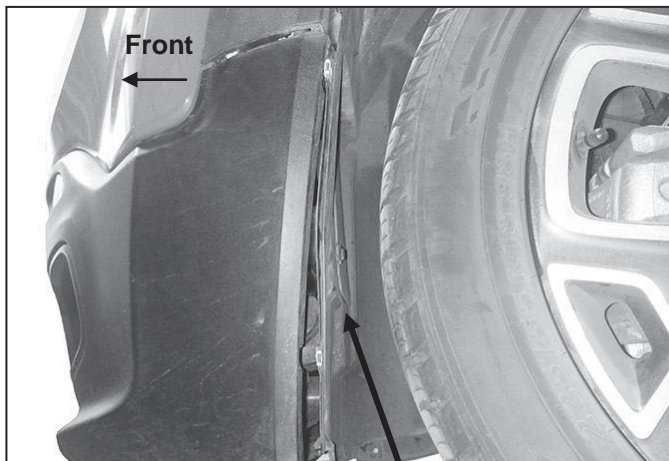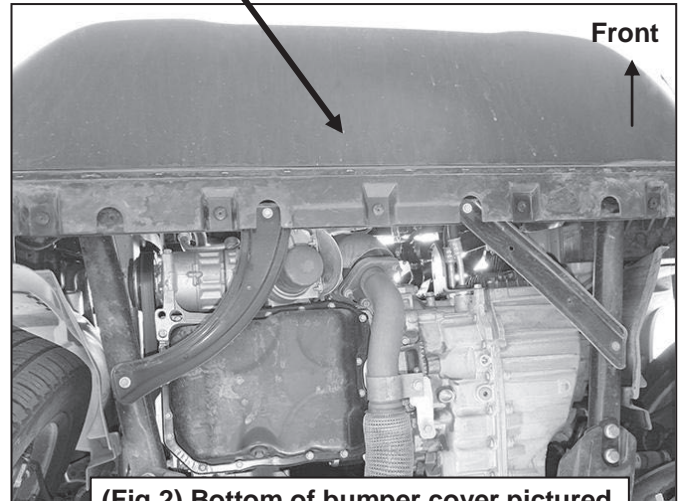


g 3) Remove hardware attaching fender to fender liner. Pull back liner to access and unplug lights

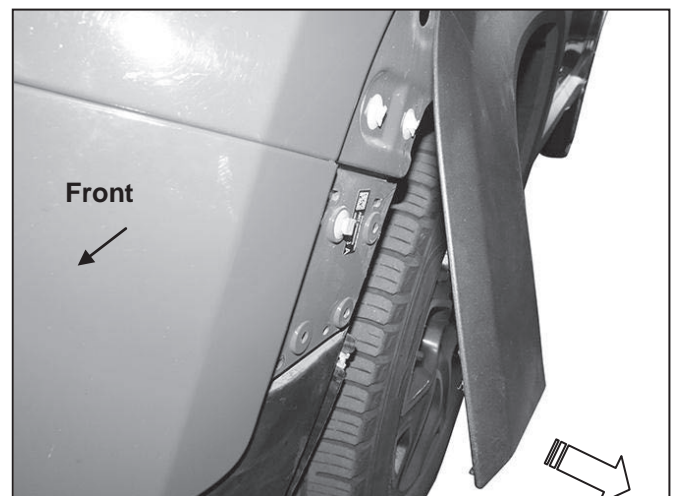


(Fig 4) Use panel tool (not included) to release plastic clips. Carefully pull fender flare straight out to access (4) screws attaching bumper cover to fender.


**Driver Side Installation Pictured**

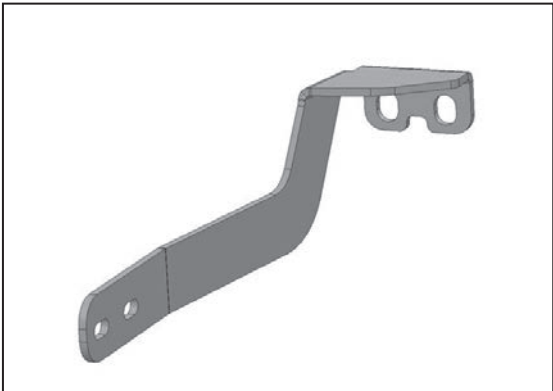

**/left Frame Mounting Bracket**

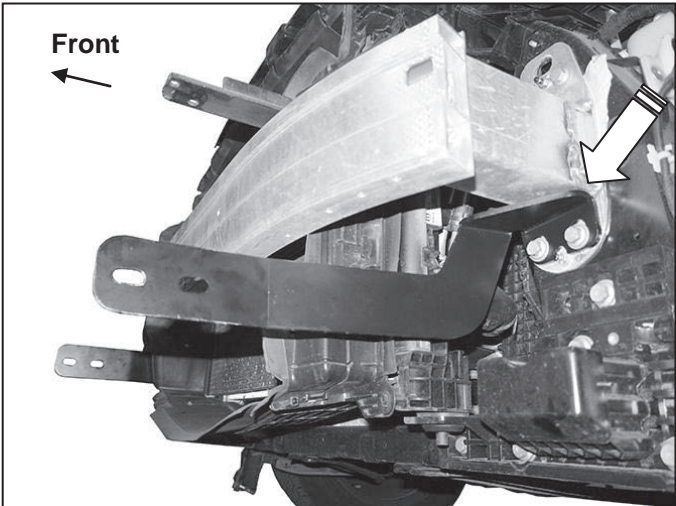

**(Fig 13) Reuse (2) factory hex bolts (arrow) to attach driver/left Frame Bracket to bottom of bumper bracket**

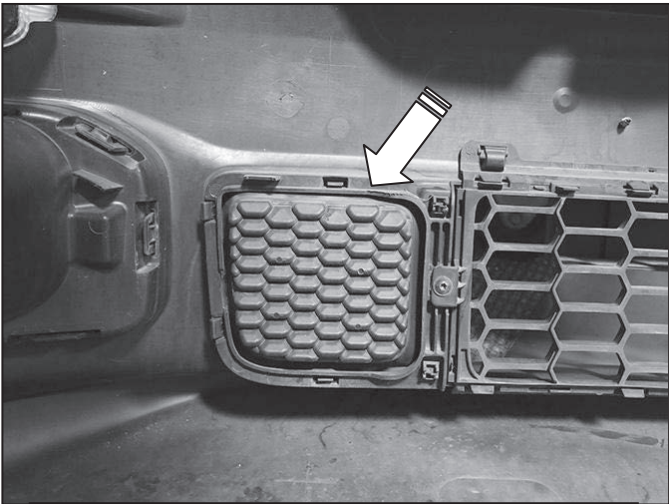

**both block offs from bumper ictured from behind bumper**



**(Fig 17) Before reinstalling the bumper cover/grille, cover edges on brackets with removable tape (masking tape for example). Carefully guide bumper cover/grille assembly over the bumper brackets and back into position.**



