



# **INSTALLATION INSTRUCTIONS**

**REAR BUMPER GUARD (DOUBLE LAYER)**

**FOR**

**2020-2021 FORD EXPLORER**

**PART # CRDL-FOF051B**




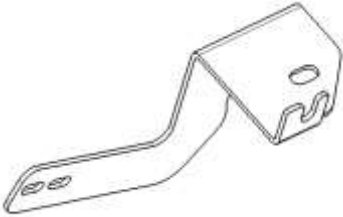

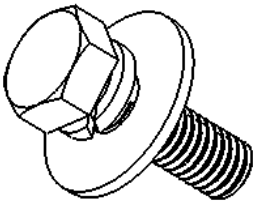
## Before Installation

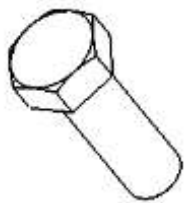
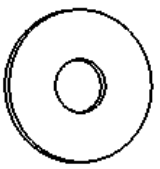


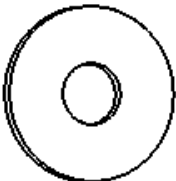

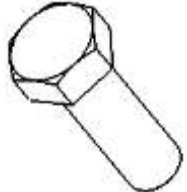
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Rear bumper guard	②	1	 Bracket-A(L)
③	1	 Bracket-A(R)	④	1	 Bracket-B(L)
⑤	1	 Bracket-B(R)	⑥	4	 Assembling bolt M8*25

⑦	4	 Hex Bolt M10*35	⑧	8	 Flat washer D10
⑨	4	 Spring washer D10	⑩	4	 Hex nut M10
⑪	4	 Flat washer D12	⑫	4	 Spring washer D12
⑬	4	 Hex Bolt M12*1.25*40	⑭		

## Installation Steps

STEP 1: Check all the contents are available in accordance with the above list.

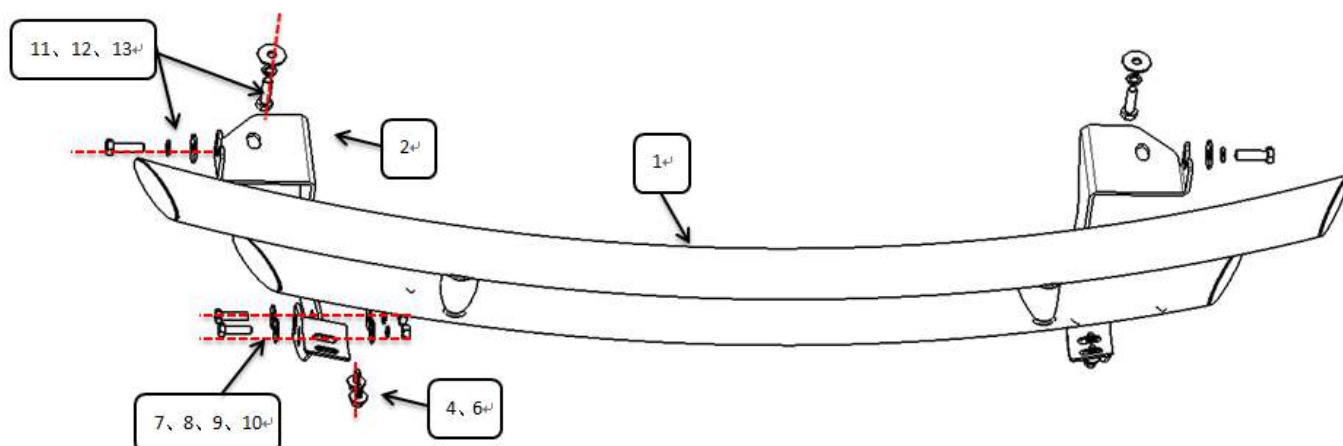
STEP 2: Using M12 bolt to install Bracket-B&C as below FIGURE shows. Snug but do not tighten hardware.

STEP 3: As the FIG. install the rear bar on Bracket-A. Do not tighten all the bolts.

STEP 4: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

STEP 5: Installation is finished.

## INSTALLATION FIGURE:



## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.