UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR HONDA CRV 07-16



INSTALLATION INSTRUCTIONS

UNIVERSAL REAR BUMPER GUARD

(DOUBLE LAYER) FOR HONDA CRV 07-16

PART # CRDL-HOH202B

UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR HONDA CRV 07-16

Before Installation


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts List

NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	Rear bar	2	1	Bracket-A-L
3	1	Bracket-A-R	4	1	Bracket-B-L
5	1	Bracket-B-R	6	4	Hex bolt M8*25
7	4	Hex bolt M10*35	8	4	Hex bolt M10*35
Page 2 of 4					

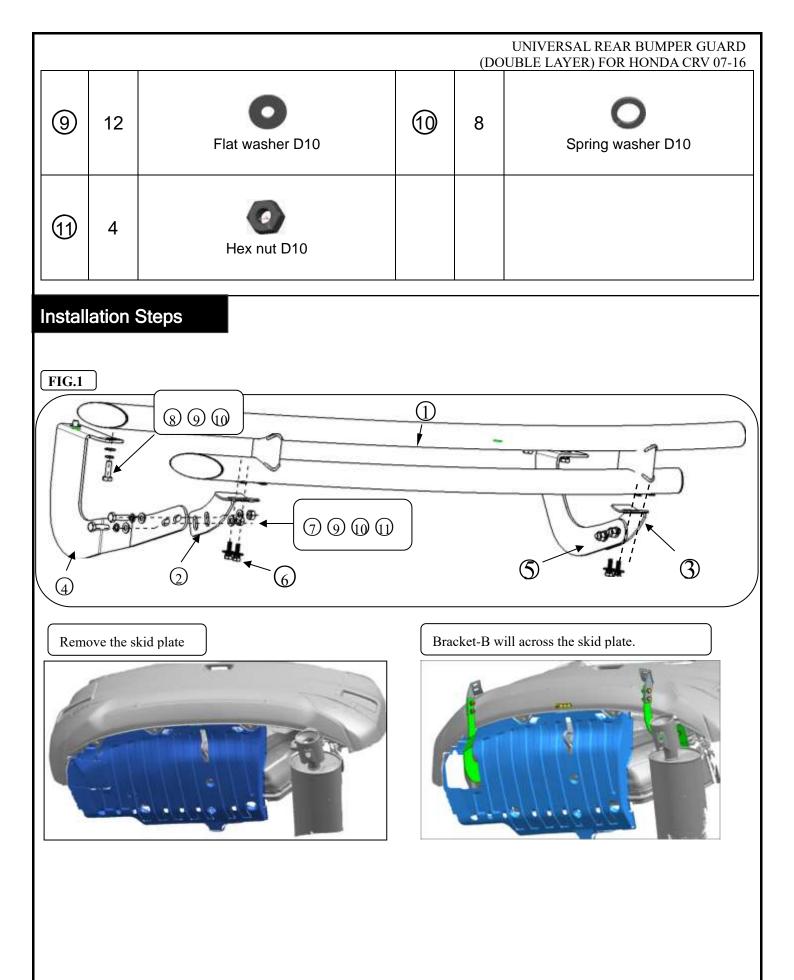

UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR HONDA CRV 07-16

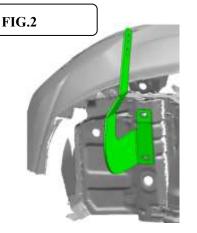


FIG.3



Step 1: Check all the contents are available in accordance with the above list.

Step 2: Remove the bottom factory skid plate, using M10*35 Hex bolts (⑧) to install Bracket-B-L&R. Do not tighten all the bolts. **(FIG.2&3)**

Step 3: Install the factory skid plate. Then install the rear bar on Bracket-A-L &B. Connect Bracket-A & B as **FIG.1**. Do not tighten all the bolts.

Step 4: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.

Step 5: Install the factory skid plate to original position. The small size skid plate is no need to install.

Step 6: Installation is finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.