

INSTALLATION INSTRUCTIONS

UNIVERSAL REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN

ROGUE 14-20

PART # CRDL-NIN101B

INSTALLATION INSTRUCTIONS

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	Rear bar	2	1	Bracket-A-L
3	1	Bracket-A-R	4	1	Bracket-B-L
(5)	1	Bracket-B-R	6	2	Hook bolt
7	2	Hook bolt connection plate	8	2	Plastic plate
9	4	Hex bolt M8*25	10	4	Hex bolt M10*35


INSTALLATION INSTRUCTIONS											
11)	10	Flat washer D10	12	6	Spring washer D10						
13	6	Hex nut D10									

Installation Steps


FIG.1

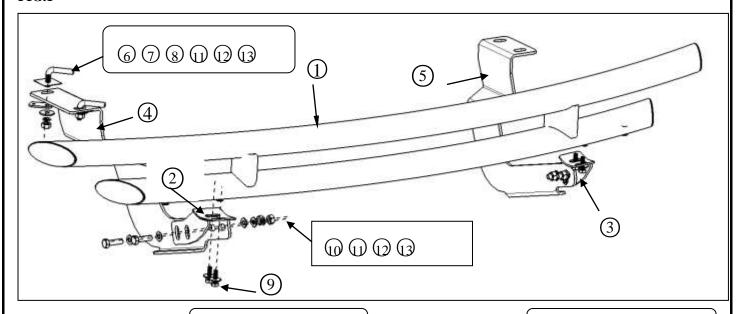

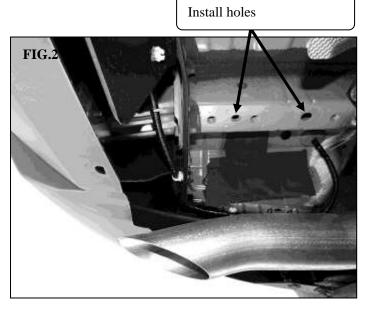

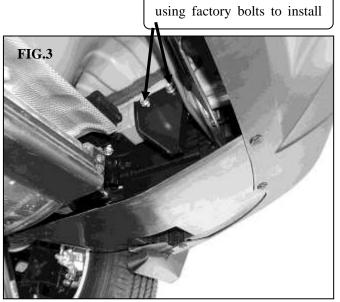

INSTALLATION INSTRUCTIONS

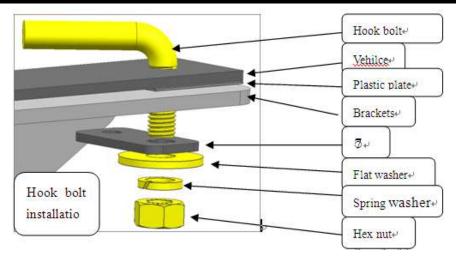

- Step 1: Check all the contents are available in accordance with the above list.
- Step 2: Remove the bottom factory skid plate, using Hook bolt to install Bracket-B-L. Do not tighten all the bolts. **(FIG.2)**
- Step 3: Remove the bottom factory skid plate and tow hook, using factory bolts (from tow hook) to install Bracket-B-R. Do not tighten all the bolts. **(FIG.3)**
- Step 4: Install the rear bar on Bracket-A-L &B. Connect Bracket-A & B as **FIG.1**. Do not tighten all the bolts.
- Step 5: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.
- Step 6: Install the factory skid plate to original position.
- Step 7: Installation is finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.