

INSTALLATION INSTRUCTIONS

REAR BUMPER GUARD (DOUBLE LAYER) FOR NISSAN

PATHFINDER 13-20

PART # CRDL-NIN201S

INSTALLATION INSTRUCTIONS

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

| NO. | QTY | PICTURE | NO. | QTY | PICTURE |
|-----|-----|-------------------|-----|-----|-----------------------|
| 1 | 1 | Rear bumper guard | 2 | 1 | Bracket-A(L) |
| 3 | 1 | Bracket-A(R) | 4 | 1 | Bracket-B(L) |
| 5 | 1 | Bracket-B(R) | 6 | 4 | Assembling bolt M8*25 |

| INSTALLATION INSTRUCTIONS | | | | | | | | | |
|---------------------------|---|-------------------|----|---|-------------------|--|--|--|--|
| 7 | 4 | Hex Bolt M10*35 | 8 | 8 | Flat washer D10 | | | | |
| @ | 4 | Spring washer D10 | 10 | 4 | Nut D10 | | | | |
| 11) | 4 | Flat washer D12 | 12 | 4 | Spring washer D12 | | | | |
| 13 | 4 | Hex Bolt M12*35 | | | | | | | |

Installation Steps

STEP 1: Check all the contents are available in accordance with the above list.

STEP 2: Using M12*35 bolt to install Bracket-B-L/R as FIG.2 ,Do not tighten all the bolts.

STEP 3: As the FIG.1, first Connect Bracket-A&B, then install the rear bar on Bracket-A-L&B.


Do not tighten all the bolts.

STEP 4: Test and make sure that the rear bar is steadily fixed, and then tighten all the hardware.


STEP 5: Installation is finished.


INSTALLATION INSTRUCTIONS

PIC1

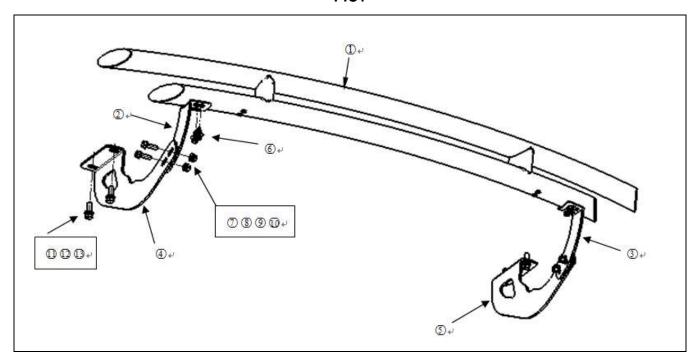

PIC2

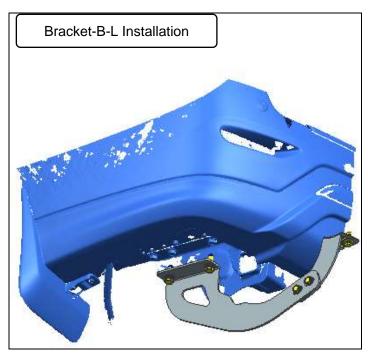

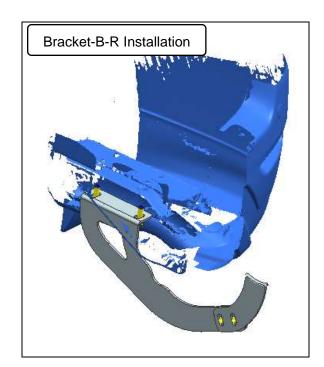

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.