



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

TRAVELER CROSS BAR

FITS VEHICLES WITH FLUSH OR RAISED

ROOF RAILS 40"-48" WIDE

PART #TR-49SI

PROTECTED BY ONE OR MORE PATENT




Before Installation





- Read all instructions carefully before installation. This will help prevent damage to your car.
- Images are for reference only. Your product may vary slightly, but the assembly process remains the same.

Care and Cleaning

- You can clean the product with mild soap.
- For long-term performance and reliability, regularly check and tighten all hardware, and clean the product.

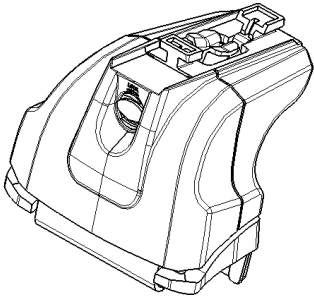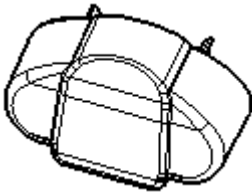Parts list

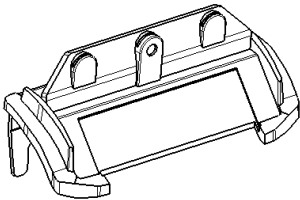
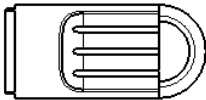
NO.	QTY	NAME
①	2	 Traveler Cross Bar
②	4	 Foundation of Traveler Cross Bar
③	4	 Plastic cover


④	4	 <p>Plastic Gasket #2</p>
⑤	2	 <p>Key (Plastic)</p>
⑥	8	 <p>Self tapping screw ST6*16</p>
⑦	1	 <p>Allen wrench S5</p>

Installation Steps


Step 1: Try attaching cross bar brackets ② to your car. If they don't fit, you'll need to replace the plastic gasket with Plastic Gasket #2 ④.

Refer to picture 2, use Key ⑤ to release the cover. Use ⑦ allen wrench S5 to remove the bolt. Replace the gasket. Reattach the cover.

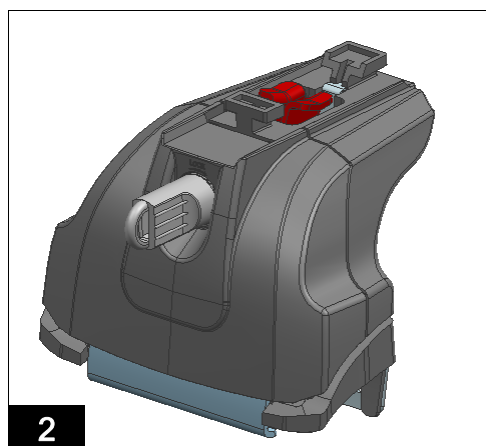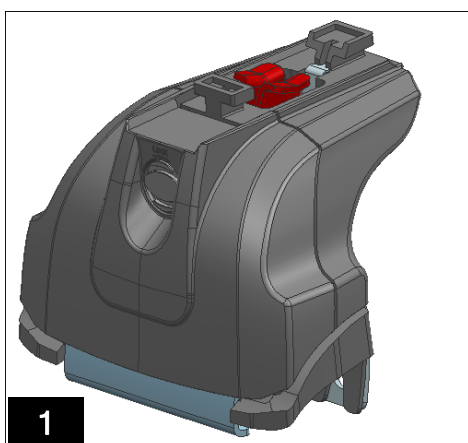

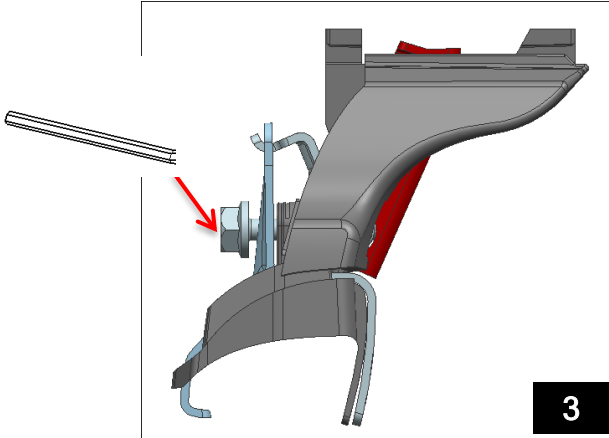


3

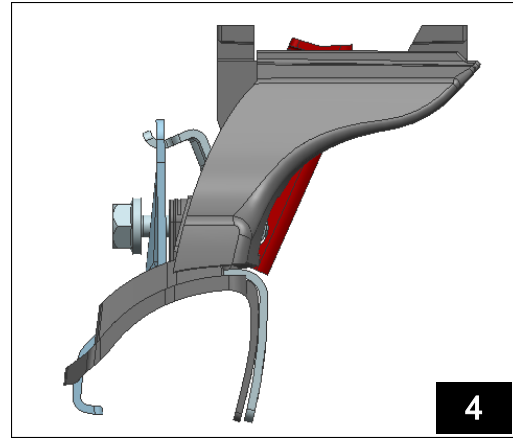


4


Step 2: Refer to the picture below and assemble brackets ② to cross bar ① ;

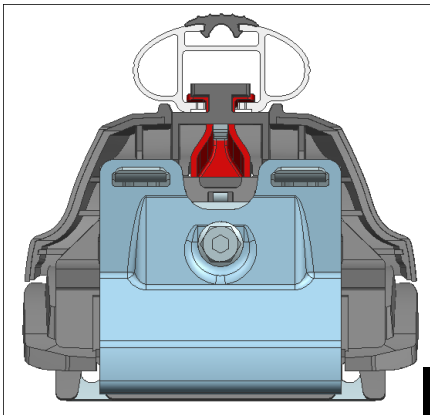

1

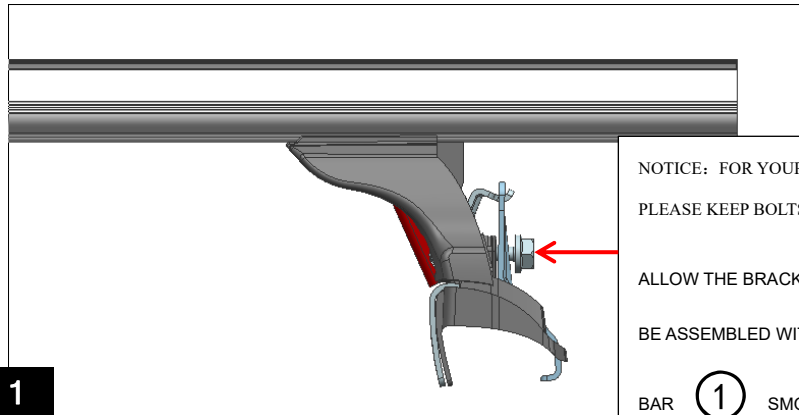

NOTICE: FOR YOUR CONVENIENCE
PLEASE KEEP BOLTS LOOSE:
ALLOW THE BRACKETS ② TO
BE ASSEMBLED WITH THE CROSS
BAR ① SMOOTHLY.

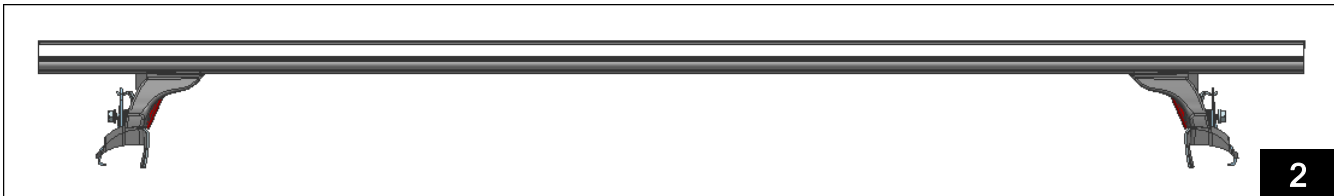

2

Step 3:

3-1、 Adjust the crossbars on the roof for desired spacing and position.

3-2、 Temporarily tighten the crossbar bracket bolts using the ⑦ allen wrench S5. Locate the screw holes behind the brackets and mark their position on your roof with a pen.





3-3、 Loosen bracket bolts and remove the crossbars. Drill holes (size $\phi 4.8$ to 8) in the marked locations on your roof.

3-4、 Place the crossbars back on the roof, aligning with the drilled holes. Tighten the bracket bolts using the ⑦ allen wrench S5. Reattach the plastic covers using key ⑤ ;

3-5、 Refer to the picture below. Attach plastic covers ③ to both ends of the crossbars. Secure using ⑥ self-tapping screws (ST6*16).

3-6、 Store the Key ⑤ and ⑦ allen wrench S5 safely for future adjustments.

3-7、 Installation complete!

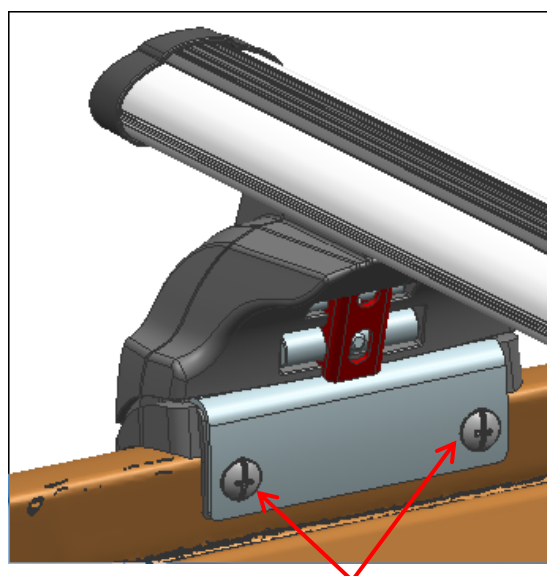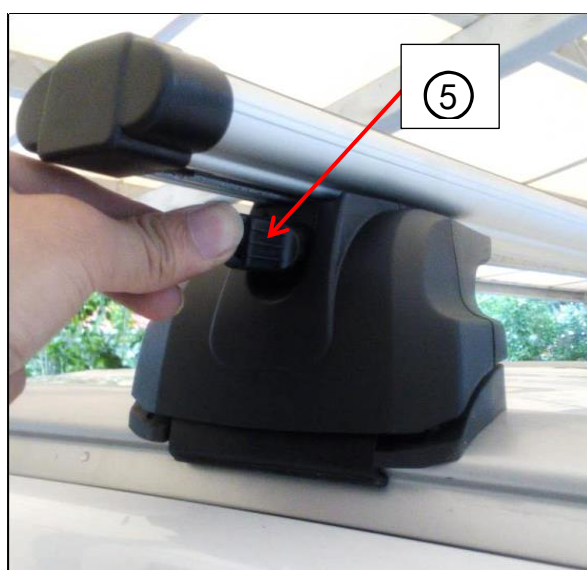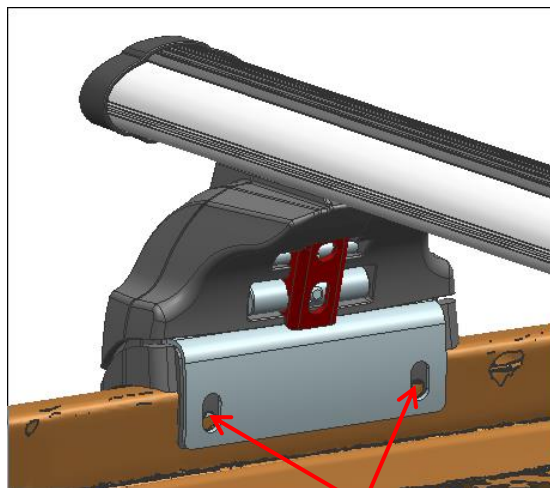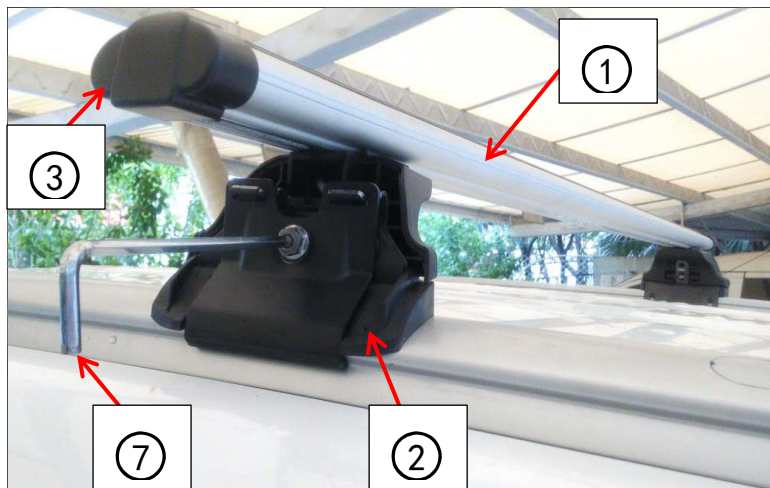

⑥ Fasten the brackets with self-tapping screw – 8 locations in total

NOTE

DISCLAIMER: We are not responsible for any quality problems caused by improper installation and use.