



**TEL: 1-866-XANATOS**

# **INSTALLATION INSTRUCTIONS**

## **TRAVELER CROSS BAR**

**FITS CHEVY SILVERADO 14-24 / FORD F150 15-24 /**

**DODGE RAM 1500 13-24 / TOYTOA TACOMA 16-23**

**PART # TR-60BK**

**PROTECTED BY ONE OR MORE PATENT**

## Before Installation


- Read all instructions carefully before installation. This will help prevent damage to your car.
- Images are for reference only. Your product may vary slightly, but the assembly process remains the same.



## Care and Cleaning


- You can clean the product with mild soap.
- For long-term performance and reliability, regularly check and tighten all hardware, and clean the product.

## Parts list

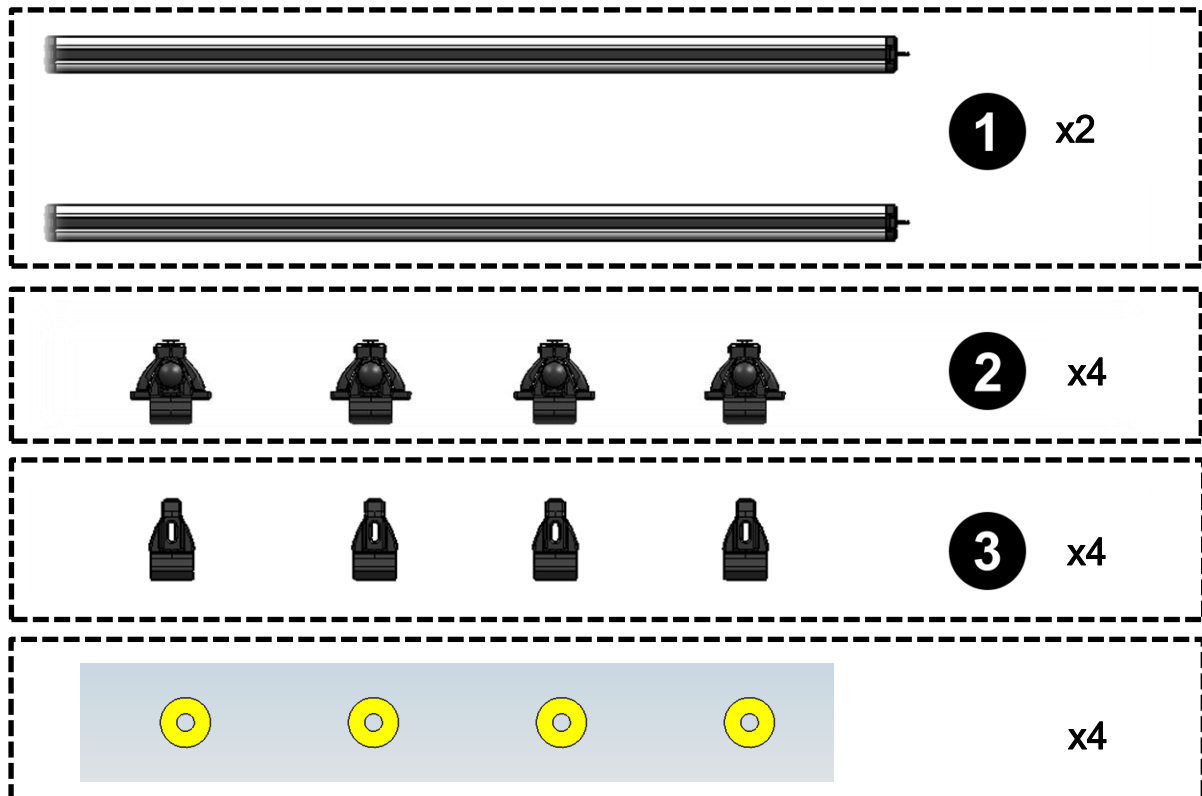

## Installation Instruction



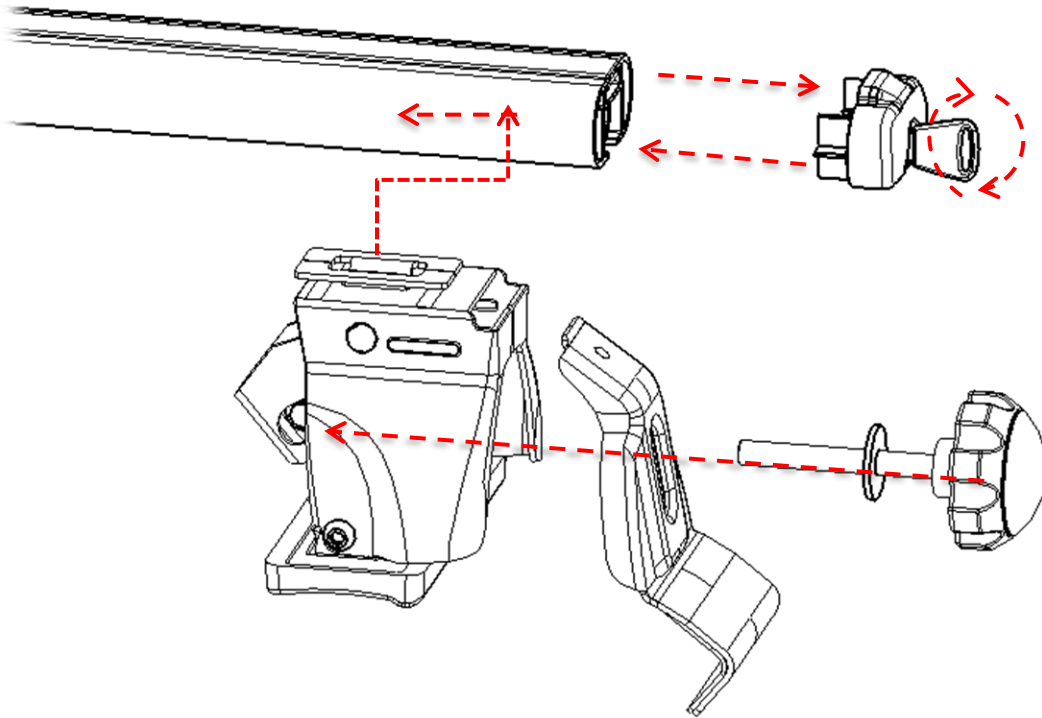


## Installation Steps

### Step 1:

Open the locks on both sides then put the bracket (Part #2) into the cross bar. Then replace the locks.

**Notice:** Ensure that the brackets are facing the correct way as per the diagram above before inserting the bracket into the cross bar. The installation is the same for both sides.

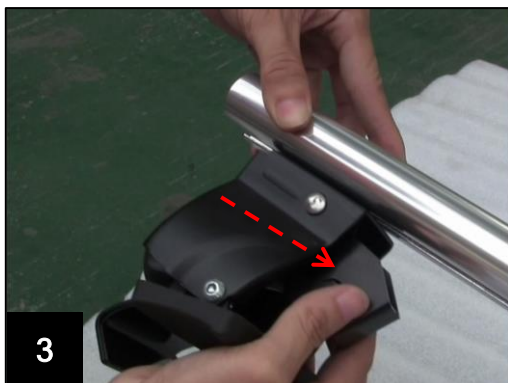

## Step 2:

Install the assembled cross bar on top of the vehicle.

**Notice:** There are two types of clamps included in the box designed for different vehicles. Please choose the one that is suitable for your vehicle.

1. Put the bracket on the rain gutter and hook the edge of the roof. If the hook does not fit, you may need to change to the other hook style (part #3).
2. Secure the bracket to the roof, ensuring you are firmly pressing the bracket against the roof and tightly screw in the plastic bolts.



## Step 3:

Check the cross bar is in the correct position. Make adjustments if required. Once the bar is in the correct position, tighten the bolts. Do a final check to ensure that all bolts have been tightened.



**Step 4:** Installation complete!

## NOTE

**DISCLAIMER:** We are not responsible for any quality problems caused by improper installation and use.