



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

**TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR
15-22 CHEVY COLORADO (WITH SENSORS RELOCATION)
(MODULAR TYPE)**

PART # BFRG15

PROTECTED BY ONE OR MORE PATENT

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.













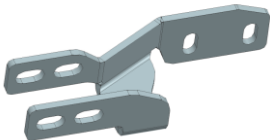
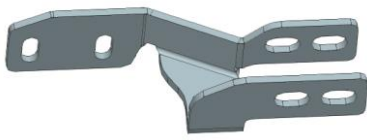
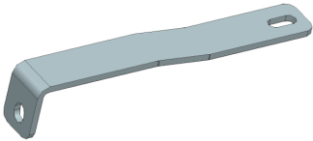
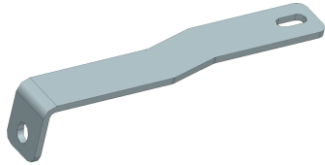



Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list






NO.	QTY	PIC	NO.	QTY	PIC
①	1	A long, grey, cylindrical tube with two yellow circular sensors at each end. Main tube (Middle)	②	1	A grey, L-shaped tube with a small bracket at the end. Main tube (L)
③	1	A grey, L-shaped tube with a small bracket at the end. Main tube (R)	④	1	A long, grey, rectangular frame with two blue circular sensors at each end. Lamp frame
⑤	1	A long, thin, rectangular lamp with a black and white pattern. 20-inch Length lamp	⑥	2	A small, grey, L-shaped bracket. Lamp bracket
⑦	2	Two yellow T-bolts with grey nuts. T Bolts M12x100	⑧	2	A circular lock washer with a central hole. Lock washer D8
⑨	4	A circular flat washer with a central hole. Flat washer D8_22_2	⑩	4	A circular flat washer with a central hole. Flat washer D8 (8x24x2mm)
⑪	2	A hex bolt with a hex nut. Hex bolt M8_16	⑫	2	A hex bolt with a hex nut. Hex bolt M8_30

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 15-22 CHEVY COLORADO (WITH
SENSORS RELOCATION) (MODULAR TYPE)




⑬	2	 Hex nut M8	⑭	2	 Lock nut M8
⑮	2	 Lock washer D10	⑯	4	 Flat washer D10_24_2.2
⑰	8	 Flat washer D10_27_3	⑱	4	 Hex bolt M10_35
⑲	2	 Hex bolt M10_80	⑳	2	 Hex nut M10
㉑	4	 Lock nut M10	㉒	4	 Flat washer D12 (12x24x2.5mm)
㉓	4	 Lock nut M12	㉔	6	 Hex bolt assembly M8_25
㉕	1	 Bracket 2 (L)	㉖	1	 Bracket 2 (R)
㉗	1	 Brace bracket (L)	㉘	1	 Brace bracket (R)
㉙	1	 Main tube gum cover (L)	㉚	1	 Main tube gum cover (R)
㉛	4	 Sleeve			

TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 15-22 CHEVY COLORADO (WITH SENSORS RELOCATION) (MODULAR TYPE)

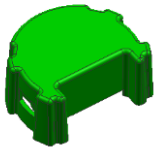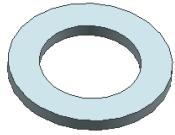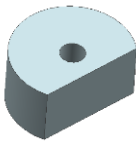Standard parts for Radar:


32	2		33	2	
34	2		35	4	
36	2				
		Radar cover			

Standard parts for main tube gum cover:

37	1		38	4	
		Allen wrench S=5			
39	4				
		Lock washer D8			

Installation Steps

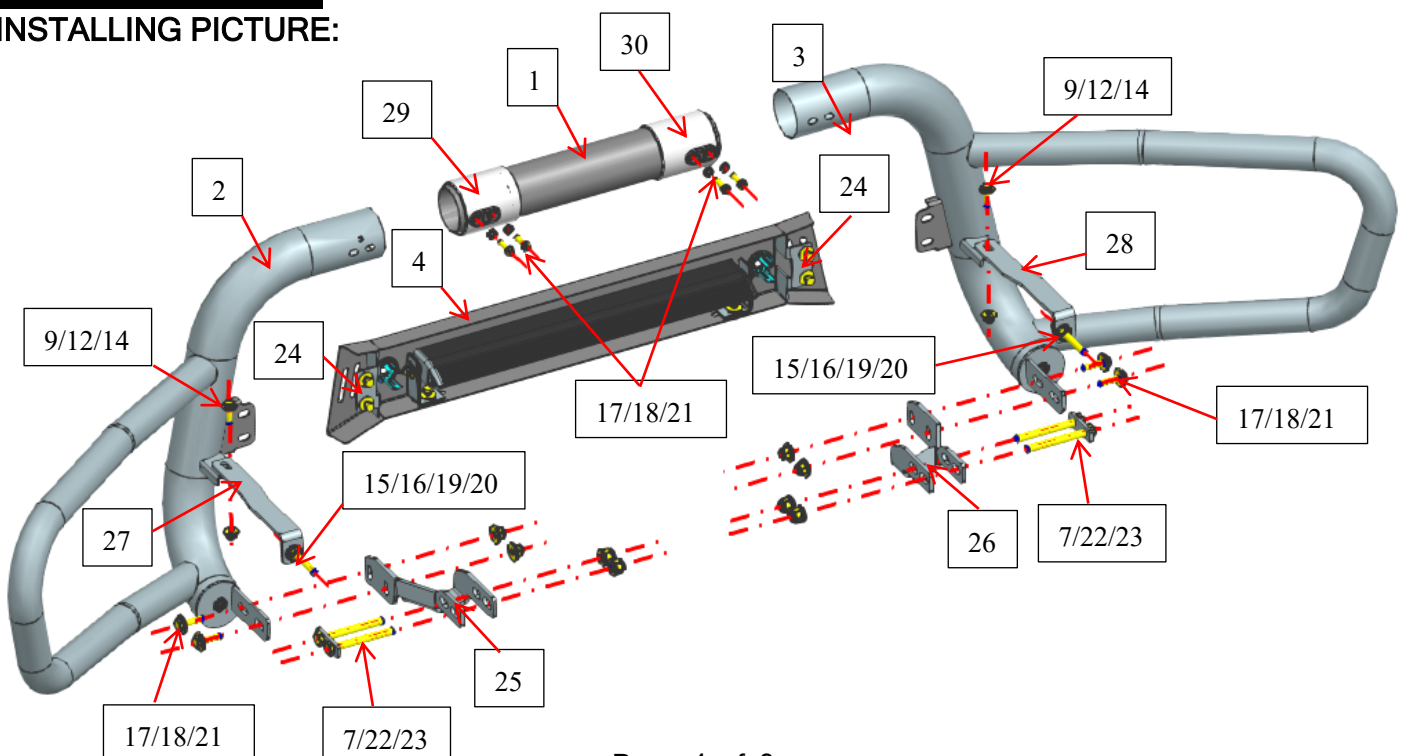
INSTALLING PICTURE:





TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 15-22 CHEVY COLORADO (WITH SENSORS RELOCATION) (MODULAR TYPE)

Step 1: Verify that all parts are present according to the manual.


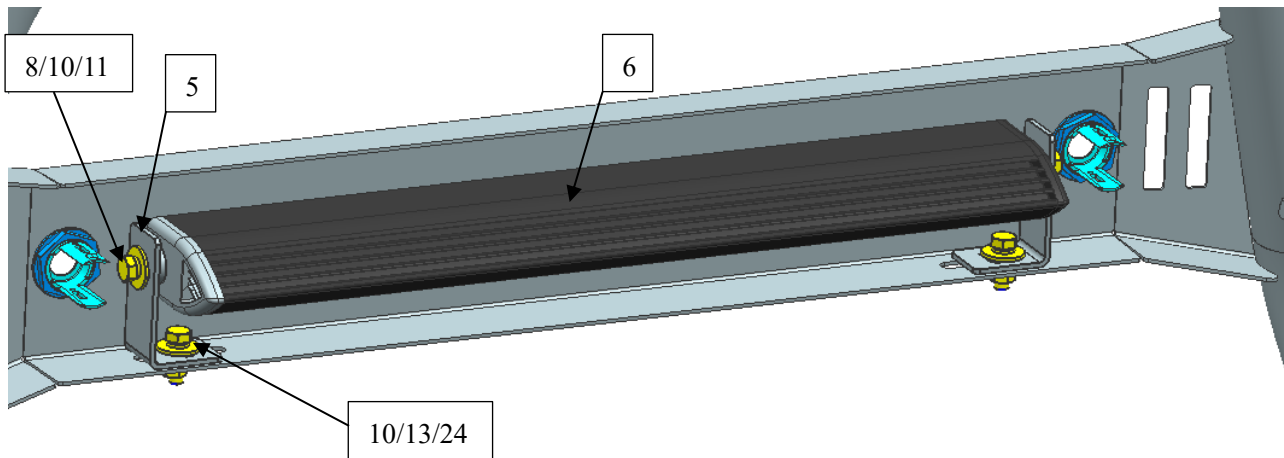
Step 2: Before installation, use the standard parts and the lamp bracket to install 20-inch Length lamp in the bar.



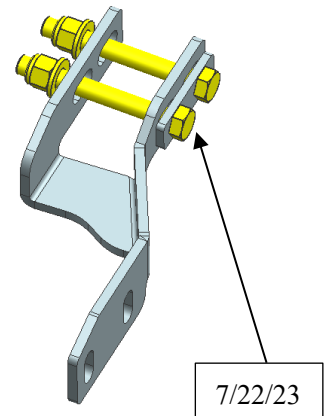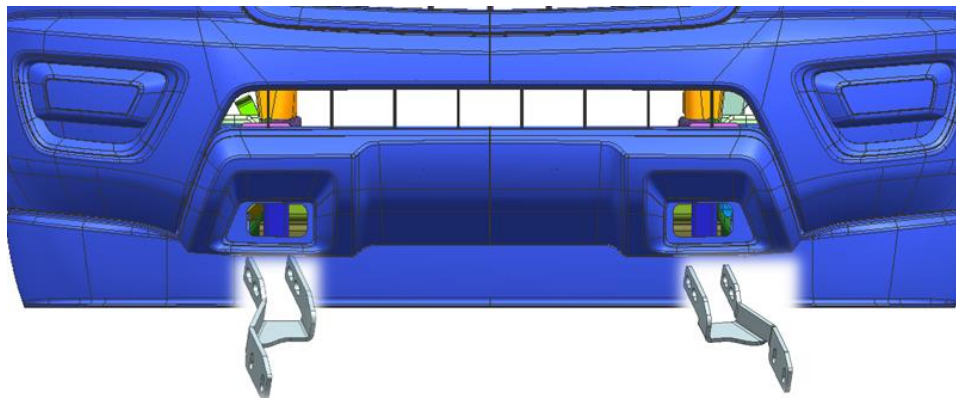Step 3: Install the brackets L/R in the hole of the trailer. Fasten the brackets with T Double bolt M12 and other standard parts on the girder. The left and right side installation are consistent.




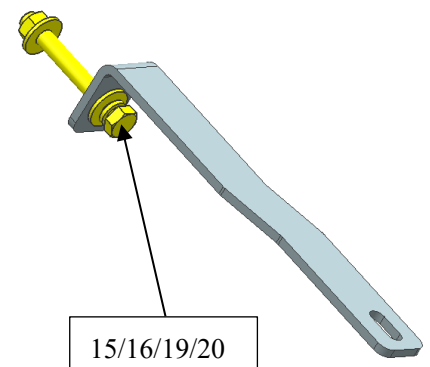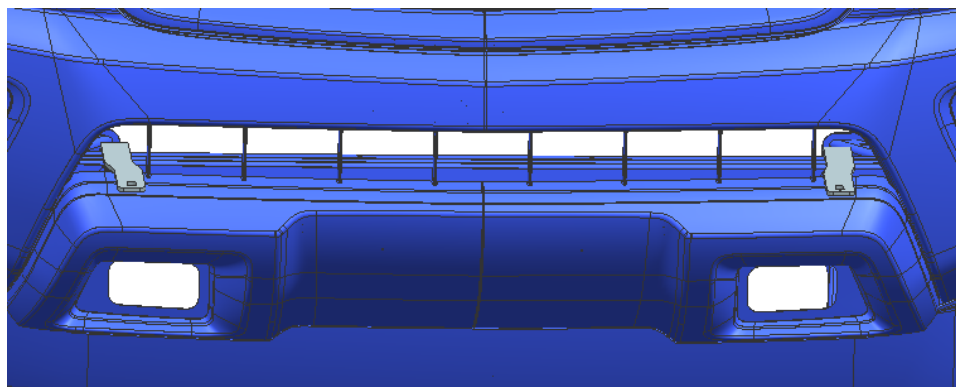Step 4: Place the support brackets through the plastic grille guard and then fixed in the rear of the collision beam by the standard parts. The left and right side installation are consistent.




TEXTURE BLACK BEACON FRONT RUNNER GRILLE GUARD FOR 15-22 CHEVY COLORADO (WITH SENSORS RELOCATION) (MODULAR TYPE)

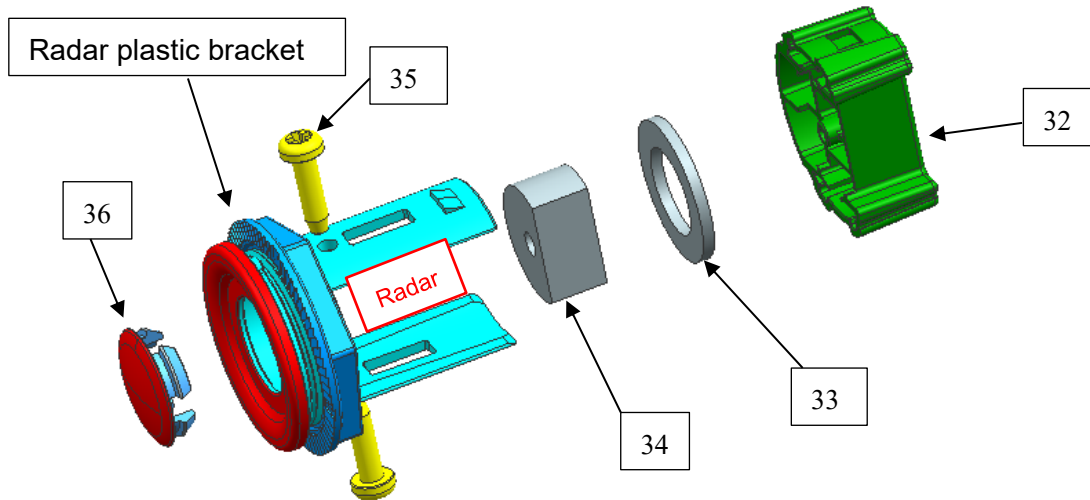Step 5: Find out the inner radar plastic bracket from the front runner. Then fasten the original radar on the front runner as the below shown.



Step 6: Use standard parts to install the front runner with brackets and support brackets as the INSTALLING PICTURE shown.

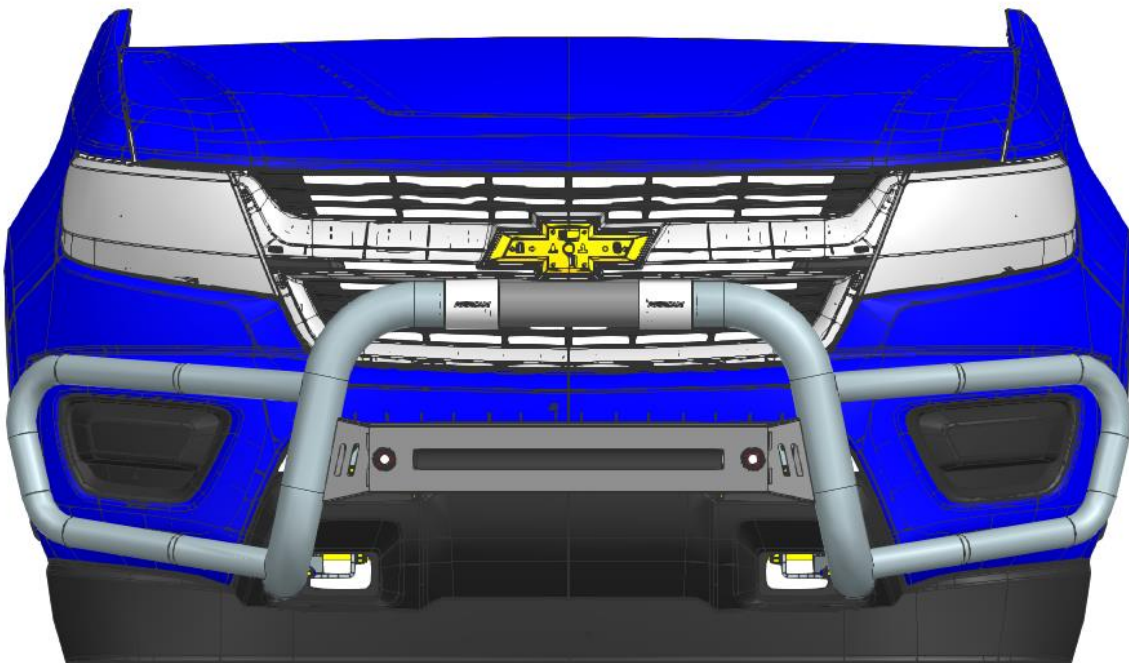Step 7: Installation is finished, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.