



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS
BRACKET FOR PEERLESS FRONT RUNNER SINGLE TUBE FOR
HONDA CRV 2023-2024
PART # PRFH9
PROTECTED BY ONE OR MORE PATENT





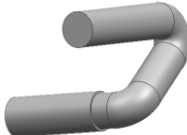
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.





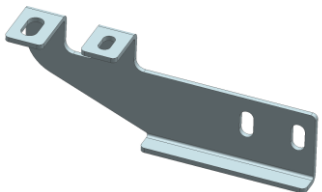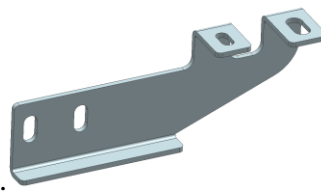


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


| NO. | QTY | NAME | NO. | QTY | NAME |
|-----|-----|---|-----|-----|---|
| ① | 1 |  Driver/left Mounting Bracket 1 | ② | 1 |  Passenger/Right Mounting Bracket 1 |
| ③ | 1 |  Driver/left Mounting Bracket 2 | ④ | 1 |  Passenger/Right Mounting Bracket 2 |
| ⑤ | 2 |  Irregular Bolt | | | |

Standard parts list:


| | | | | | |
|---|---|--|---|---|---|
| ⑥ | 2 |  Lock Washer D10 | ⑦ | 4 |  Lock Washer D12 |
| ⑧ | 2 |  Hex Nut M10 | ⑨ | 4 |  Hex Nut M12 |
| ⑩ | 4 |  Hex Bolt (Full Thread) M12_35 | ⑪ | 2 |  Flat Washer D10_27_3 |
| ⑫ | 8 |  Flat Washer D12_32_3 | | | |

Installation Steps


Installation Figure:

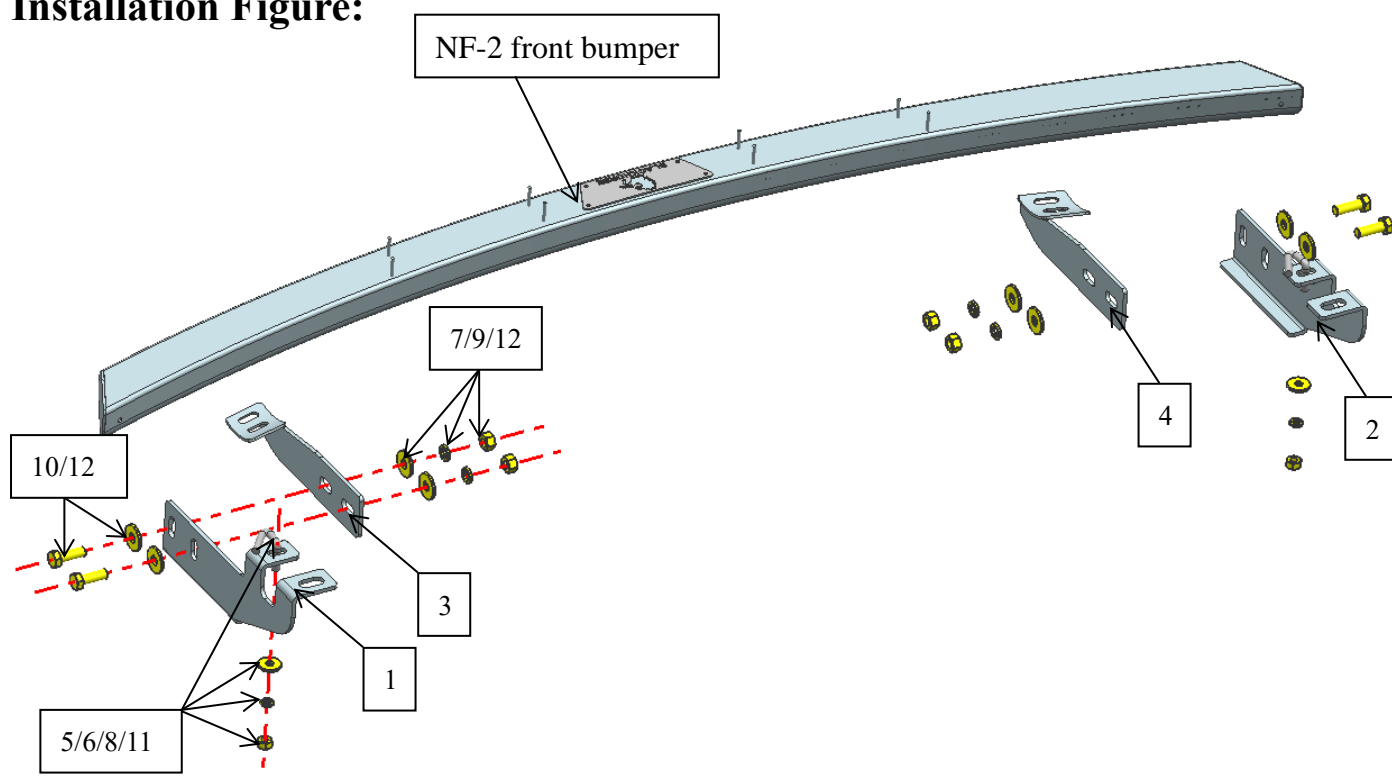


Step 1: Find the two holes on the bottom of the car body where the mounting bracket is installed, and use standard parts for installation. The left and right are consistent, as shown in the figure on the right.

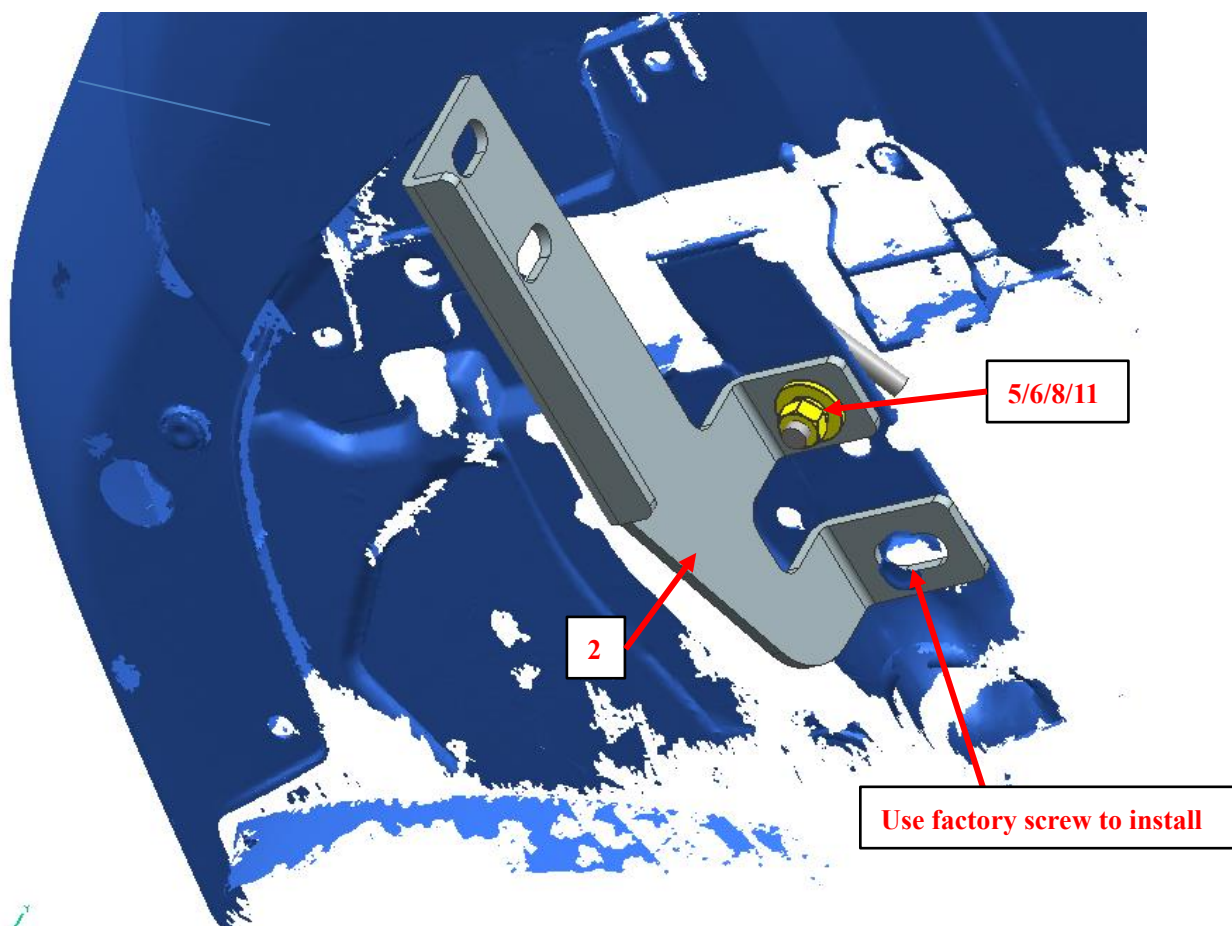

Step 2: Install mounting bracket 2 using standard parts with the mounting bracket 1, consistent on both sides, as shown in the diagram on the right.

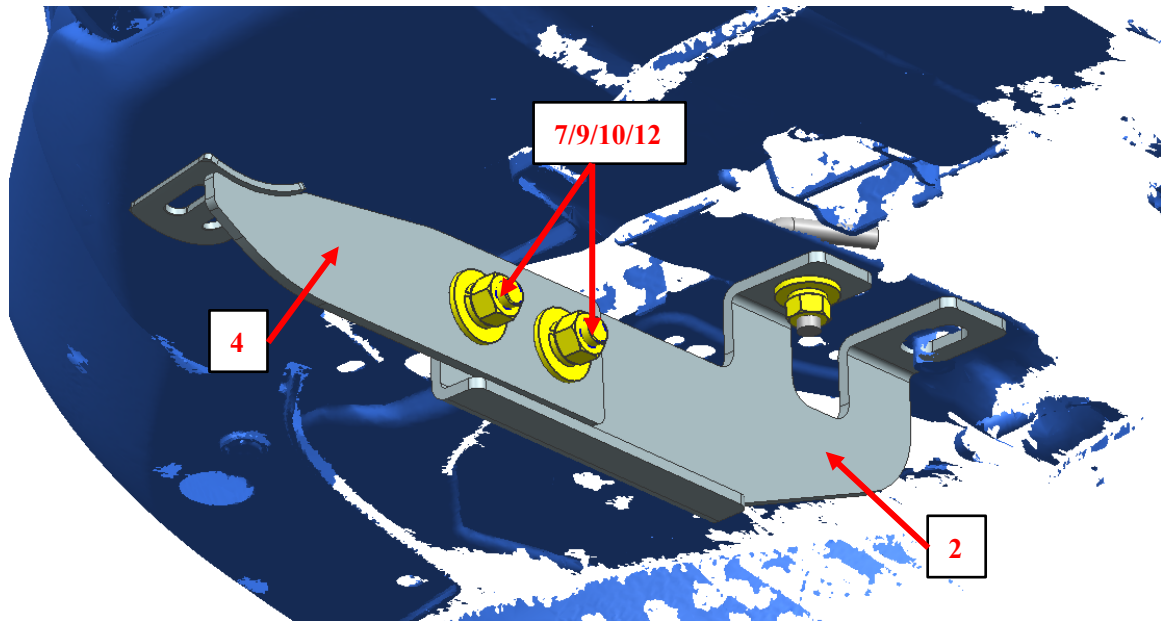

Step 3: Use the standard parts of the front bumper to install the front bumper with mounting bracket 2, consistent on both sides. The following image shows the right side.

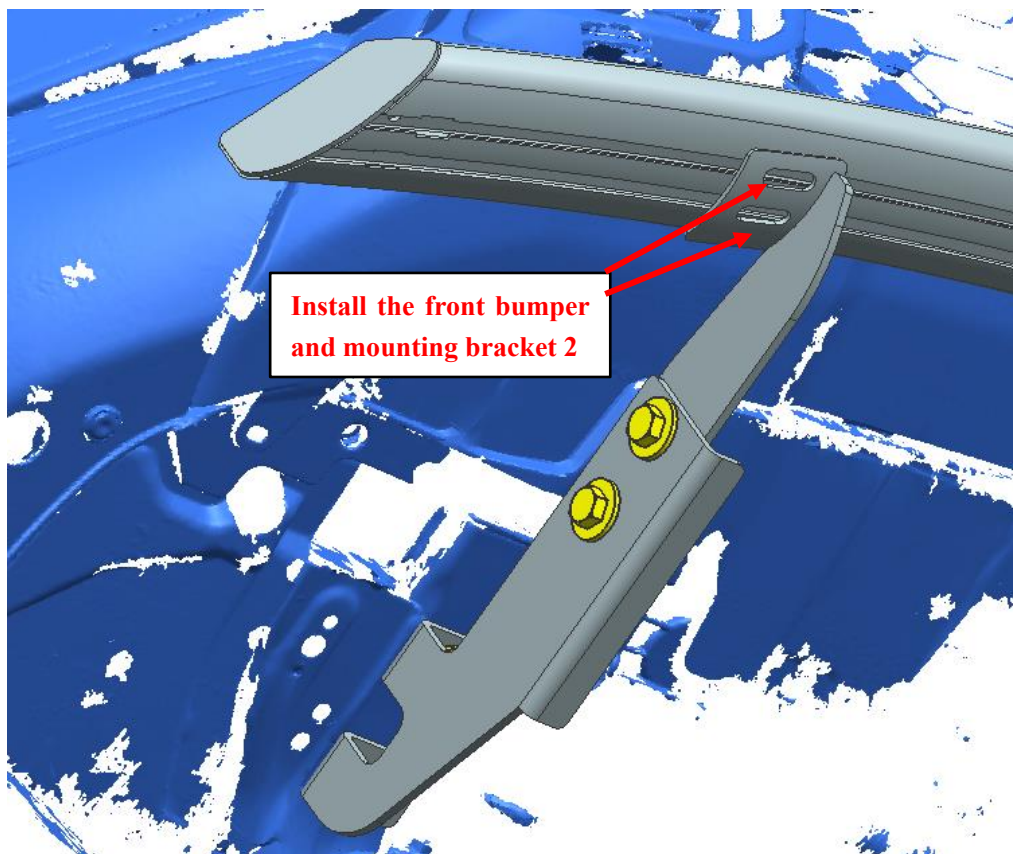

Step 4: Fully tighten all hardware.

Step 5: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.