



INSTALLATION INSTRUCTIONS

**ATLAS ROLL BAR TONNEAU COVER BASE FOR 19-20 FORD
RANGER**

PART # ATRB8BK - ATRB8SS

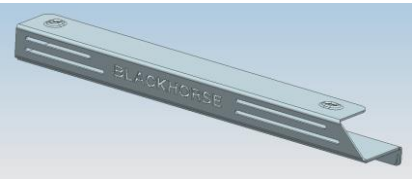
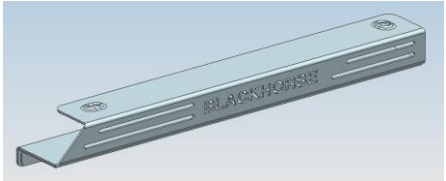
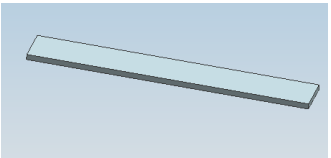
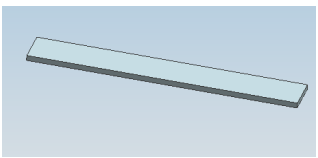
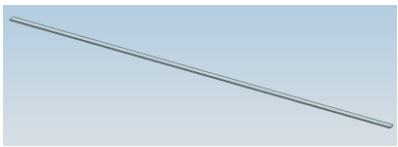
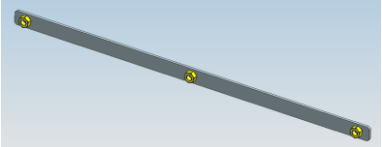
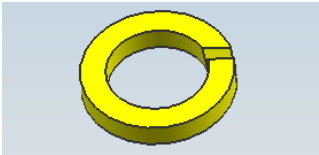
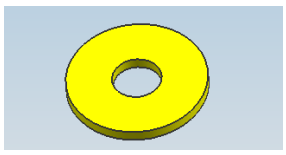
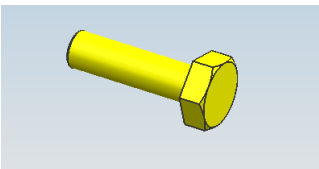
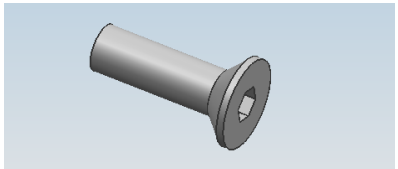
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.


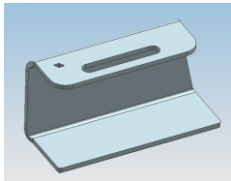
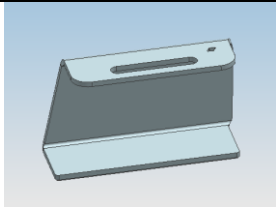
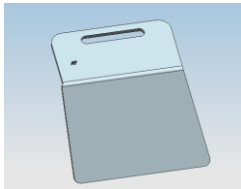
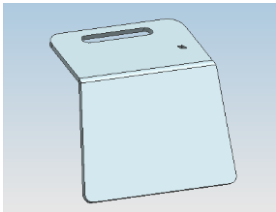

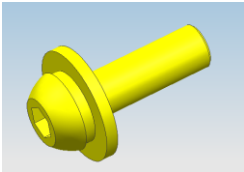
Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Support bracket L	②	1	 Support bracket R
③	4	 Black adhesive tape 4	④	4	 Black adhesive tape 5
⑤	1	 Black adhesive tape 6	⑥	2	 Connecting plate
⑦	6	 Spring washer D10	⑧	6	 Flat washer D10
⑨	6	 Hex bolt M10_35	⑩	4	 Flat head allen bolt M12_40


ATLAS ROLL BAR TONNEAU COVER BASE FOR 19-20 FORD RANGER

11	1		12	1	
13	1		14	1	
15	1		16	1	
17	4				

Installation Steps

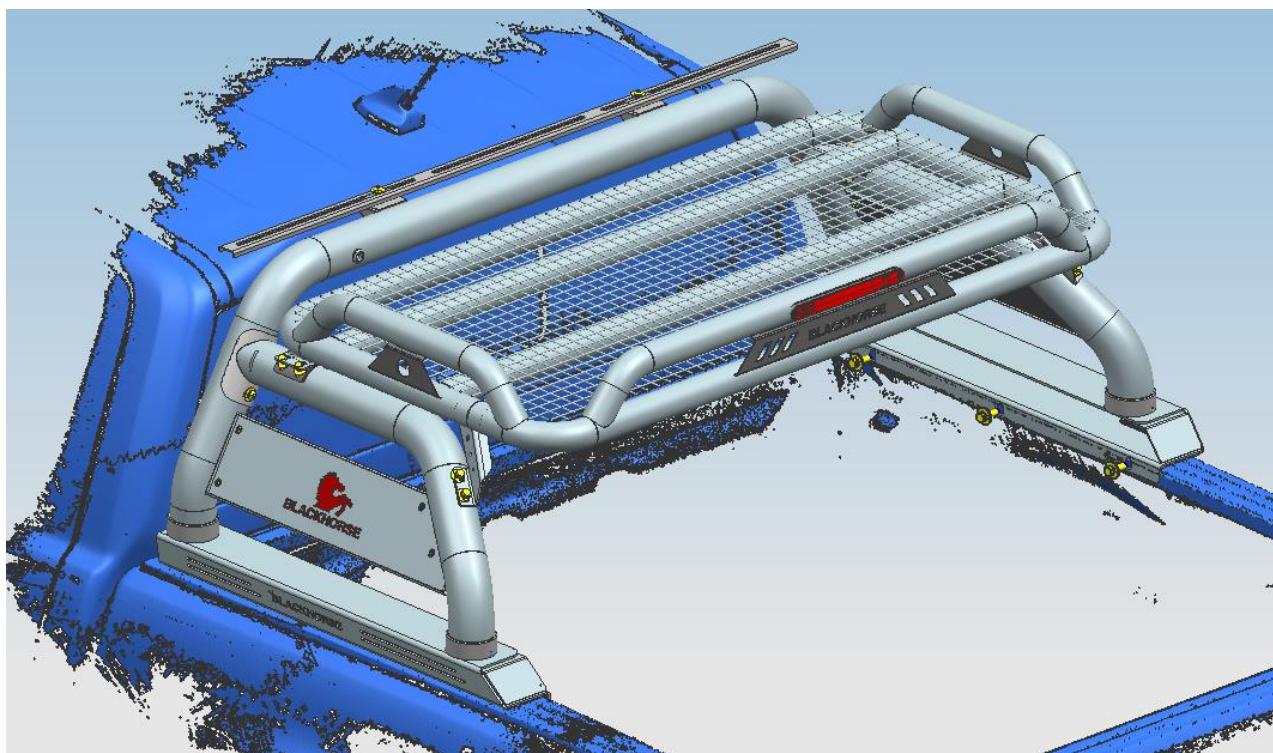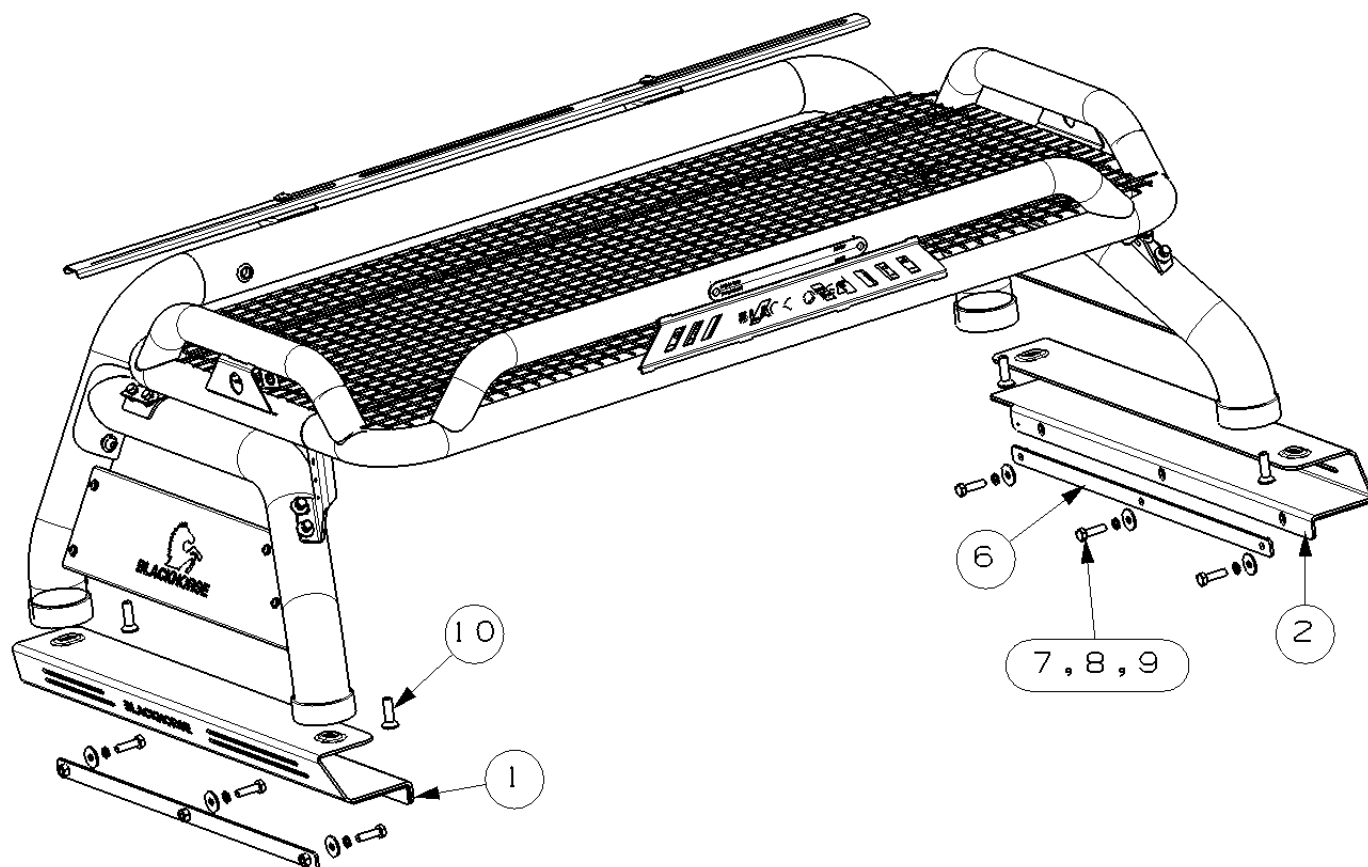Installation figure:






Step 1: Check all the contents are available in accordance with the above list.

Step 2: Install support bracket 11 on connecting plate 2. Pre-tighten the standard parts 7, 8, 9.

Step 3: Install roll bar on support bracket. Pre-tighten the standard part 10.

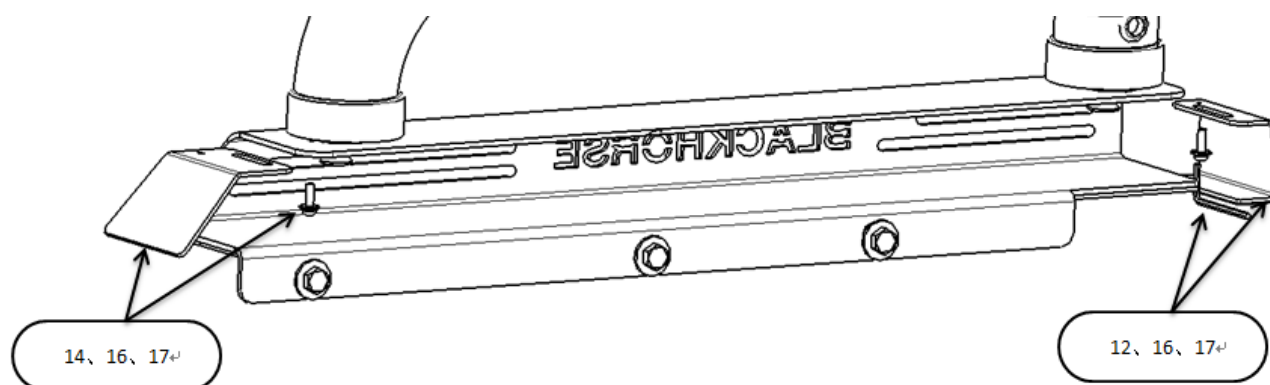Step 4: Install left side of Front and Rear end cover 12, 14 on the support bracket (bilateral symmetry). Pre-tighten the standard parts 16, 17.



Step 5: Adjust as required then fully tighten all standard parts.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.