



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

**ARMOUR II BASKET FOR TOYOTA TACOMA 05-21/CHEVY
COLORADO 15-21/ GMC CANYON 15-21/FORD RANGER 19-
21/NISSAN FRONTIER 05-21/JEEP GLADIATOR 19-23**

PART # BA3AR2

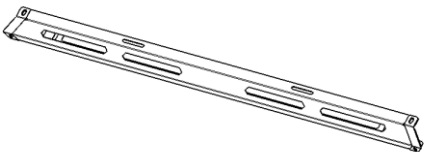
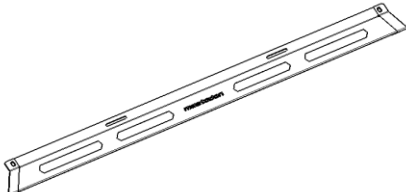
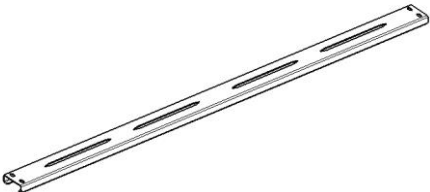
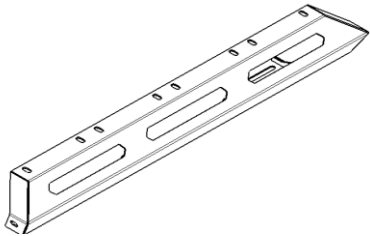
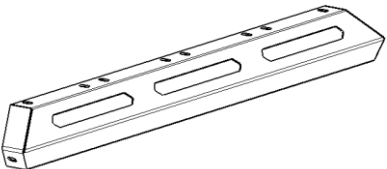
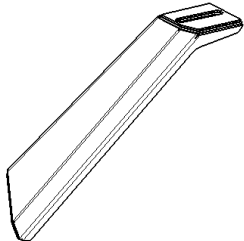
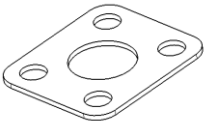

Before Installation

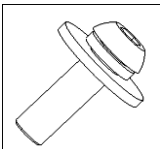


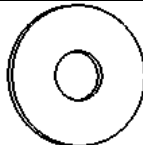
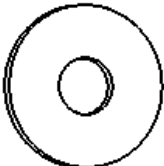
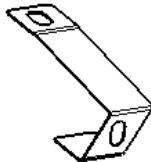

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

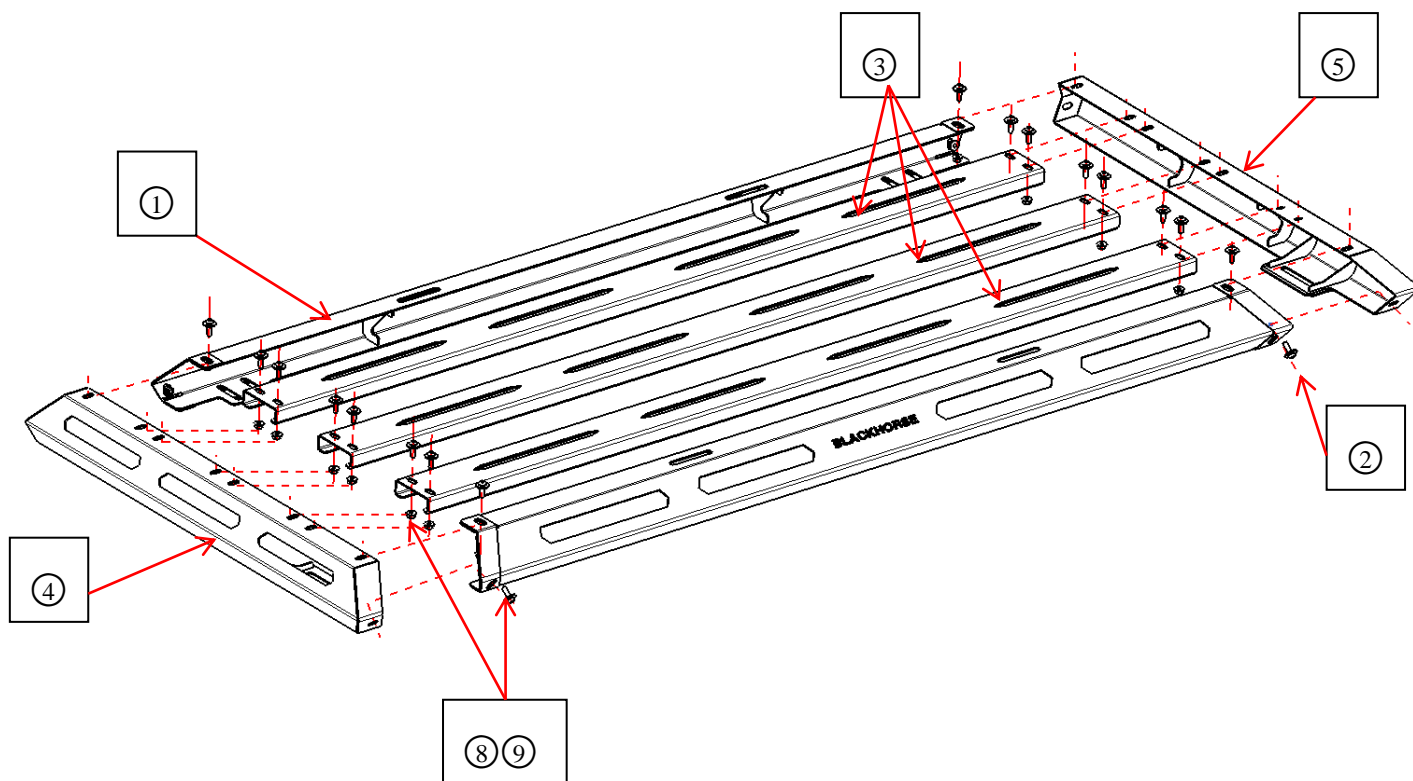
Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 FRONT CORSS BEAM	②	1	 REAR CORSS BEAM
③	3	 MIDDLE CORSS BEAM	④	1	 SIDE BEAM (L)
⑤	1	 SIDE BEAM (R)	⑥	2	 CONNECTING BRACKET (L&R)
⑦	2	 MOUNTING PLATE	⑧	20	 FLANGE HEX NUT M6

⑨	20	 ASSEMBLY BOLT M6-20	⑩	6	 FLANGE HEX NUT M8
⑪	6	 BUTTON HEAD ALLEN BOLT M8-30	⑫	2	 FLAT WASHER D8 (8x24x2mm)
⑬	4	 FLAT WASHER D8 (8x16x1.6mm)	⑭	2	 ADHESIVE TAPE 1(L&R)
⑮	2	 ADHESIVE TAPE 4(L&R)			

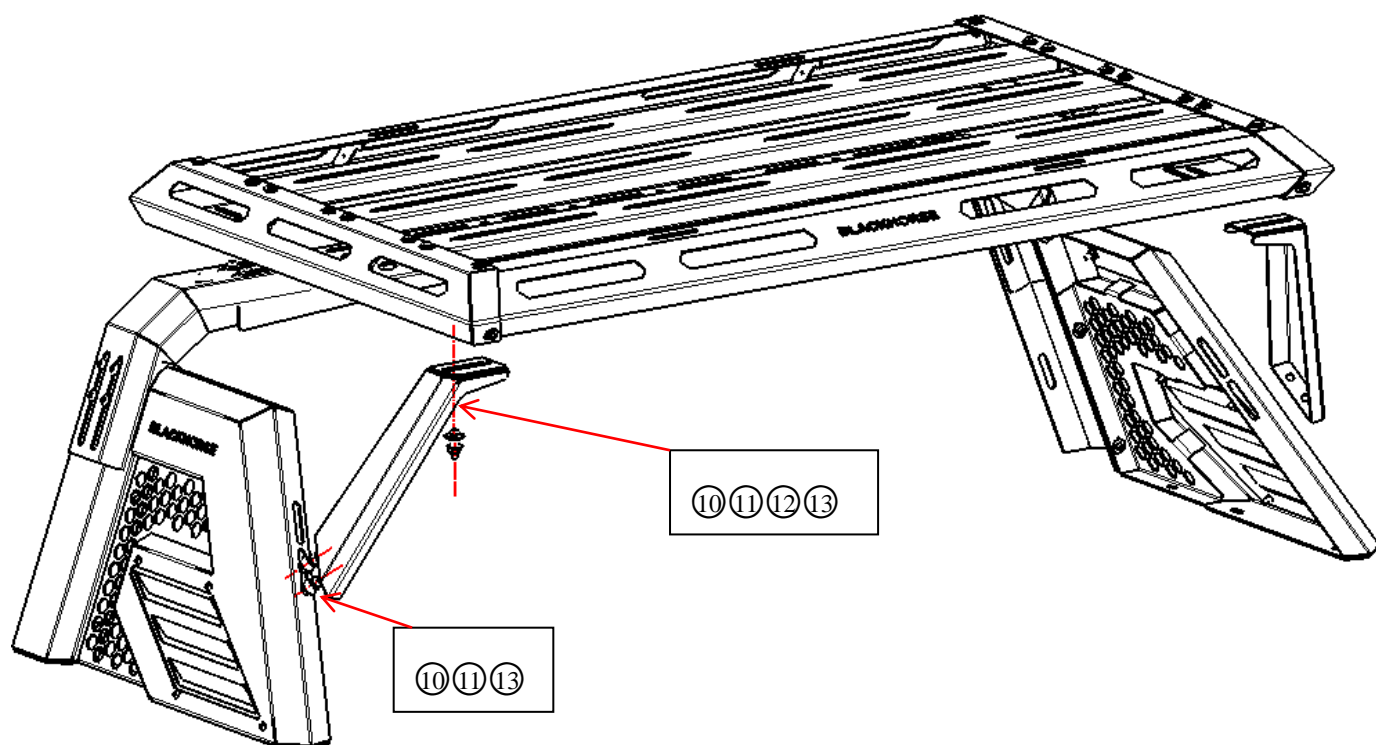
Installation Steps

Step1: Assemble beams with standard parts⑧⑨ as the following picture shown. Lock all the standard parts after adjust the position.

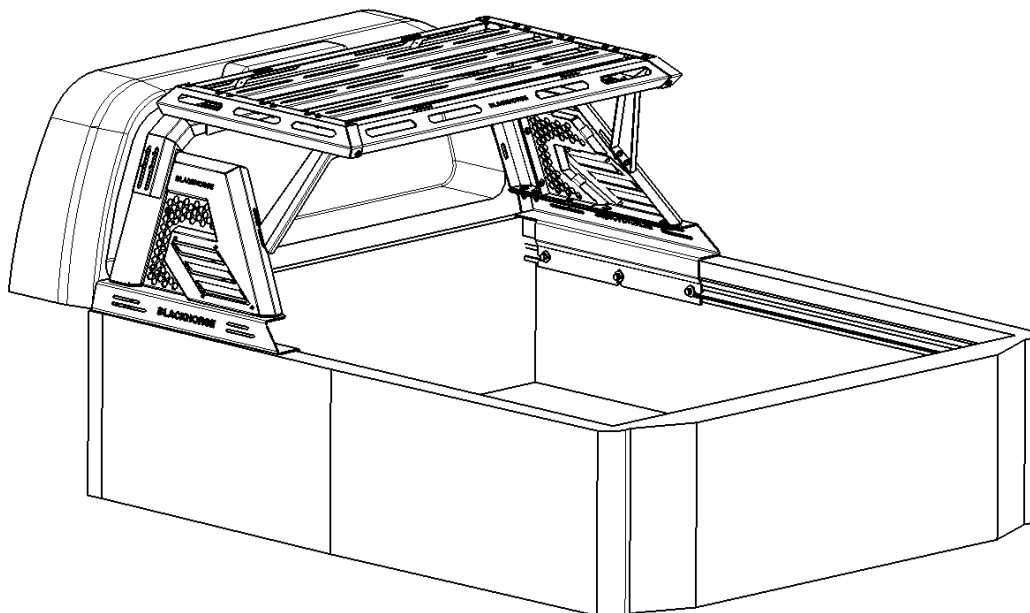


Step2: Connect the roof basket with ARMOUR II roll bar with ⑥connecting bracket, then Lock all the standard

parts ⑩⑪⑫⑬ after adjust the position, as the following pictures shown.



Step3: Installation completed and pick up all the tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.