



INSTALLATION INSTRUCTIONS

BLACK CLASSIC ROLL BAR FOR NISSAN FRONTIER 2005-2020

(FLAT BASE WITH LED BRAKE LIGHT)

PART # RB-NIFRB

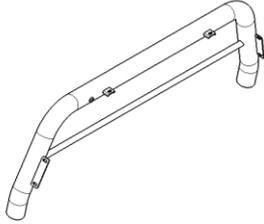
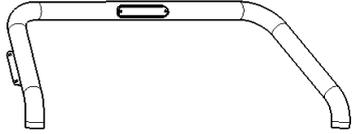
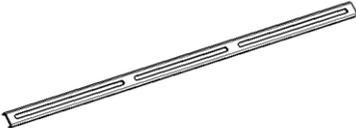

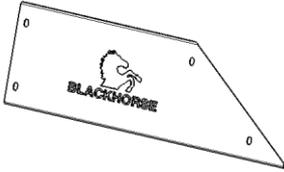
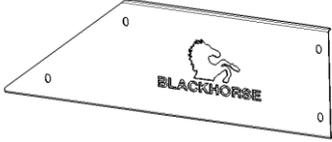
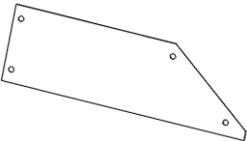
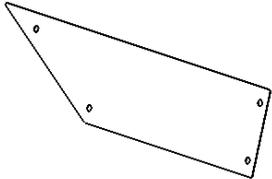
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.






Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Pipe 1	②	1	 Pipe 2
③	1	 Connecting plate (FOR LED LIGHT INSTALLATION)	④	2	 Block
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	2	 Red decoration plate	⑧	2	 Decoration plate backboard

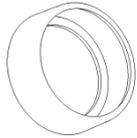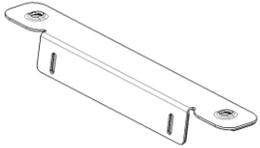
BLACK CLASSIC ROLL BAR FOR NISSAN FRONTIER 2005-2020 (FLAT BASE WITH LED BRAKE LIGHT)

9	4	 Gum cover	10	2	 Bracket
11	4	 Flat head allen bolts M12_40	12	2	 Button head allen bolts M8_40
13	2	 Spring washer D8	14	4	 Flat washer D8
15	2	 Hex nut M8	16	4	 Hex nut M12
17	4	 Hex nut M12_40	18	8	 Flat washer D12
19	4	 Spring washer D12	20	8	 Spring washer D6
21	16	 Flat washer D6	22	8	 Hex nut M6
23	8	 Button head allen bolts M6_20	24	1	 Allen wrench S=2.5
25	1	 Allen wrench S=4	26	1	 Allen wrench S=5
27	1	 Allen wrench S=8			

Installation Steps


Step1: Assemble ① and ② with standard parts. Lock all the standard parts after adjust the position.

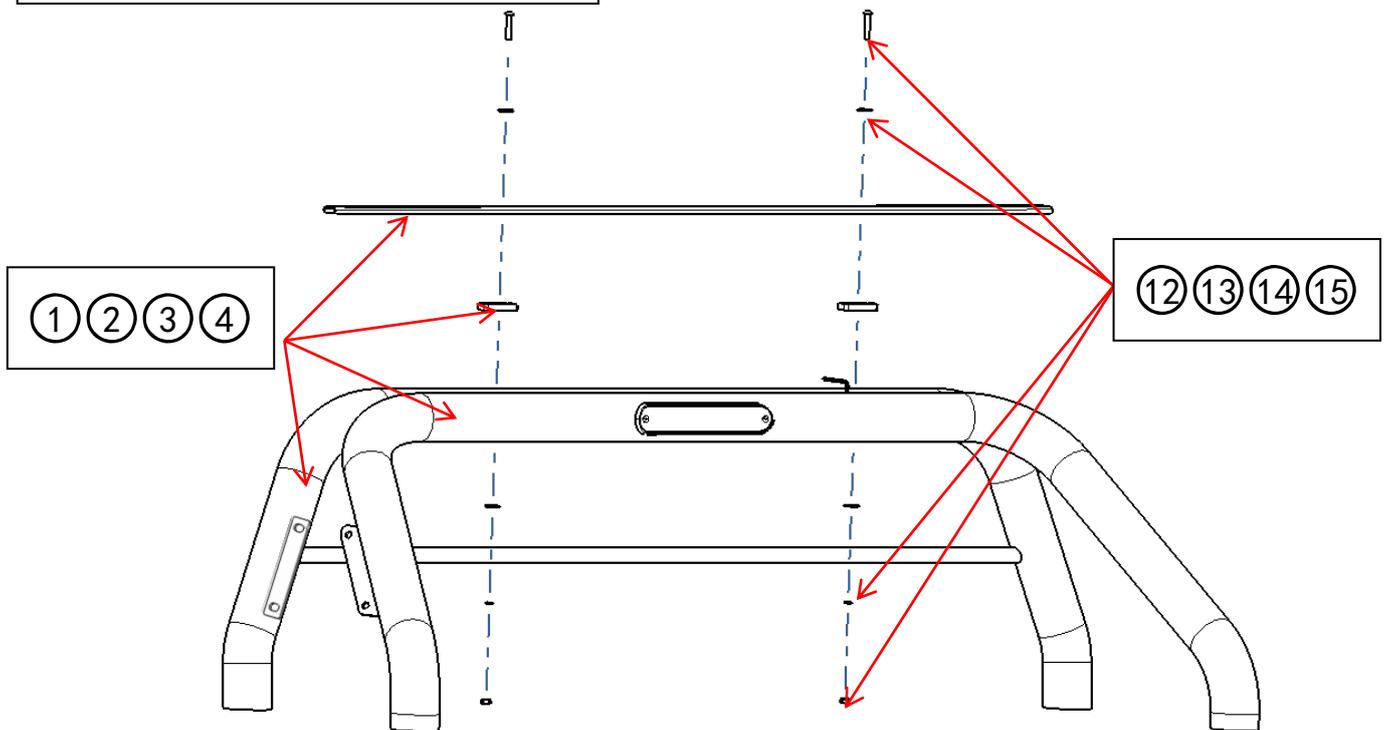Use standard parts ⑫ ⑬ ⑭ ⑮ to connect ① ② ③ ④. 2 places.




Step2: Assemble decoration plates and brackets with pipes. Lock all the standard parts after adjust the position.

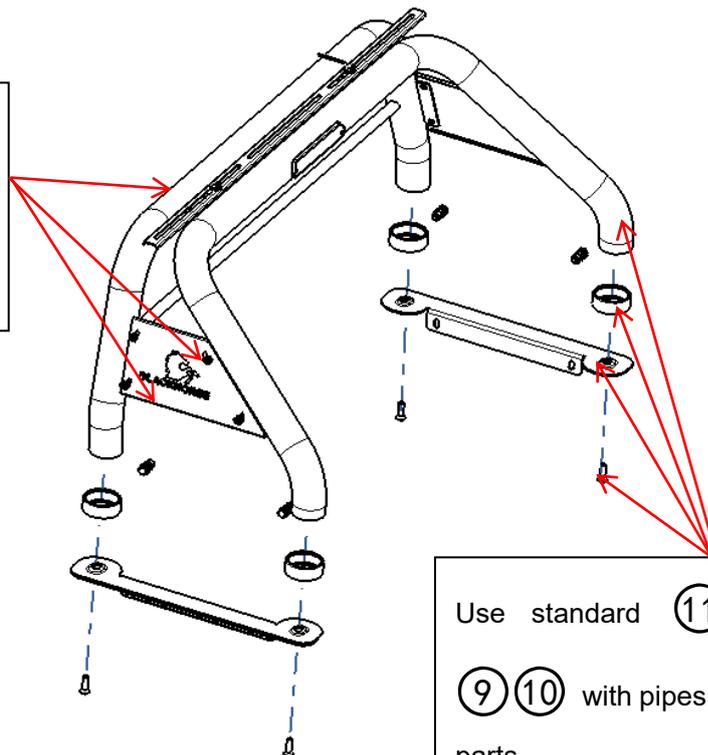Use standard ⑳ ㉑ ㉒ ㉓ to connect ⑤ ⑥ ⑦ ⑧ with pipes, 4 holes in both parts.



Use standard ⑪ to connect ⑨ ⑩ with pipes, 2 holes in both parts.

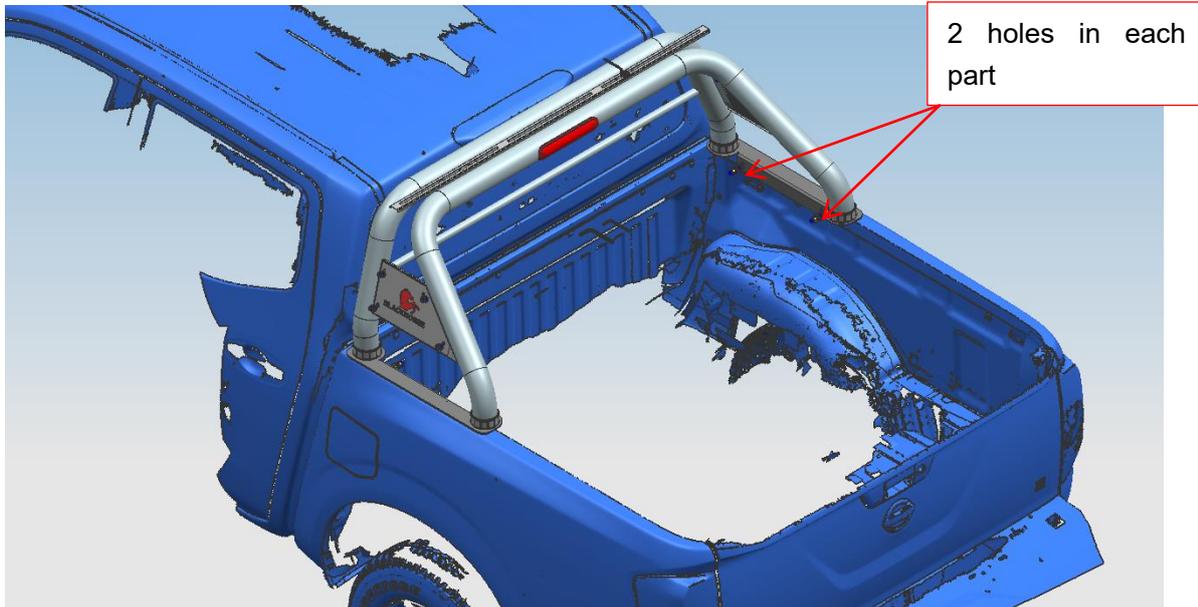Step3: Put roll bar on the truck in an appropriate place. And use pen to mark the holes. 2 places in both parts, 4 places total. Remove the roll bar then drill the size of $\Phi 14$ holes. Put the roll bar back and use standard (16) (17) (18) (19) to fasten.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.