

TRAVELER OVERLAND UTILITY BED RACK FOR 15+ CHEVY COLORADO/05+ TOYOTA TACOMA
(INSTALL INTO UTILITY TRACK)/19+ FORD RANGER /05+ NISSAN FRONTIER



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

TRAVELER OVERLAND UTILITY BED RACK

**FOR 15+ CHEVY COLORADO/05+ TOYOTA TACOMA (INSTALL INTO
UTILITY TRACK)/19+ FORD RANGER /05+ NISSAN FRONTIER**

PART # TR08B

PROTECTED BY ONE OR MORE PATENT




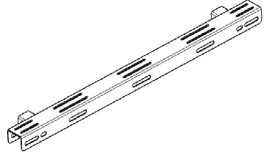


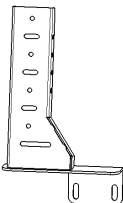

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.










Care and Cleaning

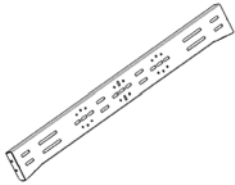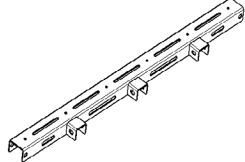- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 Side beam	②	2	 Longitudinal beam
③	3	 Intermediate beam	④	2	 Cross beam
⑤	4	 Support base 1	⑥	2	 Support base 2 (R)
⑦	2	 Support base 2 (L)	⑧	8	 Nut plate 2 (FRONTIER)


**TRAVELER OVERLAND UTILITY BED RACK FOR 15+ CHEVY COLORADO/05--+ TOYOTA TACOMA
(INSTALL INTO UTILITY TRACK)/19+ FORD RANGER /05+ NISSAN FRONTIER**

⑨	4	 Auxiliary bracket tape (FRONTIER)	⑩	2	 Single-sided adhesive tape 3 (L)
⑪	2	 Single-sided adhesive tape 3 (R)	⑫	4	 Single-sided adhesive tape 4
⑬	4	 Single-sided adhesive tape 5 (RANGER)	⑭	4	 Reinforcing plate (RANGER)
⑮	4	 Single-sided adhesive tape 5 (COLORADO)	⑯	4	 Single-sided adhesive tape 5 (TACOMA)
⑰	8	 T bolt M8x25 (TACOMA)			

Standard parts:

NO.	NAME	QTY	NOTE
18	Allen wrench S=5	1	MAIN PART
19	Lock washer D8	60	
20	Flat washer D8 (8x24x2mm)	60	
21	Hex flange nut M8	60	
22	Button head bolt M8_25	60	
23	Lock washer D10	16	FRONTIER
24	Flat washer D10 (10x30x2.5mm)	16	
25	Hex bolt M10_20	8	
26	Hex bolt M10_25	8	
27	Lock washer D10	8	RANGER
28	Flat washer D10 (10x30x2.5mm)	8	
29	Hex bolt M10_35	8	
30	Lock washer D10	8	COLORADO
31	Flat washer D10 (10x30x2.5mm)	16	
32	Hex nut M10	8	
33	Hex bolt M10_35	8	
34	Flat washer D8 (8x28x3mm)	8	TACOMA
35	Hex lock nut M8	8	


Installation Figure

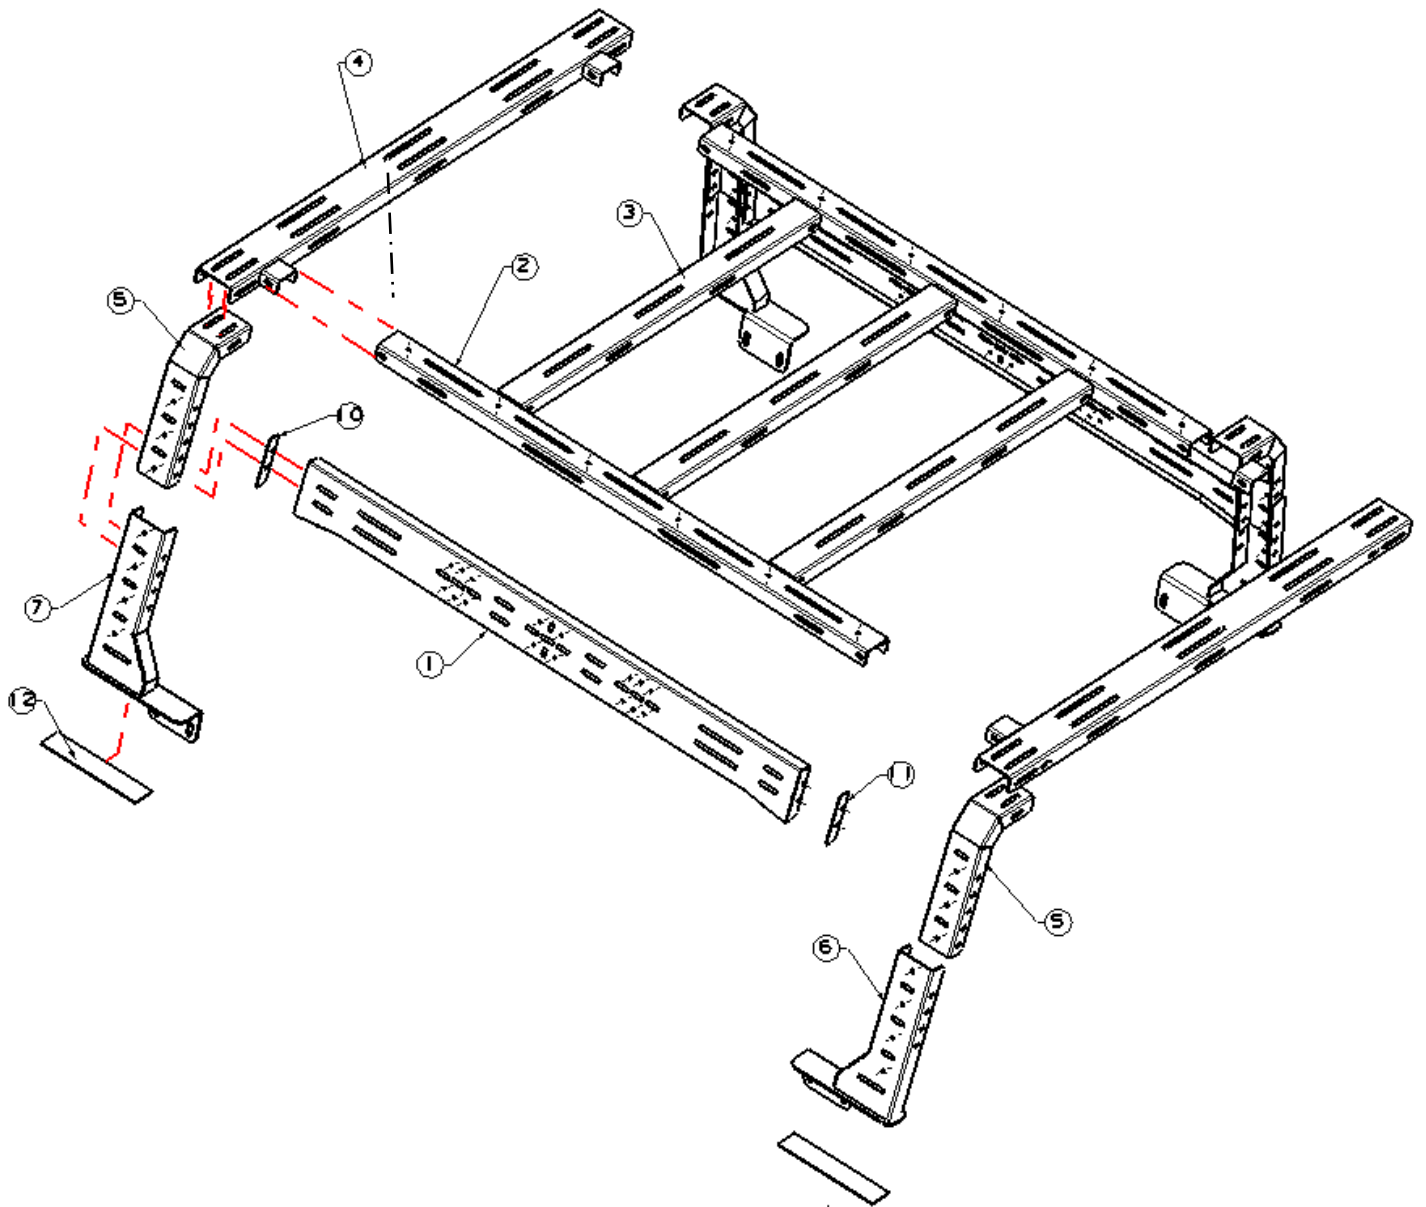


Step 1: Verify that all parts are present according to the manual.

Step 2: Using hardware ①②③④ to connect Intermediate beam ③ and Longitudinal beam ②.

TRAVELER OVERLAND UTILITY BED RACK FOR 15+ CHEVY COLORADO/05-+ TOYOTA TACOMA
(INSTALL INTO UTILITY TRACK)/19+ FORD RANGER /05+ NISSAN FRONTIER

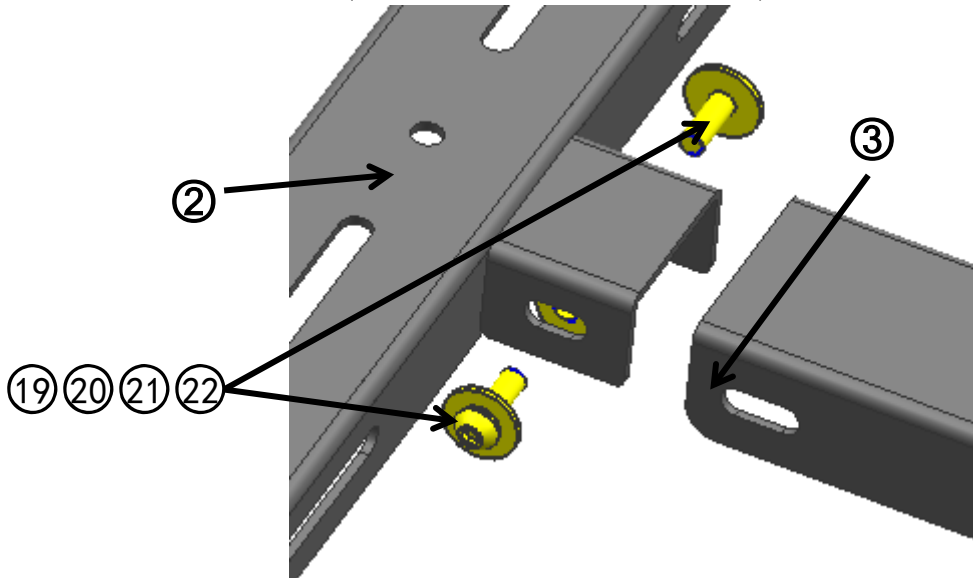


Step 3: Using hardware (19) (20) (21) (22) to connect Cross beam (4) and Longitudinal beam (2).


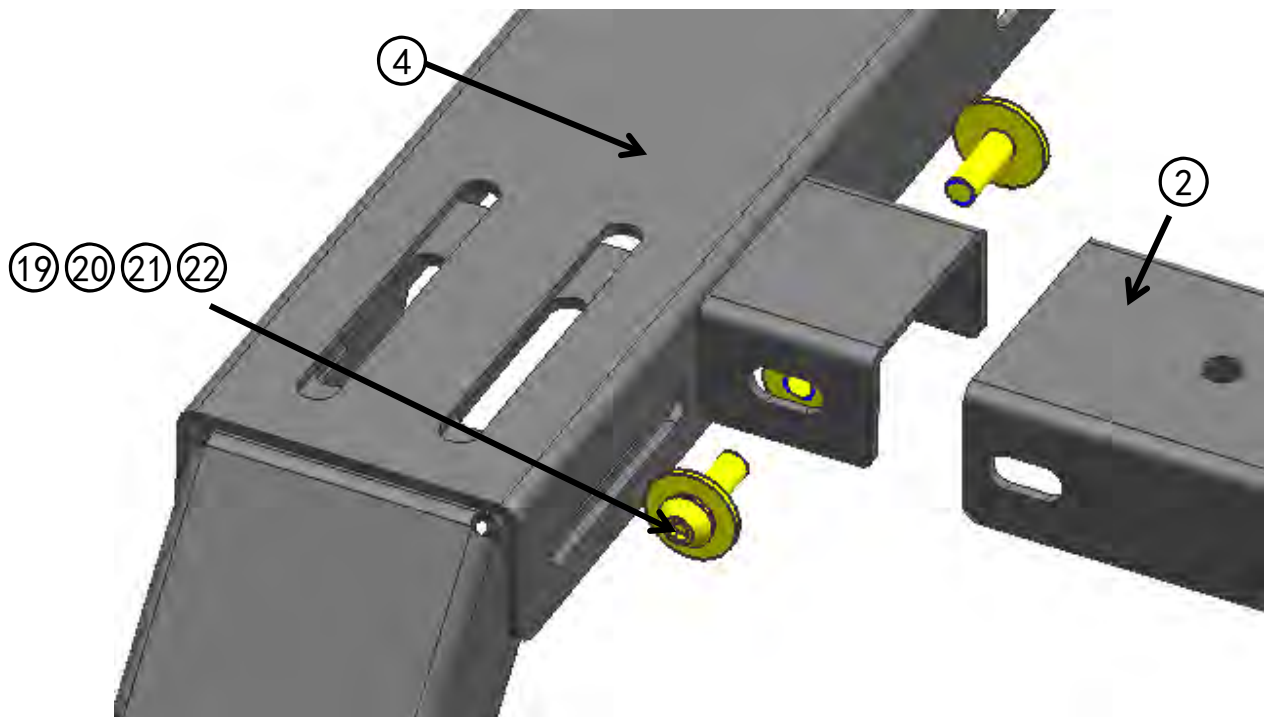


Step4: Using hardware (19) (20) (21) (22) to install Side beam (1), Longitudinal beam1 (5) and Support base 2 (6) (7), do not tighten all the hardware.

TRAVELER OVERLAND UTILITY BED RACK FOR 15+ CHEVY COLORADO/05+ TOYOTA TACOMA
(INSTALL INTO UTILITY TRACK)/19+ FORD RANGER /05+ NISSAN FRONTIER

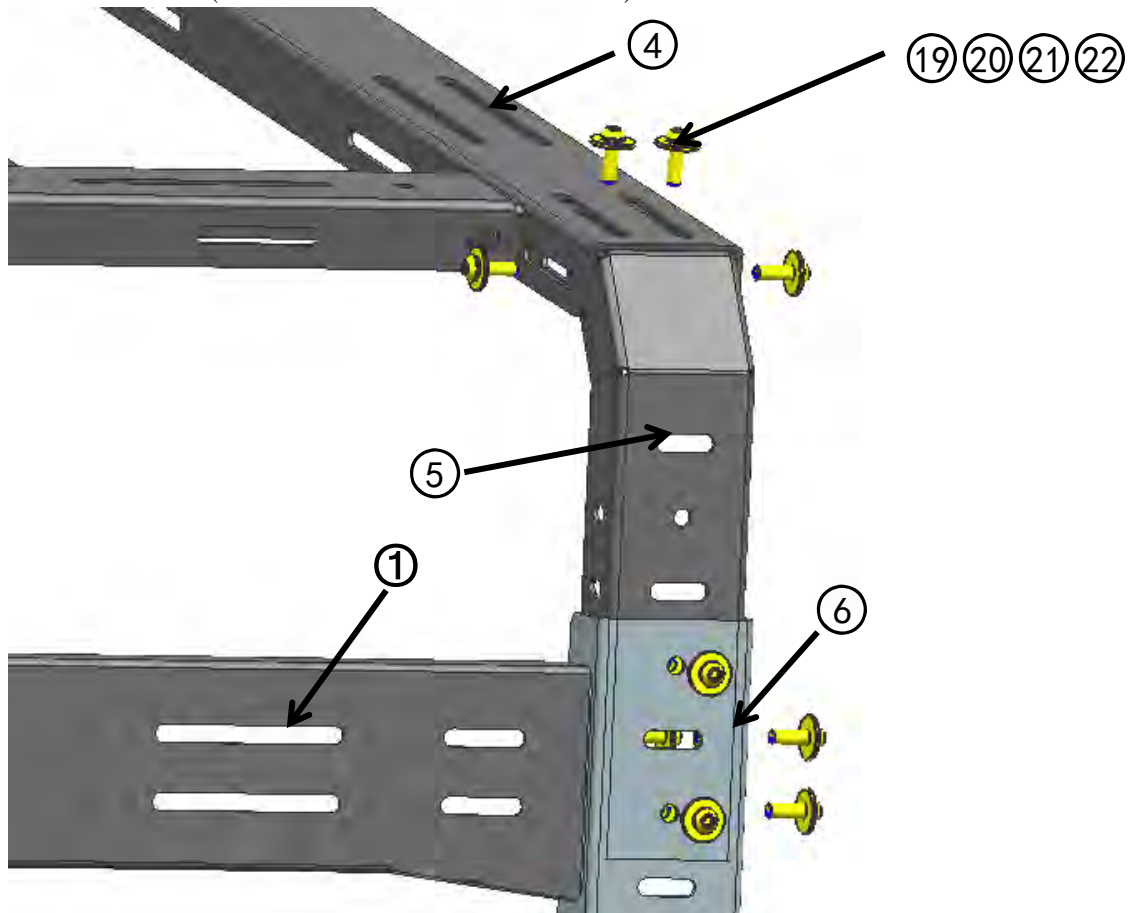


Step 5.1 (FRONTIER): Slide Nut plates (8) in the truck, and then use hardware (23) (24) (26) to connect (9) with (8). Use hardware (23) (24) (25) to install (9) with (6) / (7), do not tighten all the hardware.

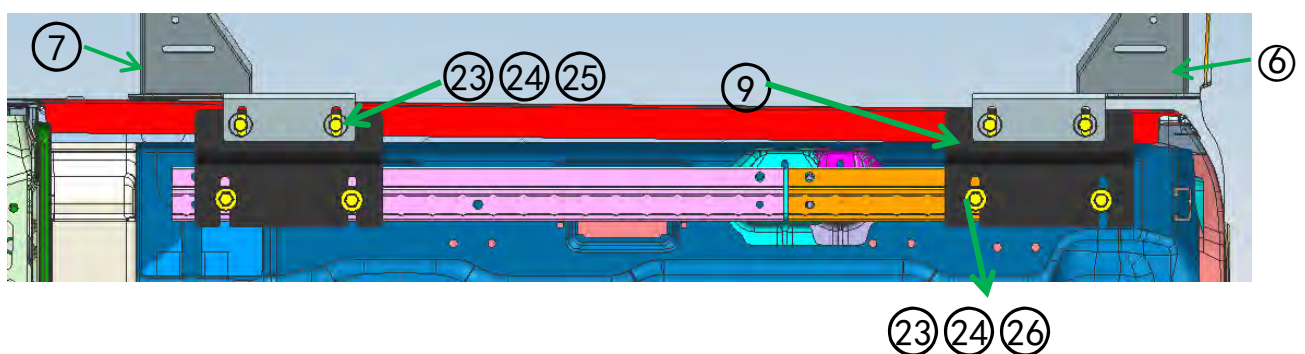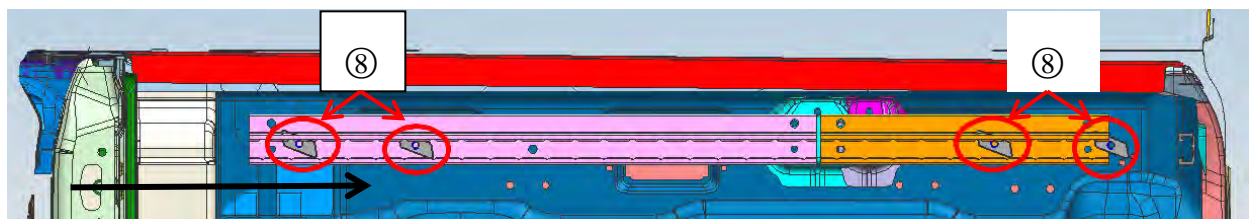


Step 5.2 (RANGER): Use hardware (14) (27) (28) (29) to install TRUCK BED RACK on the truck, do not tighten all the hardware.

TRAVELER OVERLAND UTILITY BED RACK FOR 15+ CHEVY COLORADO/05+ TOYOTA TACOMA
(INSTALL INTO UTILITY TRACK)/19+ FORD RANGER /05+ NISSAN FRONTIER

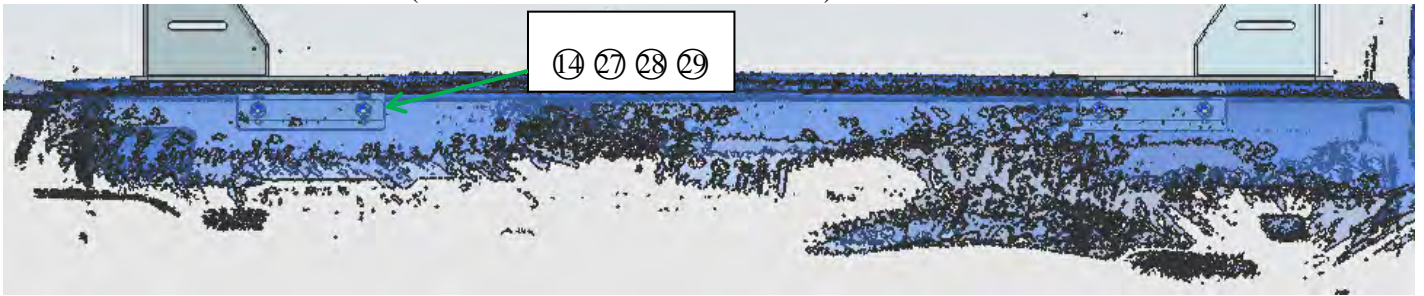


Step 5.3 (COLORADO): Use hardware ③① ③① ③② ③③ to install TRUCK BED RACK on the truck, do not tighten all the hardware.

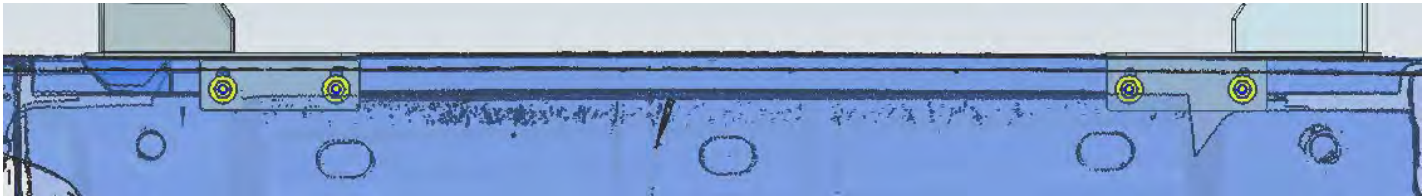

Step 5.4 (TACOMA): Use hardware ①⑦ ③④ ③⑤ to install TRUCK BED RACK on the truck, do not tighten all the hardware.



Step 6: Complete installation, pick up all tools.

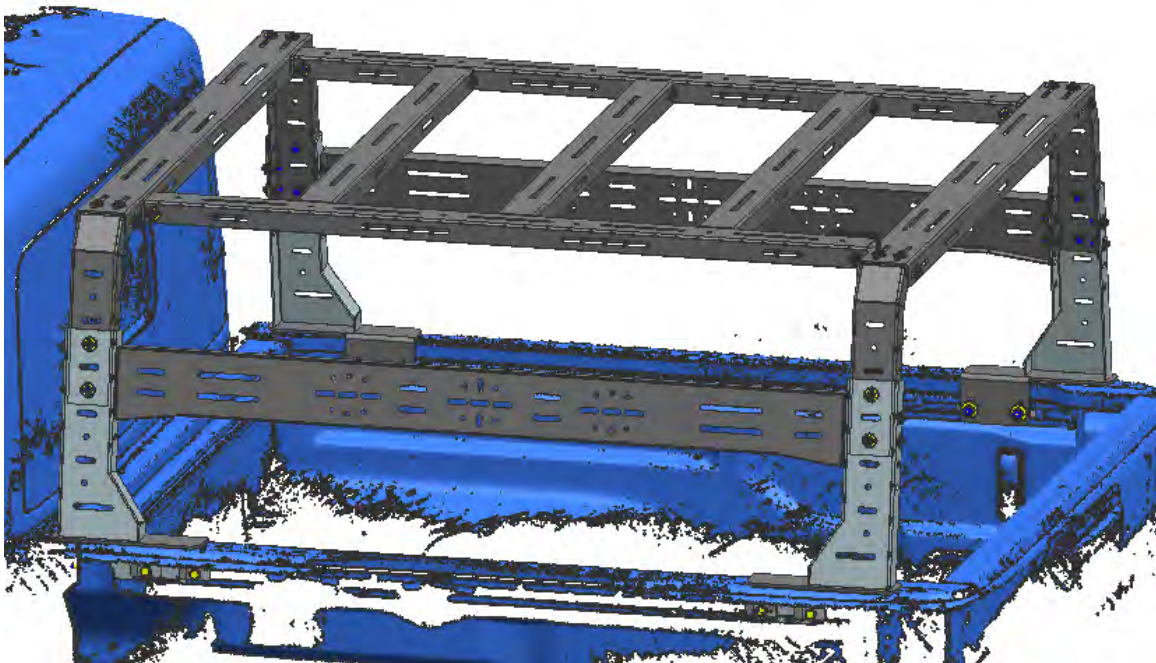

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.