



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

TRAVELER OVERLAND UTILITY BED RACK

FOR 20+ JEEP GLADIATOR

PART # TR09B

PROTECTED BY ONE OR MORE PATENT

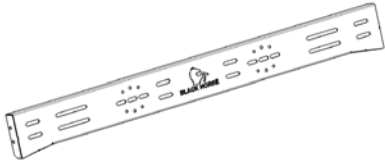
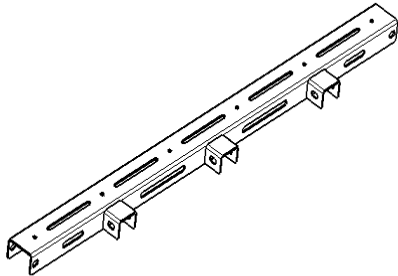
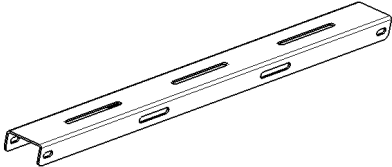
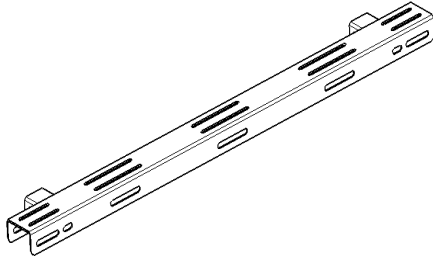

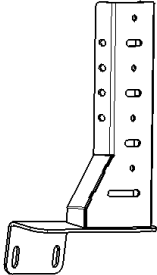
Before Installation

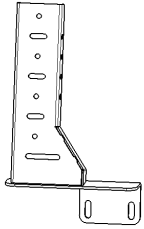
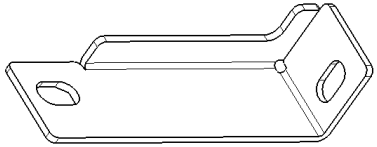
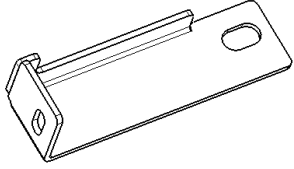




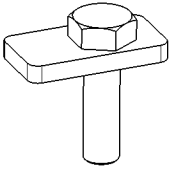




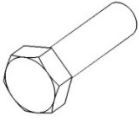



- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 <p>Side beam</p>	②	2	 <p>Longitudinal beam</p>
③	3	 <p>Intermediate beam</p>	④	2	 <p>Cross beam</p>
⑤	4	 <p>Support base 1</p>	⑥	2	 <p>Support base 2 (R)</p>


⑦	2		⑧	1	
		Support base 2 (L)			Bracket (L)
⑨	1		⑩	2	
		Bracket (R)			Single-sided adhesive tape 3 (L)
⑪	2		⑫	4	
		Single-sided adhesive tape 3 (R)			Single-sided adhesive tape 2
⑬	4		⑭	8	
		Single-sided adhesive tape 1			T bolt M10*30
⑮	8		⑯	8	
		Flat washer D10 (10x30x2.5mm)			Lock washer D10
⑰	8		⑱	2	
		Hex nut M10			Lock washer D8
⑲	2		⑳	2	
		Hex bolt M8_25			Flat washer D8 (8x24x2mm)
㉑	60		㉒	1	
		8mm Assembly Bolt			Allen wrench S=5

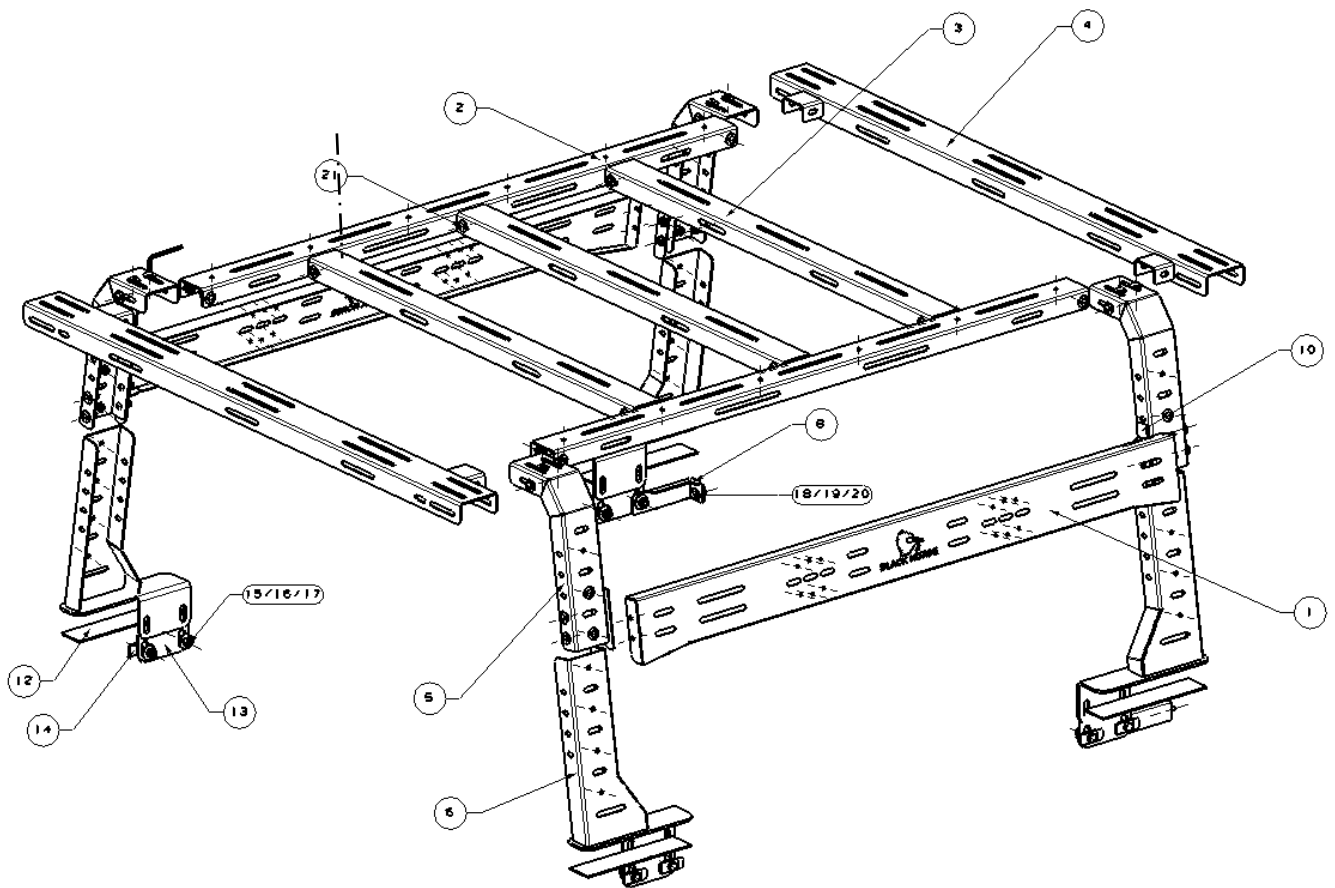Installation Figure




Step 1: Verify that all parts are present according to the manual.

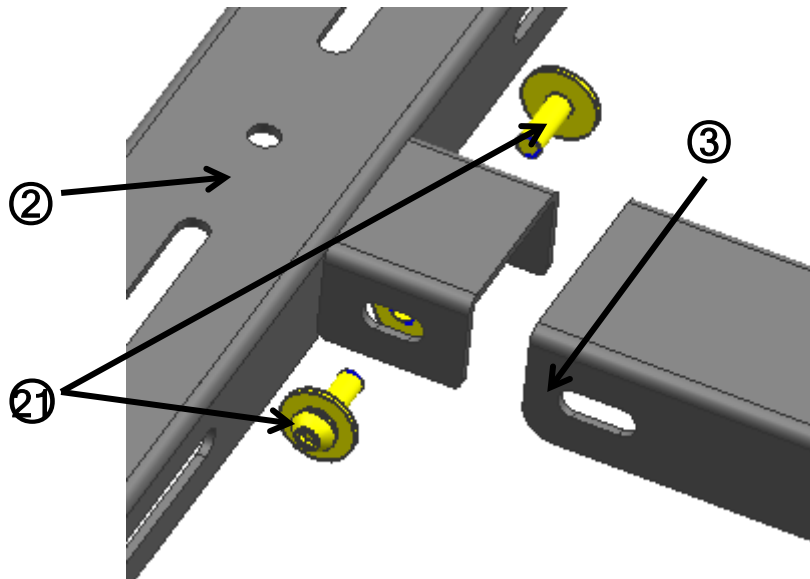
Step 2: Using hardware (21) connect Intermediate beam (3) and Longitudinal beam (2).



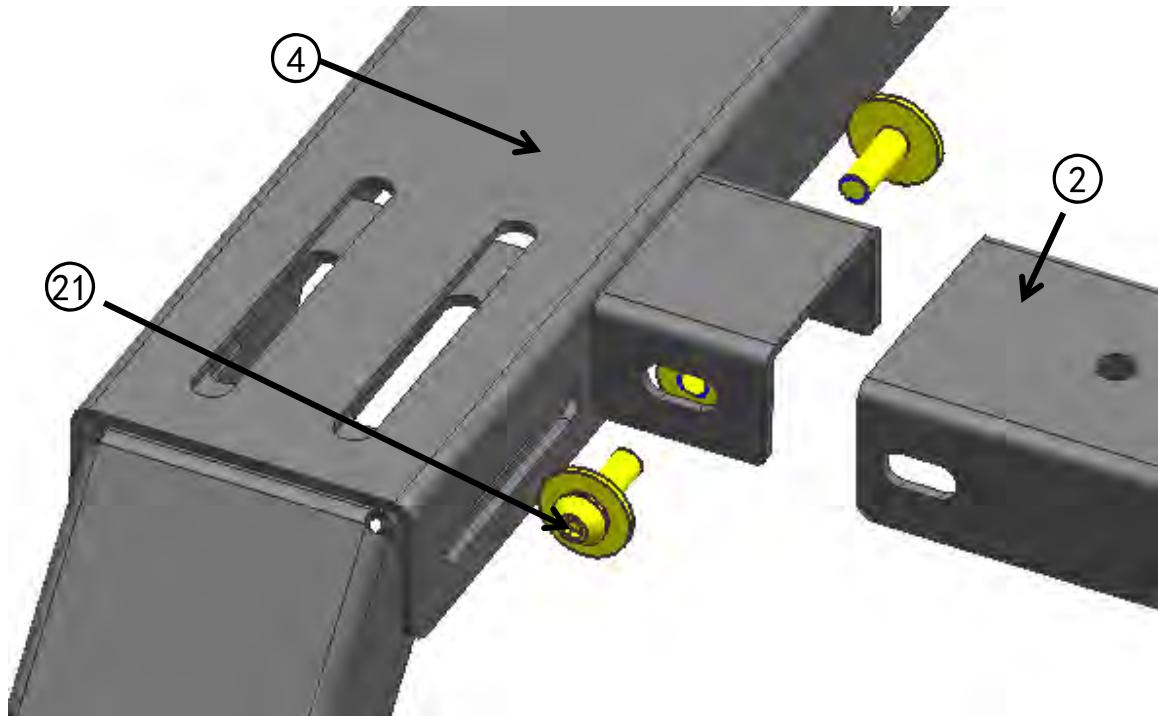
Step 3: Using hardware (21) connect Cross beam (4) and Longitudinal beam (2).



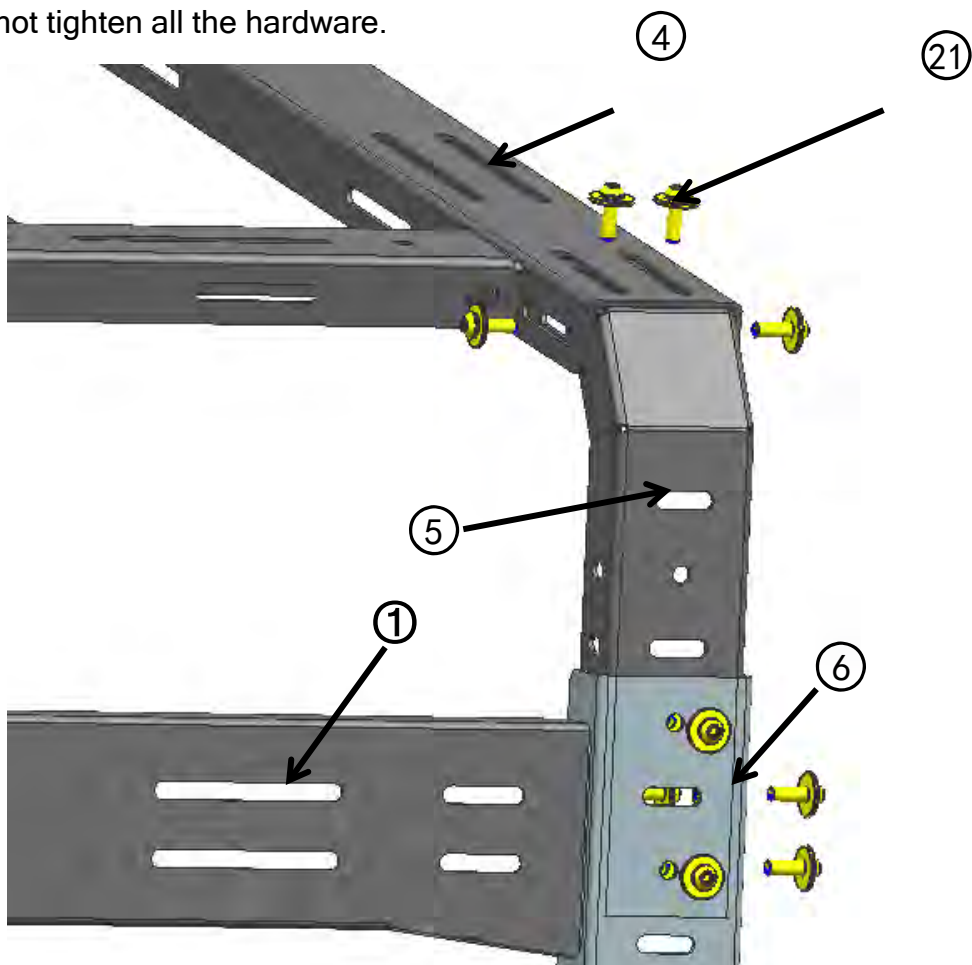
Step 4: Using hardware (21) connect Side beam (1), Longitudinal beam (5) and Support base (6), do not tighten all the hardware.



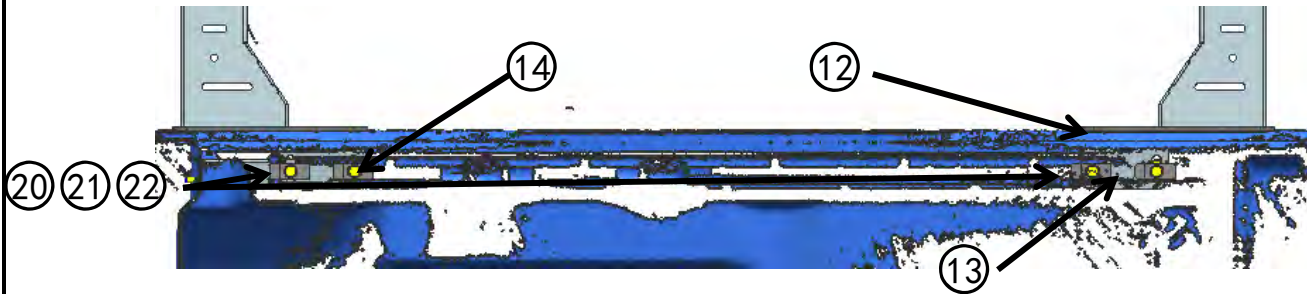
Step 5: Using Single-sided adhesive tape (12) (13) and T-Bolt (14) install the Support base 2 (6) (7) on the vehicle and tighten all the hardware.



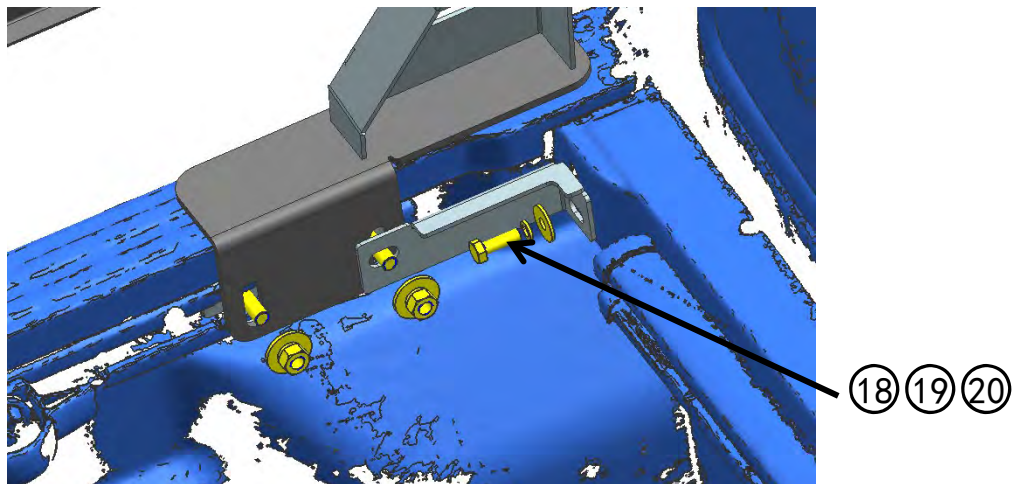Step 6: To lock the rack steady, connect bracket (8) with side rail with hardware (18) (19) (20)



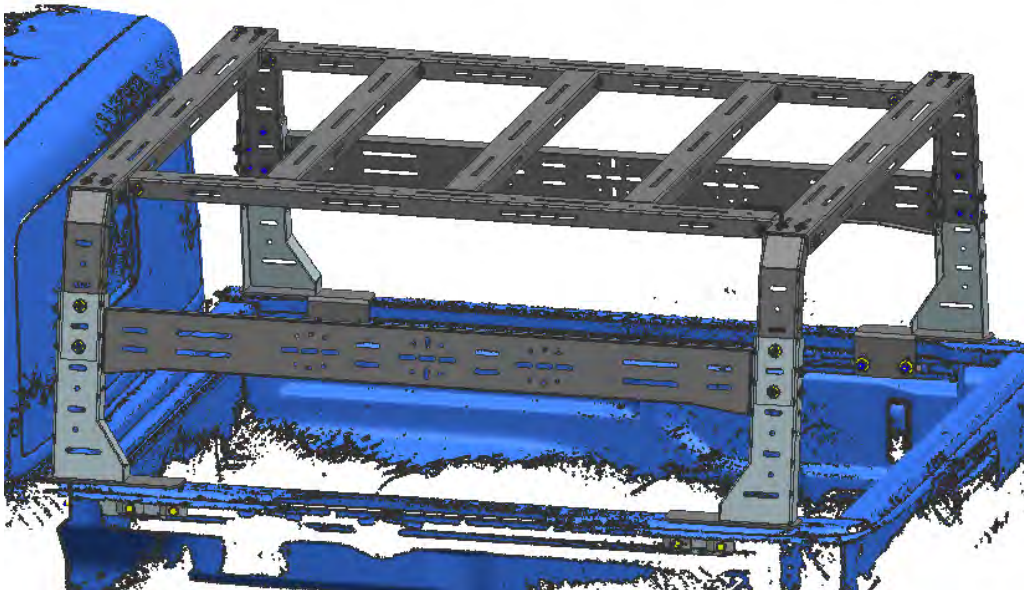Step 7: Complete installation, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.