




## **INSTALLATION INSTRUCTIONS**

**FOR**  
**CUTLASS RUNNING BOARDS - PART# BR-NIT-04-15**  
**EPIC RUNNING BOARDS & SE5 SIDEBARS - PART#E1685**  
**TO FIT**  
**04-15 NISSAN TITAN CREW CAB**  
**17-23 NISSAN TITAN CREW CAB**  
**16-23 NISSAN TITAN XD CREW CAB**

**PARTS LIST:**

2	Running Boards	12	8mm x 20mm T-Bolts
3	Driver/Left Mounting Brackets	18	8mm x 24mm OD x 2mm Flat Washers
3	Passenger/Right Mounting Brackets	6	8mm x 16mm OD x 1.6mm Flat Washers
6	Plastic Covers	24	8mm Lock Washers
12	Plastic Clips	12	8mm Hex Nuts
12	8mm x 30mm Hex Bolts	6	8mm Nylon Lock Nuts

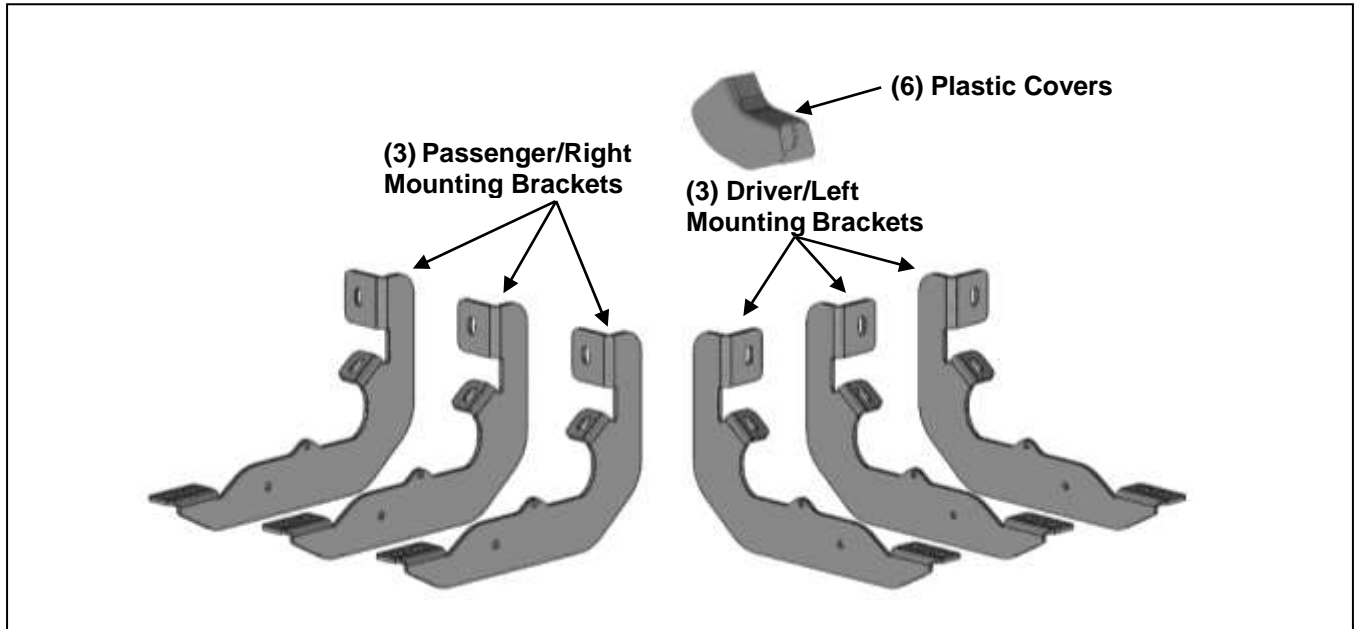
**INSTALLATION:**

VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

- Start at the front of the Passenger/Right of the vehicle and locate the 4 factory threaded holes or studs located on the side of the inner body panel, **(Fig.1 & 2)**. Brackets will use the 1st, 2nd and 4th threaded holes.
- NOTE:** Remove the plastic plug or any insulation on the side panel to locate the threaded holes.
- Select (1) Passenger/Right Mounting Bracket. Attach the Bracket to :
  - Models with threaded studs:** Attach the Bracket to stud with (1) 8mm x 18mm Flat Washer and (1) 8mm Nylon Lock Nut. Next, use (1) 8mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 24mm Flat Washer., **(Figure 4)**. Do not tighten.
  - Models without threaded stud:** Attach the Mounting Bracket to the top and bottom threaded holes using (1) 8mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 18mm Flat Washer for the top hole and (1) 8mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 24mm Flat Washer, for the bottom hole **(Figure 3)**. Do not tighten.
- Select (1) Plastic Cover. Attach the Cover to the Mounting Bracket with (2) Plastic Clips, **(Figure 5)**.
- Repeat **Steps 1—3** to attach the remaining (2) Passenger/Right Mounting brackets the center and rear mounting locations.
- Select (1) Running Board. Slide the (6) T-Bolts into the channels in the bottom of the Sidebar, (3) per channel, **(Figure 6)**. Attach the Sidebar to the Mounting Brackets with (6) 8mm Flat Washers, (6) 8mm Lock Washers and (6) 8mm Hex Nuts, **(Figures 7)**. Do not tighten.
- Level and adjust the Sidebar and tighten all hardware.
- Repeat **Steps 1—6** to attach (1) Board Sidebar to the Driver/Left side.
- Do periodic inspections of the installation to make sure that all hardware is tight.


**To protect your investment,** Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Sidebars.

### Passenger/Right Side Installation

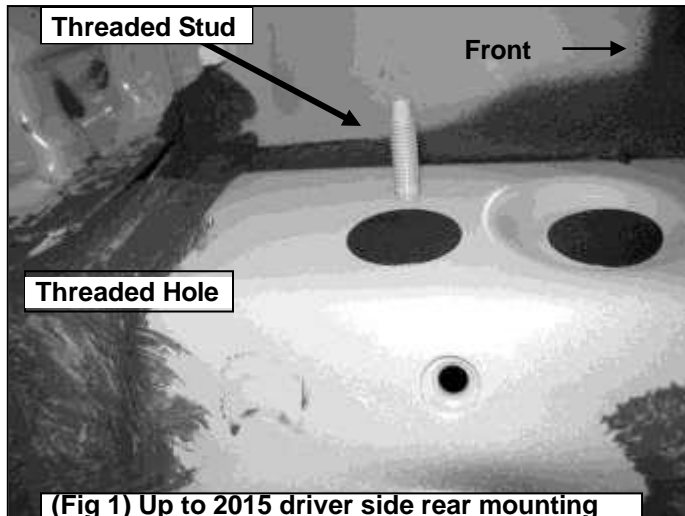


(Fig 1) Up to 2015 driver side rear mounting location pictured. Note: Remove plastic plugs to locate factory threaded holes

- (2) 8mm Hex Bolt
- (2) 8mm Lock Washer
- (2) 8mm x 18mm Flat Washer

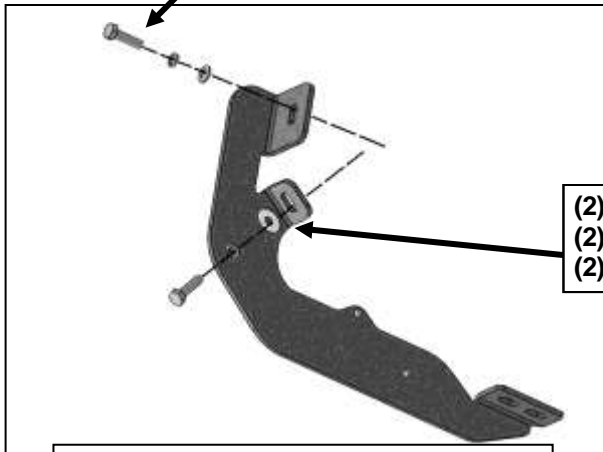


(Fig 3) Mounting Bracket installation for (2) threaded holes in rocker panel

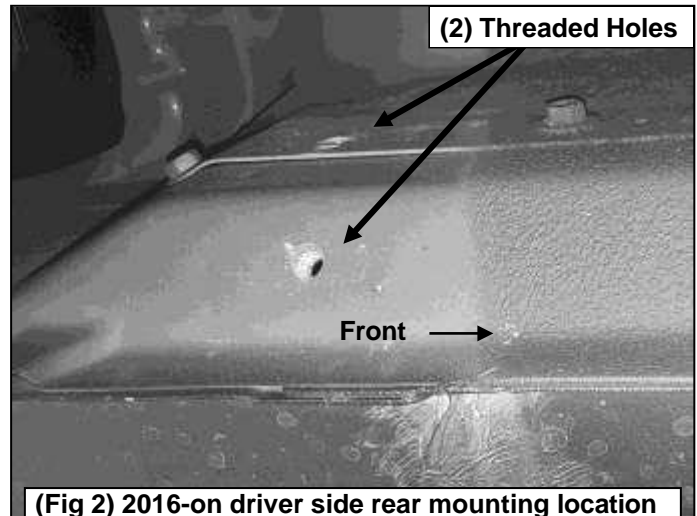


(Fig 2) 2016-on driver side rear mounting location pictured. Note: two factory threaded holes only


### Passenger/Right Side Installation Pictured

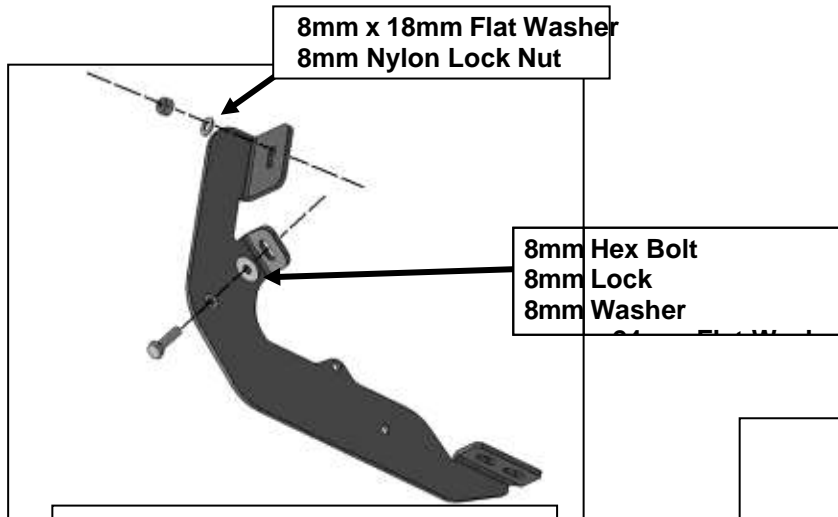


(Fig 4) Mounting Bracket installation for threaded stud and hole in rocker panel

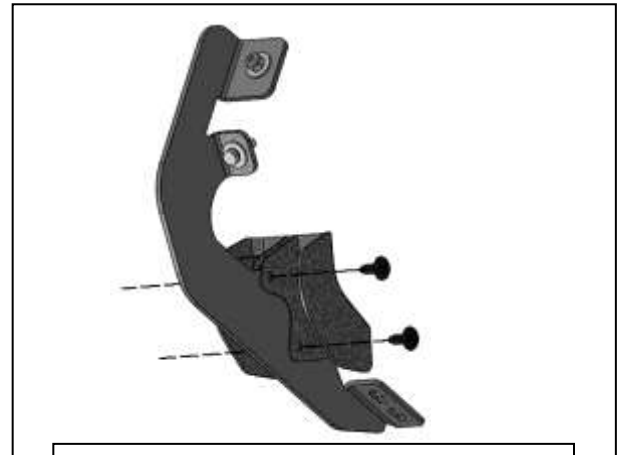

(Fig 5) Attach (1) Plastic Cover to the Mounting Bracket with (2) Plastic Clips

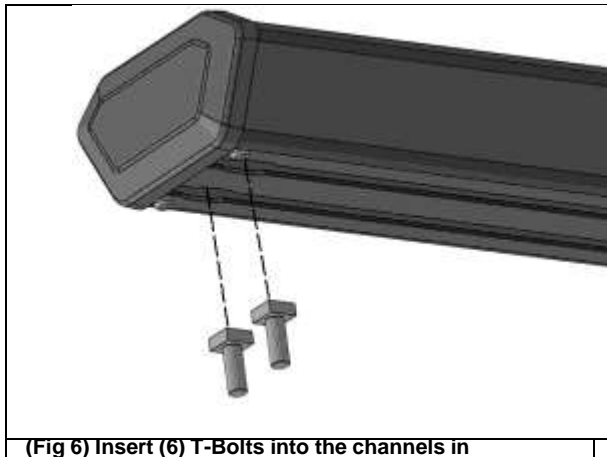

(Fig 6) Insert (6) T-Bolts into the channels in the bottom of the Running Board, (3) per channel

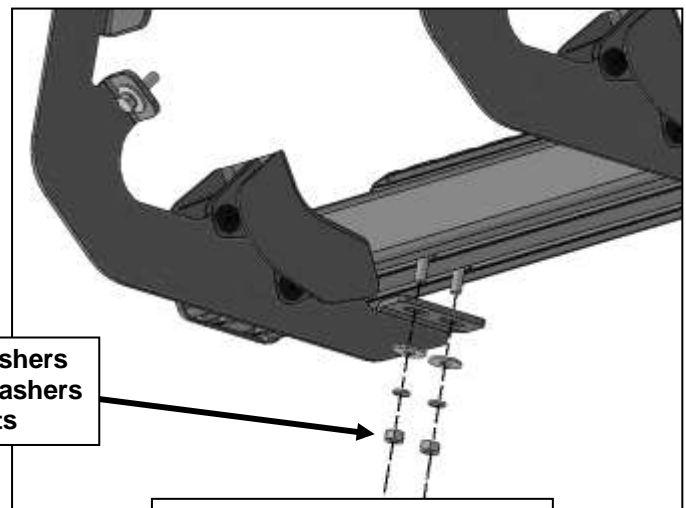

(Fig 7) Attach Running Board to the Mounting Brackets