



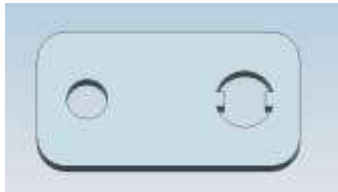
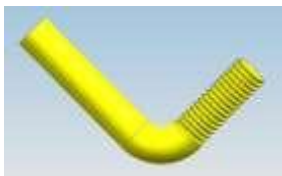
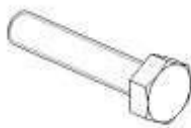
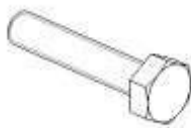
INSTALLATION INSTRUCTIONS

2021 2023 Kia Sorento

PART # PIK473

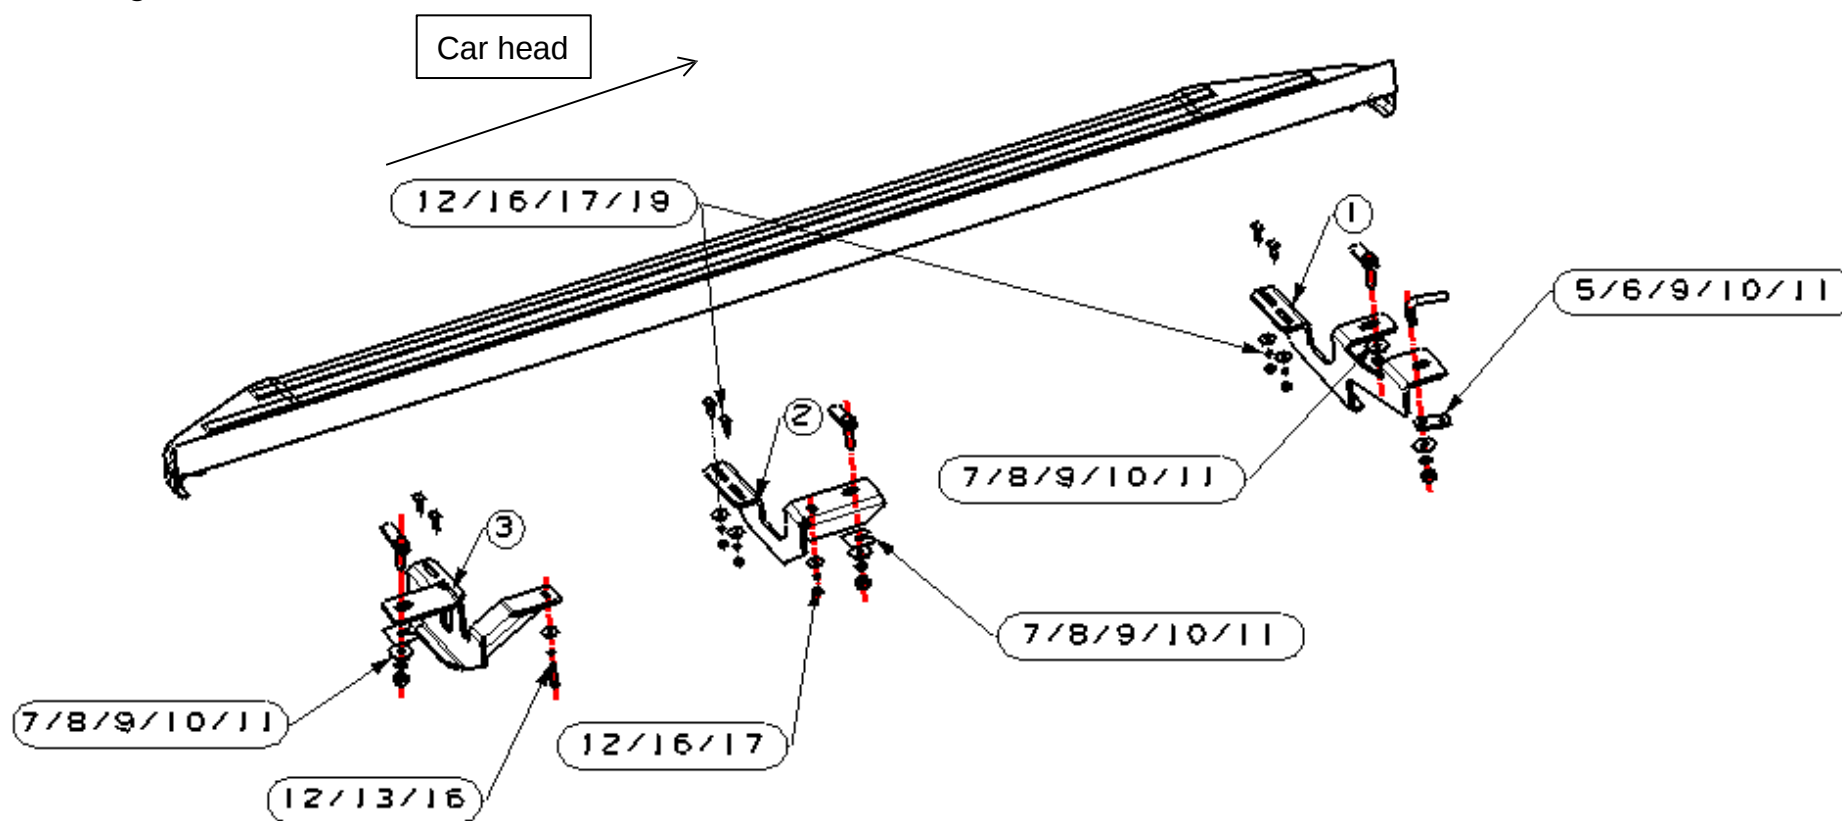
- **866-926-2867**
- Email: info@blackhorseoffroad.com
 - Mon-Fri 9AM-6PM EST
 - **Headquarters**
- 39 ST. MARY'S PLACE FREEPORT, NY 11520

PARTS LIST

NO.	QTY	PICTURE	NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front bracket (L)	②	2	 Middle bracket (L/R)	③	2	 Rear bracket (L/R)
④	1	 Front bracket (R)	⑤	2	 Connect plate	⑥	2	 Hook bolt
⑦	6	 T Bolt type 5 (M10x40 Hex Bolt)(60x16-15-5)(for ϕ 22-24 hole)	⑧	6	 M10 Plastic retainer	⑨	8	 Hex nut M10
⑩	8	 Lock washer D10	⑪	8	 Flat washer D10 (10x30x2.5mm)	⑫	17	 Flat washer D6 (6x22x2mm)
⑬	2	 Hex bolt (full thread) M6_30	⑭	2	 Hex bolt (full thread) M8_30	⑮	2	 Flat washer D8 (8x24x2mm)

16	17	 Lock washer D6	17	15	 Hex nut M6	18	2	 Lock washer D8
19	12	 T Bolt M6x20						

Installation Figure:

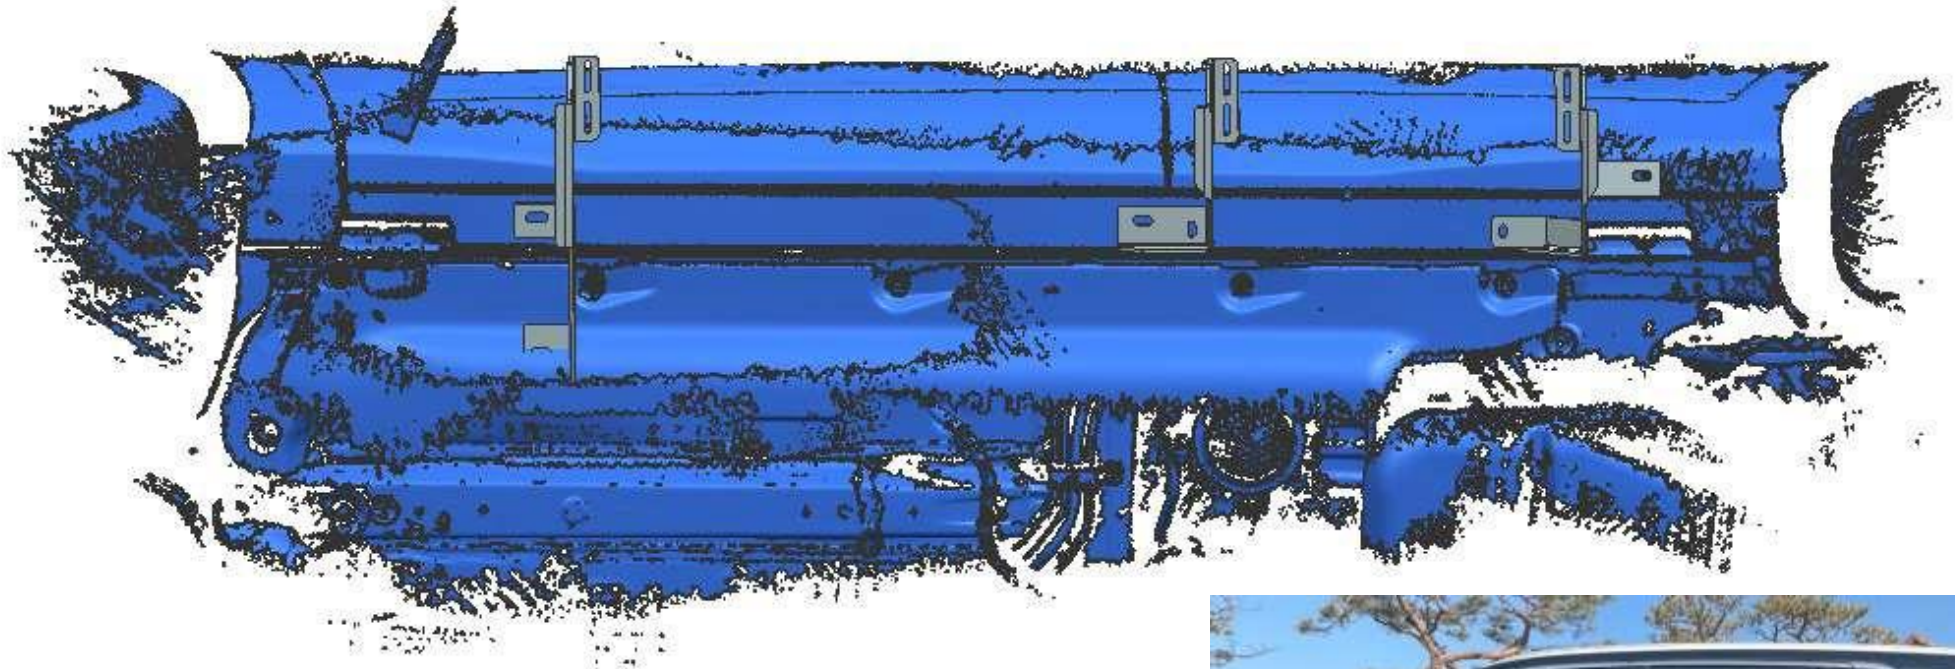


Step 1: Verify all parts are present.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation finished.



Complete Installation:

