

INSTALLATION INSTRUCTION

**2013 2019 Mitsubishi Outlander
PART #PIM170**



- [**866-926-2867**](tel:8669262867)
- Email:info@blackhorseoffroad.com
- Mon-Fri 9AM-6PM EST
- **Headquarters**
- 39 ST. MARY'S PLACE FREEPORT, NY 11520


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

PART LIST

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Running board	2		10	Hexagon Bolt	8	$\phi 8 \times 25$
2	Front Bracket	2		11	Large round head square neck bolt	8	$\phi 8 \times 35$
3	Rear Bracket (left)	1		12	Large Washer	18	$\phi 8 \times 25 \times 2.0$
4	Rear Bracket (right)	1		13	Spring Washer	18	$\phi 8$
5	Clamping bracket	4		14	Hexagon Nut	10	M8
6	T-Bolt 1	2		15	Large Washer	2	$\Phi 10 \times 30 \times 2.5$
7	T-Bolt 2	2		16	Spring Washer	2	$\Phi 10$
8	fixture block	4		17	Hexagon Nut	2	M10
9	Flat washer	1	$\Phi 24 \times 45 \times 3.0$				

INSTALLATION PICTURE

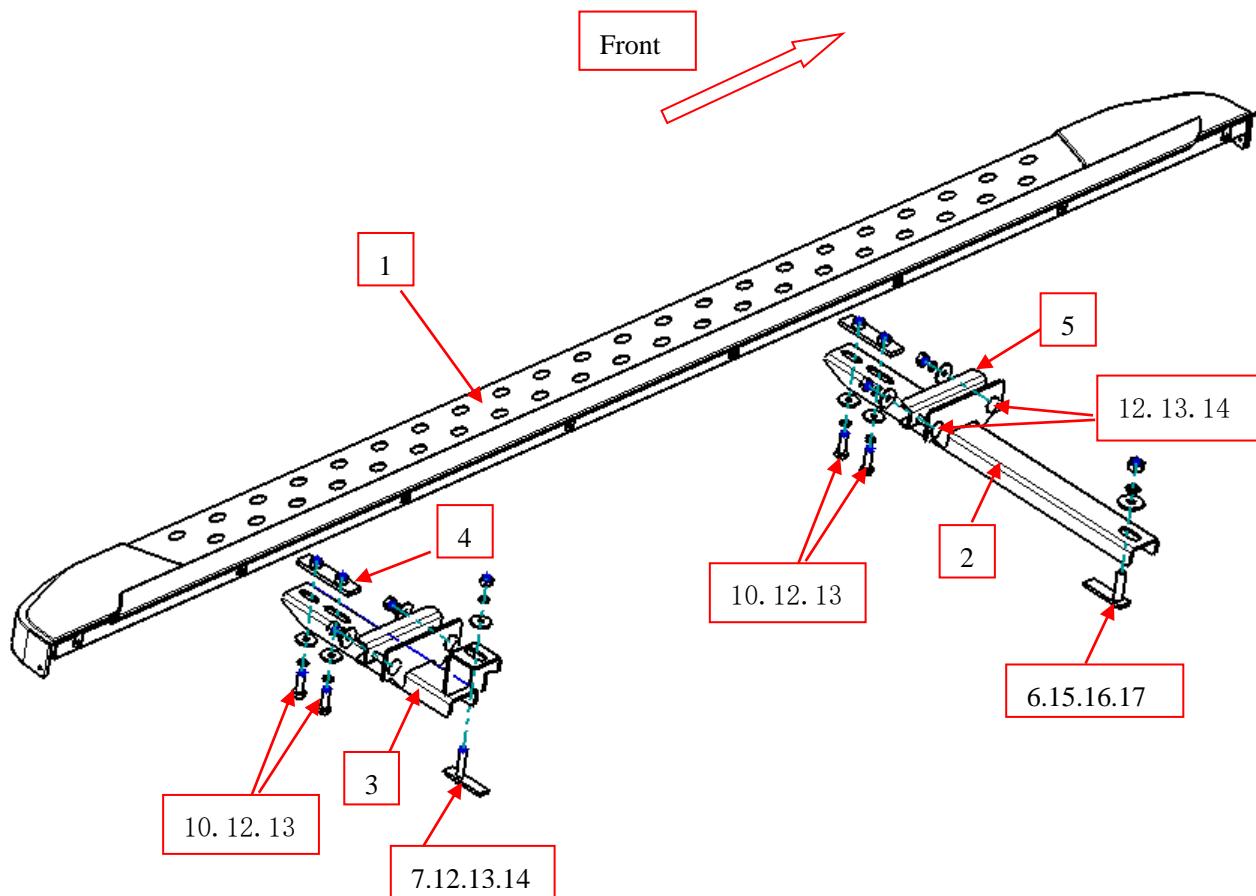

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's

quality assurance.