

INSTALLATION INSTRUCTIONS

| 2019 | 2023 | Toyota | Rav4 |
|------|------|--------|------|
| | | | |

2021 2023 Toyota Venza

PART # PIT370

- <u>866-926-2867</u>
- Email: info@blackhorseoffroad.com
 - Mon-Fri 9AM-6PM EST
 - Headquarters
- 39 ST. MARY'S PLACE FREEPORT, NY 11520

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

| NO. | QTY | PIC | NO. | QTY | PIC |
|-----|-----|-----------------------------|-----|-----|-----------------------------|
| 1 | 1 | Front mounting bracket (L) | 2 | 1 | Front mounting bracket (R) |
| 3 | 1 | Center mounting bracket (L) | 4 | 1 | Center mounting bracket (R) |
| 5 | 1 | Rear mounting bracket (L) | 6 | 1 | Rear mounting bracket (R) |
| 7 | 6 | Plastic buckle M8 | 8 | 4 | T-bolt M8 |

| 9 | 6 | T-bolt M10 | 10 | 6 | Plastic buckle M10 |
|------|---|---------------------|------|---|--------------------|
| 1 | 2 | Flat head T-bolt M8 | 12 | 6 | Hex nut M8 |
| (13) | 6 | Spring washer D8 | (14) | 6 | Flat washer D8 |
| (15) | 6 | Hex nut M10 | 16 | 6 | Spring washer D10 |
| 17 | 6 | Flat washer D10 | | | |

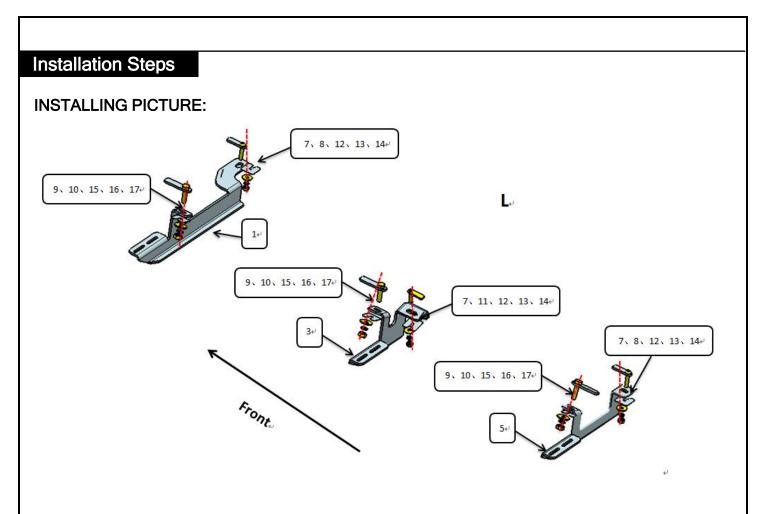

Step 1: Verify that all parts are present according to the manual.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.