

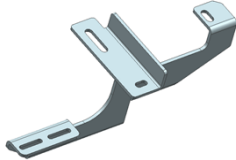
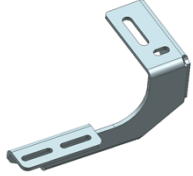
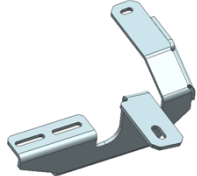
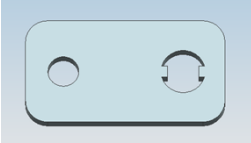
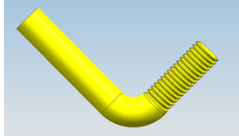

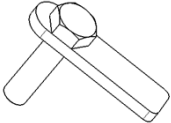
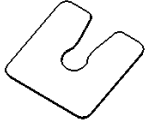




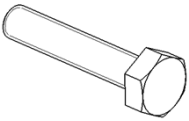
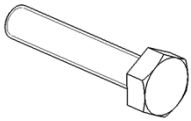



INSTALLATION INSTRUCTIONS

PREMIUM RUNNING BOARD FOR HYUNDAI PALISADE 2021 PART #

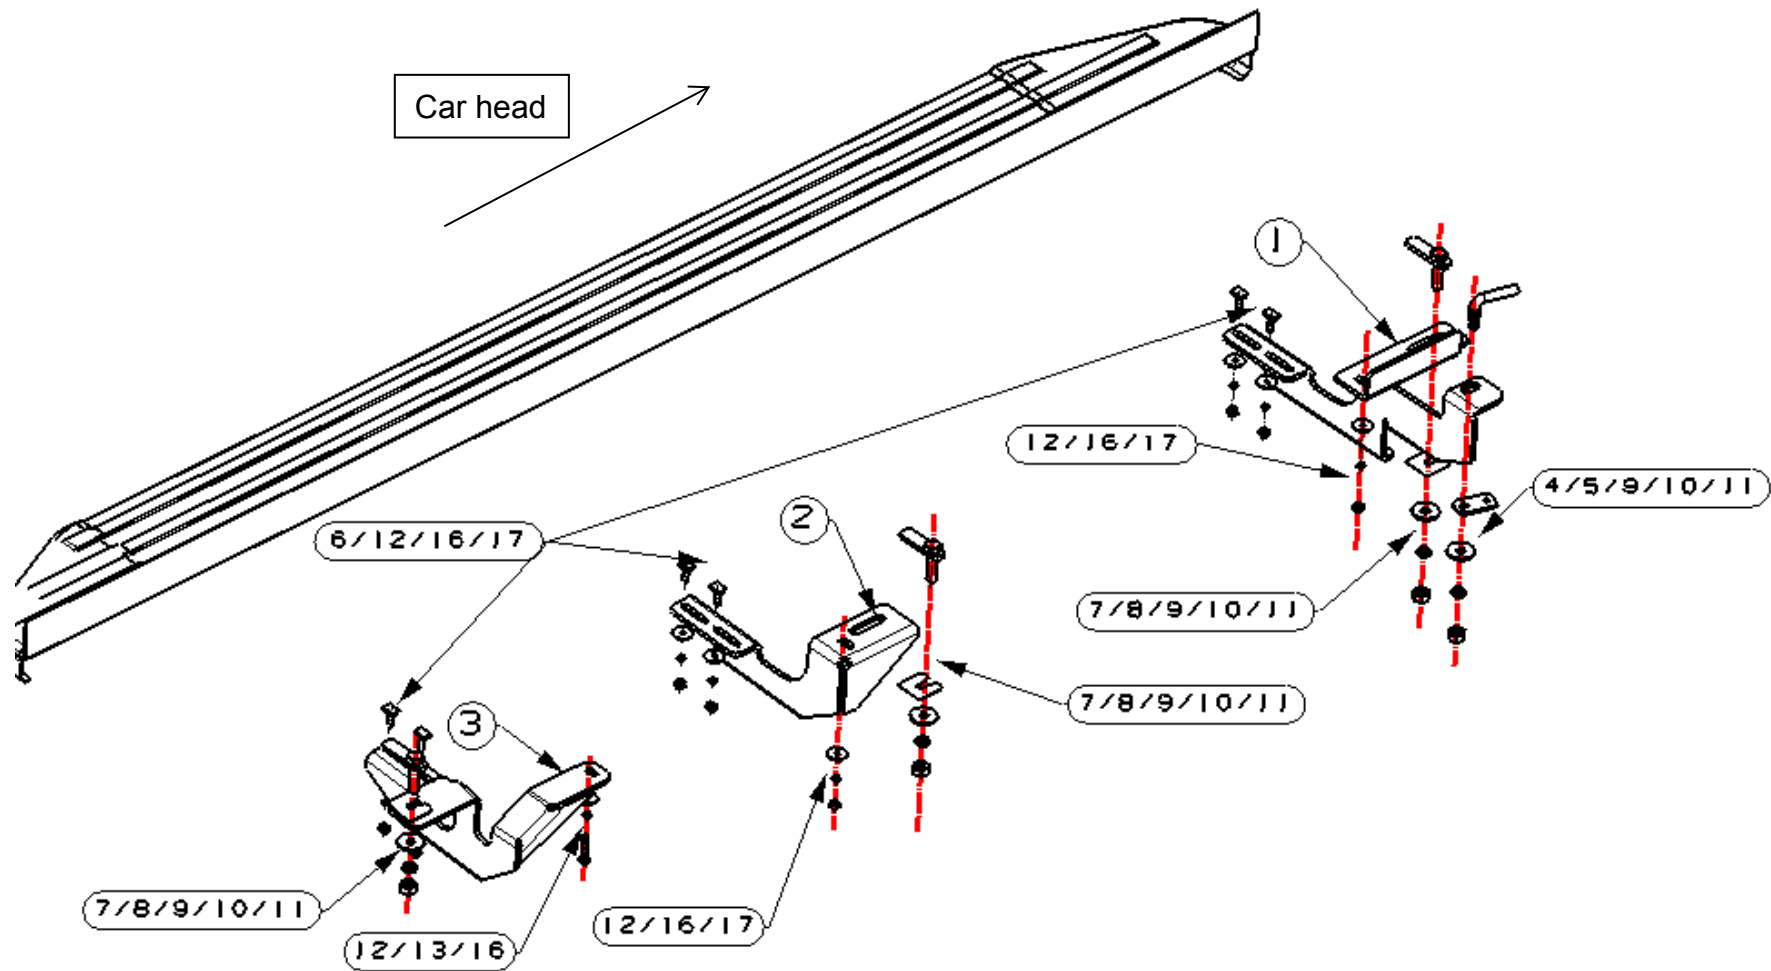
PR-H476

PARTS LIST

NO.	QTY	PICTURE	NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 Front bracket (L/R)	②	2	 Middle bracket (L/R)	③	2	 Rear bracket (L/R)
④	2	 Connect plate	⑤	2	 Hook bolt	⑥	12	 T Bolt M6x20
⑦	6	 T Bolt type 5 (M10x40 Hex Bolt)(60x16-15-5)(for φ22-24 hole)	⑧	6	 M10 Plastic retainer	⑨	8	 Hex nut M10
⑩	8	 Lock washer D10	⑪	8	 Flat washer D10 (10x30x2.5mm)	⑫	18	 Flat washer D6 (6x22x2mm)
⑬	2	 Hex bolt (full thread) M6_30	⑭	2	 Hex bolt (full thread) M8_30	⑮	2	 Flat washer D8 (8x24x2mm)

<p>①⑥</p>	<p>18</p>	 <p>Lock washer D6</p>	<p>①⑦</p>	<p>16</p>	 <p>Hex nut M6</p>	<p>①⑧</p>	<p>2</p>	 <p>Lock washer D8</p>
-----------	-----------	---	-----------	-----------	---	-----------	----------	---

Installation Figure:

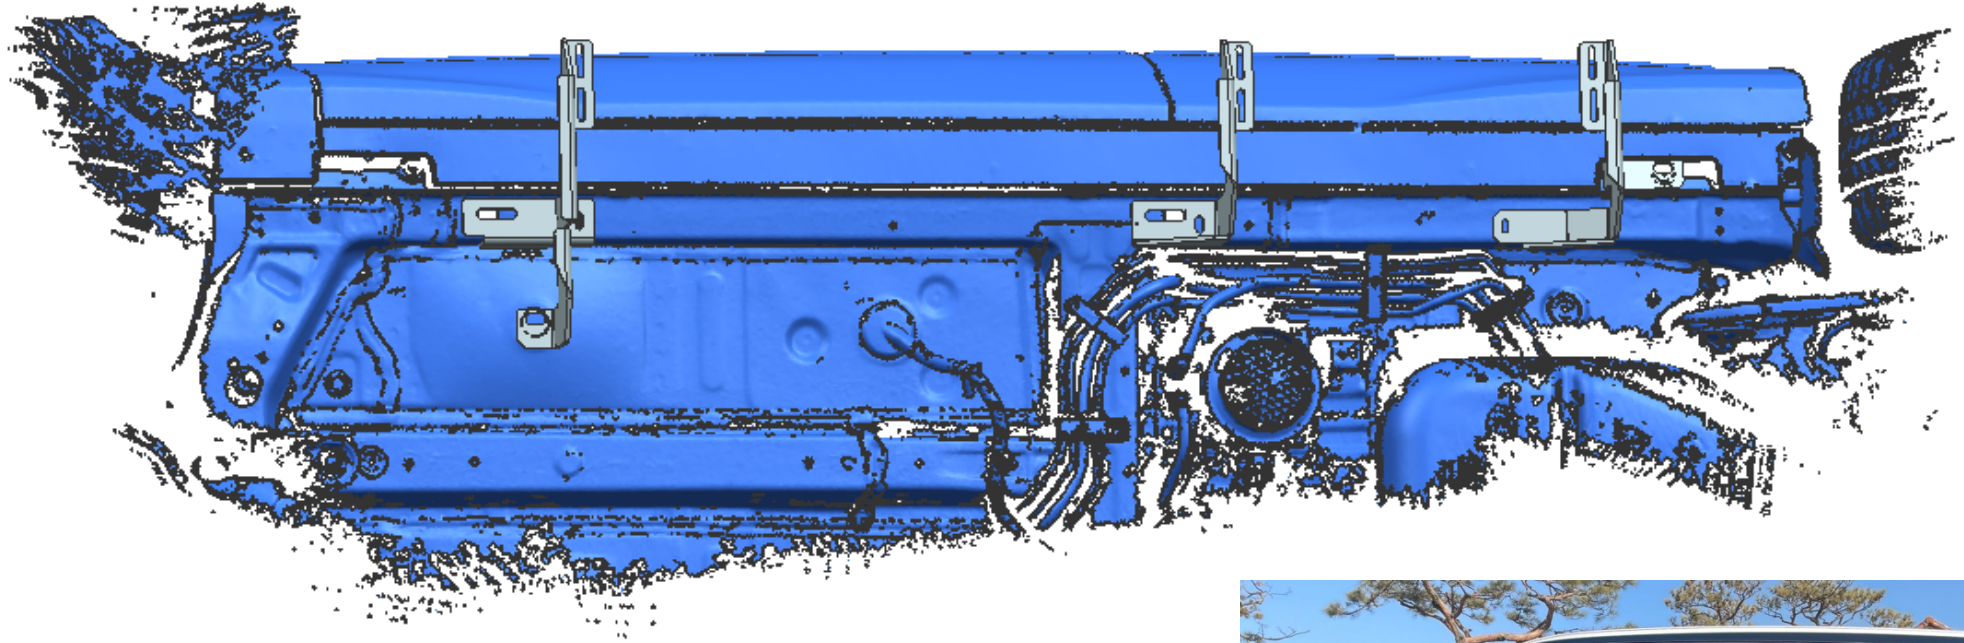


Step 1: Verify all parts are present.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation finished.



Complete Installation:

