



INSTALLATION INSTRUCTIONS
PEERLESS RUNNING BOARD FOR HYUNDAI
TUCSON 2019-2020
PART # PR-HY169BK


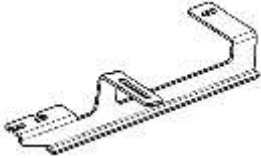
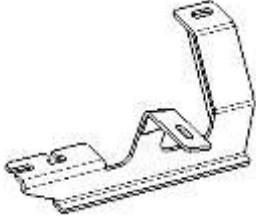
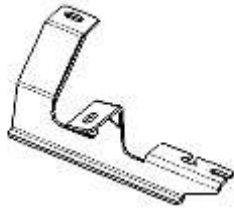
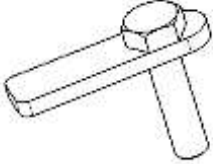




Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front Bracket (L)	②	1	 Front Bracket (R)
③	1	 Rear Bracket (L)	④	1	 Rear Bracket (R)
⑤	8	 T-HEXAGON BOLT M10*40	⑥	8	 PVC M10
⑦	8	 Large Washer D10	⑧	8	 Spring Washer D10
⑨	8	 Hex Nut M10			

Installation Fig.

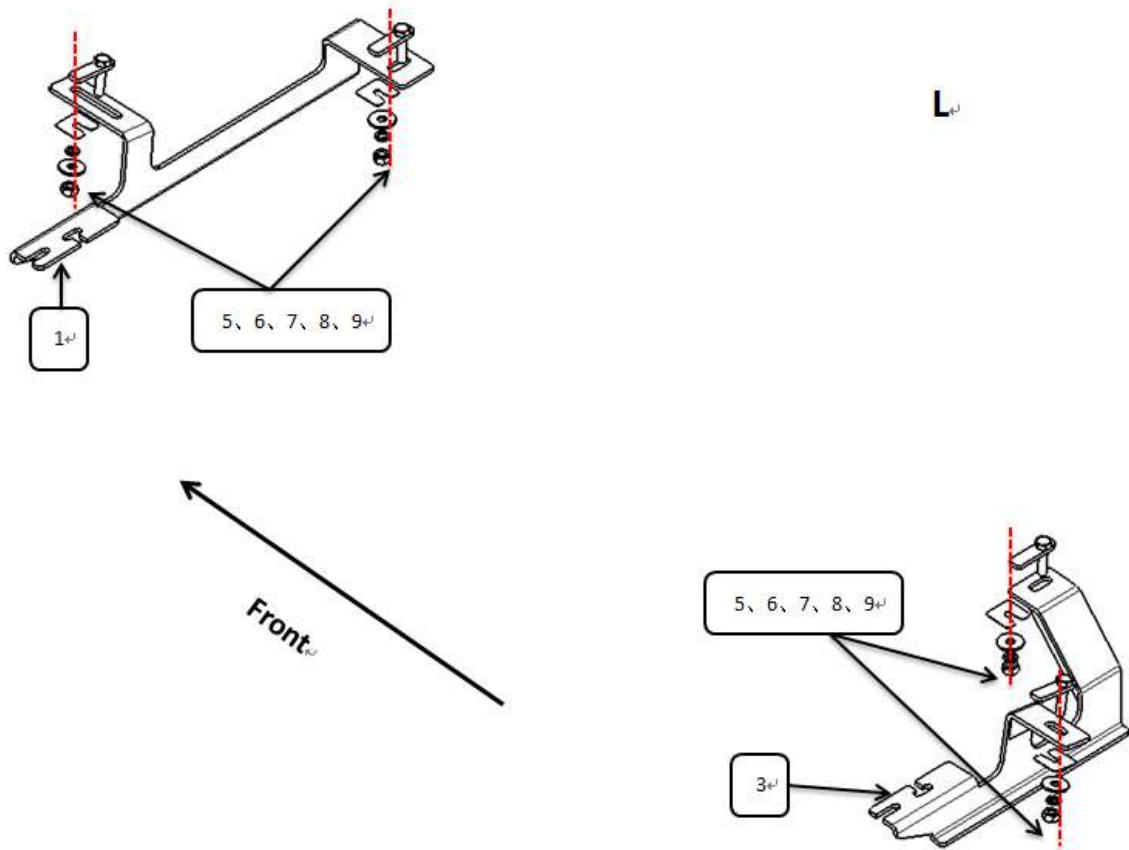

STEP 1: Verify that all parts are present according to the manual.

STEP 2: Install the brackets and running board on the bottom of vehicle as above picture

STEP 3: Check the running board if it install correctly, then tighten all the hardware.

STEP 4: Installation is finished, pick up all tools.



Complete Installation

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.