



**INSTALLATION INSTRUCTIONS**  
**PEERLESS RUNNING BOARD FOR 14-20 JEEP CHEROKEE**  
**PART #PR-JPCBKB**

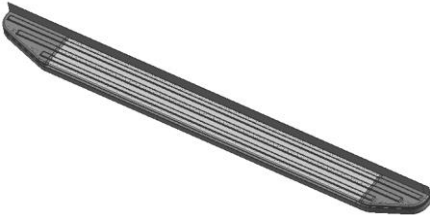
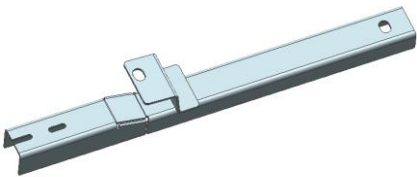
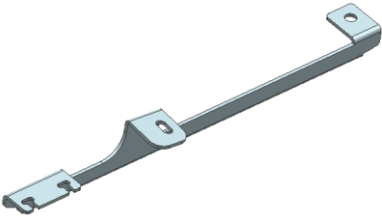
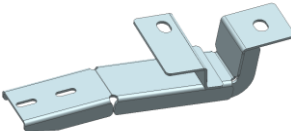


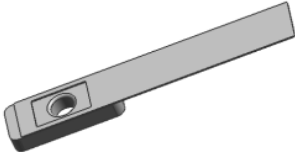
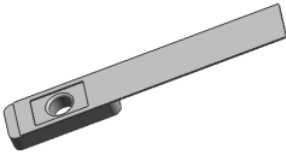
## Before Installation



- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list


NO.	QTY	PIC	NO.	QTY	PIC
①	2	 Running board	②	2	 Front bracket
③	2	 Middle bracket	④	2	 Rear bracket
⑤	2	 T Bolt M12	⑥	2	 T Bolt M10
⑦	2	 T-bolt nut block M10	⑧	6	 T-bolt nut block M8

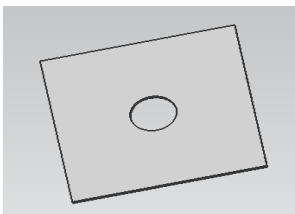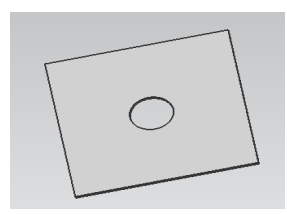⑨	2		⑩	2	
Standard part lists:					
⑪	2	Lock washer D12	⑫	2	Hex nut M10
⑬	2	Flat washer D12	⑭	2	Hex bolt M10_30
⑮	2	Hex nut M12	⑯	6	Lock washer D8
⑰	4	Lock washer D10	⑱	6	Flat washer D8
⑲	4	Flat washer D10	⑳	6	Hex bolt M8_20

## Installation Steps

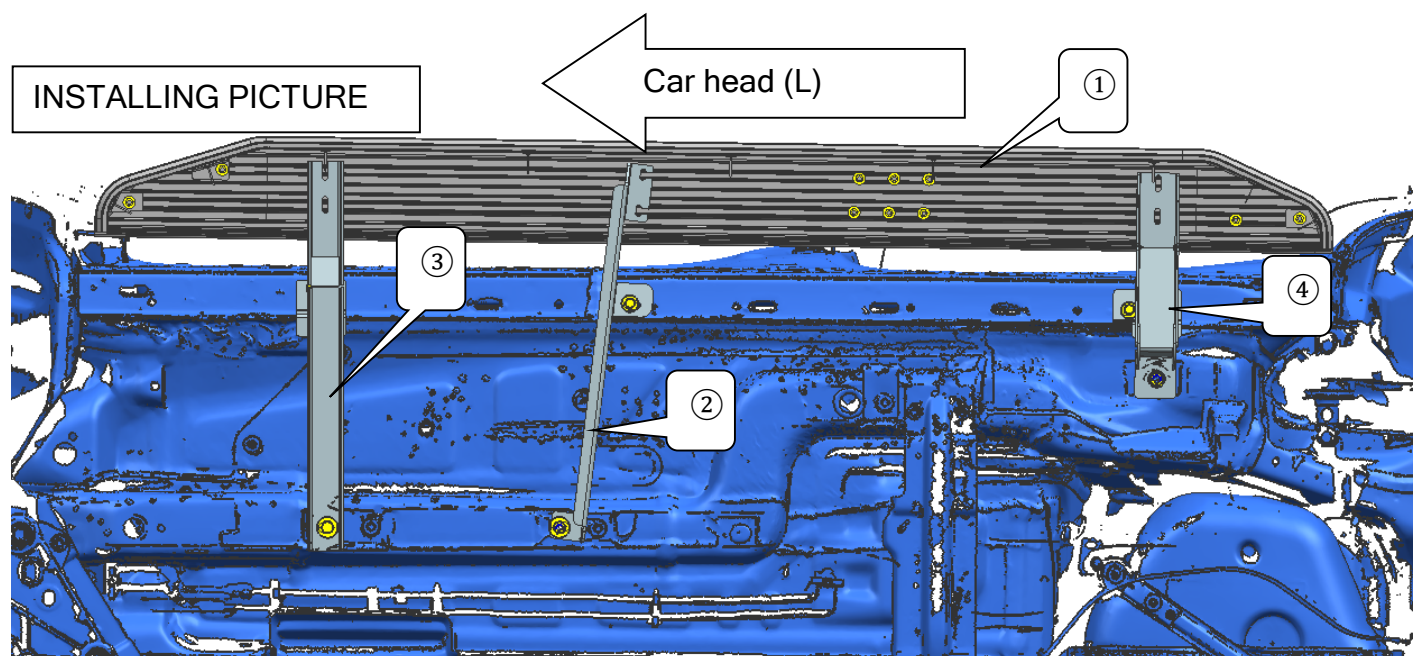
### INSTALLING PICTURE:

(The left and right installation methods are the same. Below only shows the left side installation)




Step 1: Verify that all parts are present according to the parts list. Make a clear distinction of left and right side (driving position).

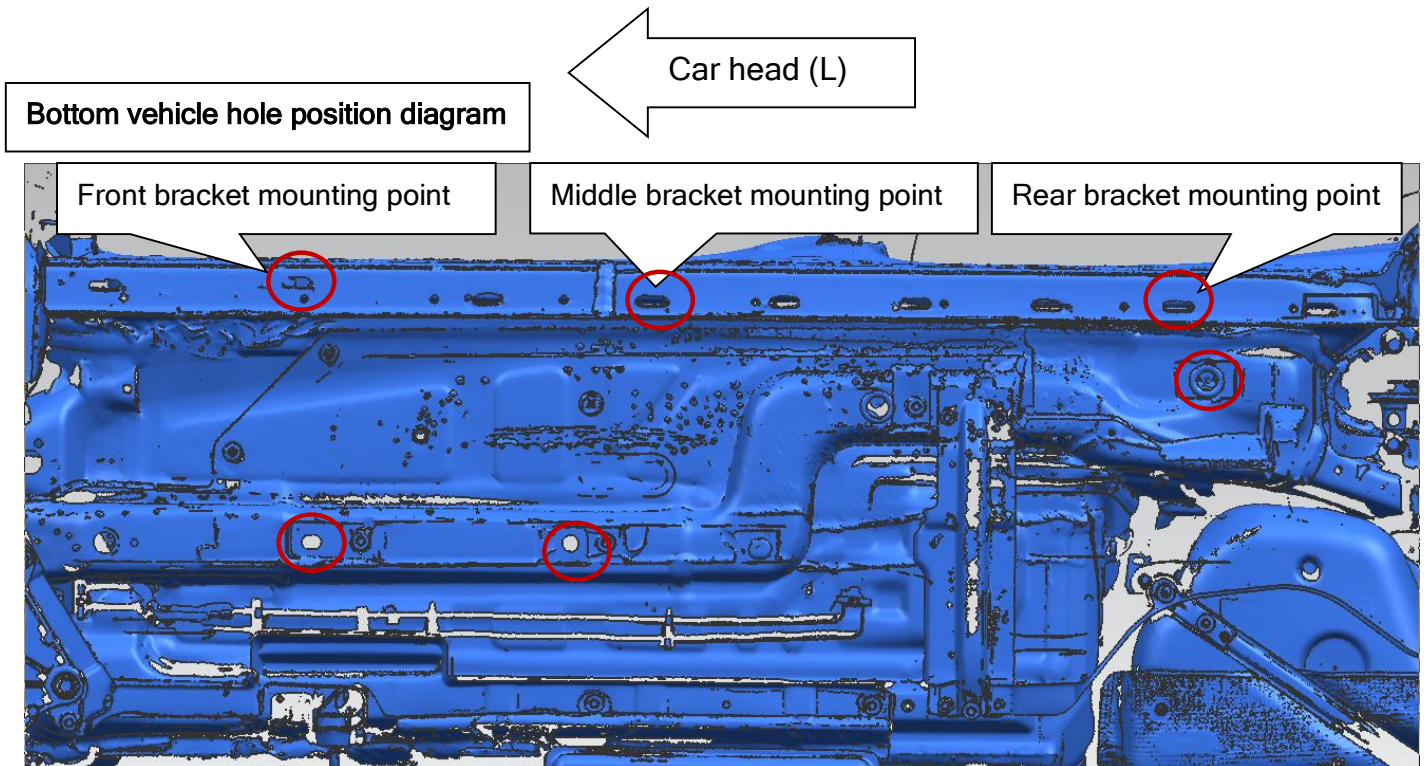
Step 2: Remove the rubber plug or buckle from the bottom of vehicle. (as shown in the diagram below in circle)



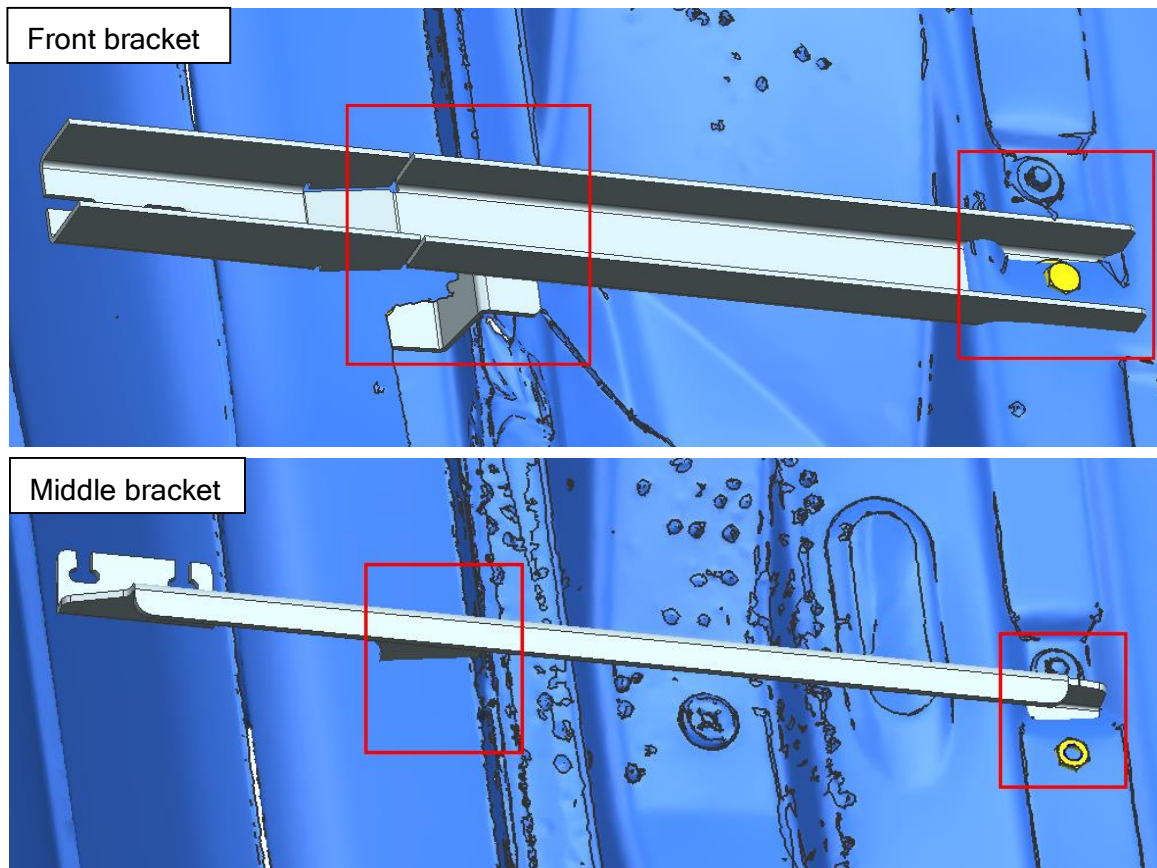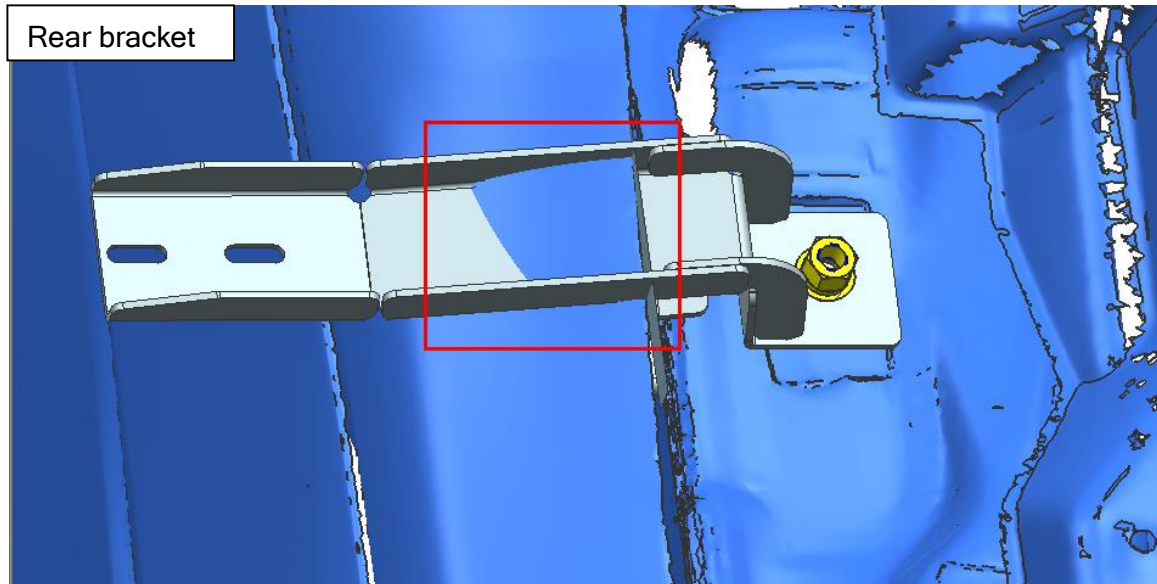Step 3: Place the bracket to the installation position, mark and cut off the original side skirt and lower guard plate that interfere with the installation. (as shown in the diagram below in square)








#### Step 4: Install brackets


##### 1. Install front brackets

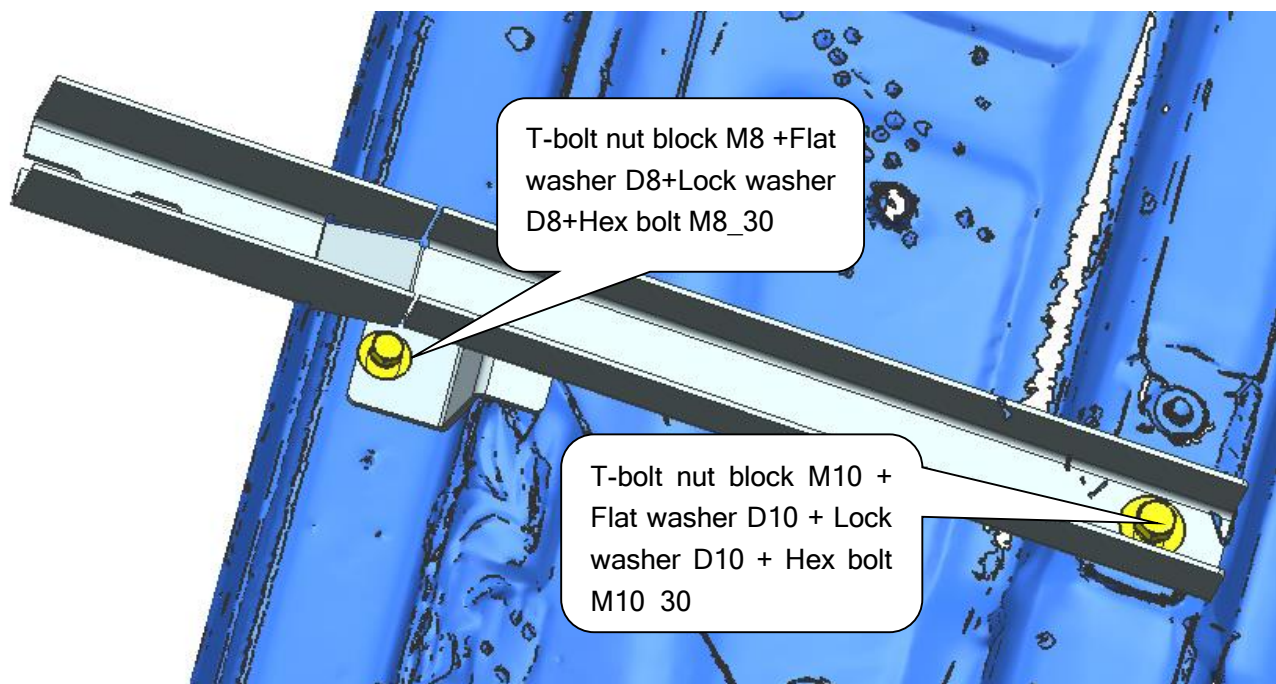Find out the hole position of the front brackets before installation (refer to the mounting point of the bracket), put the T-bolt nut block M8 and T-bolt nut block M10 into the corresponding hole position, then mount the brackets with the corresponding accessories (flat washers, lock washers and nuts). (as shown in the figure below)




##### 2. Install middle brackets

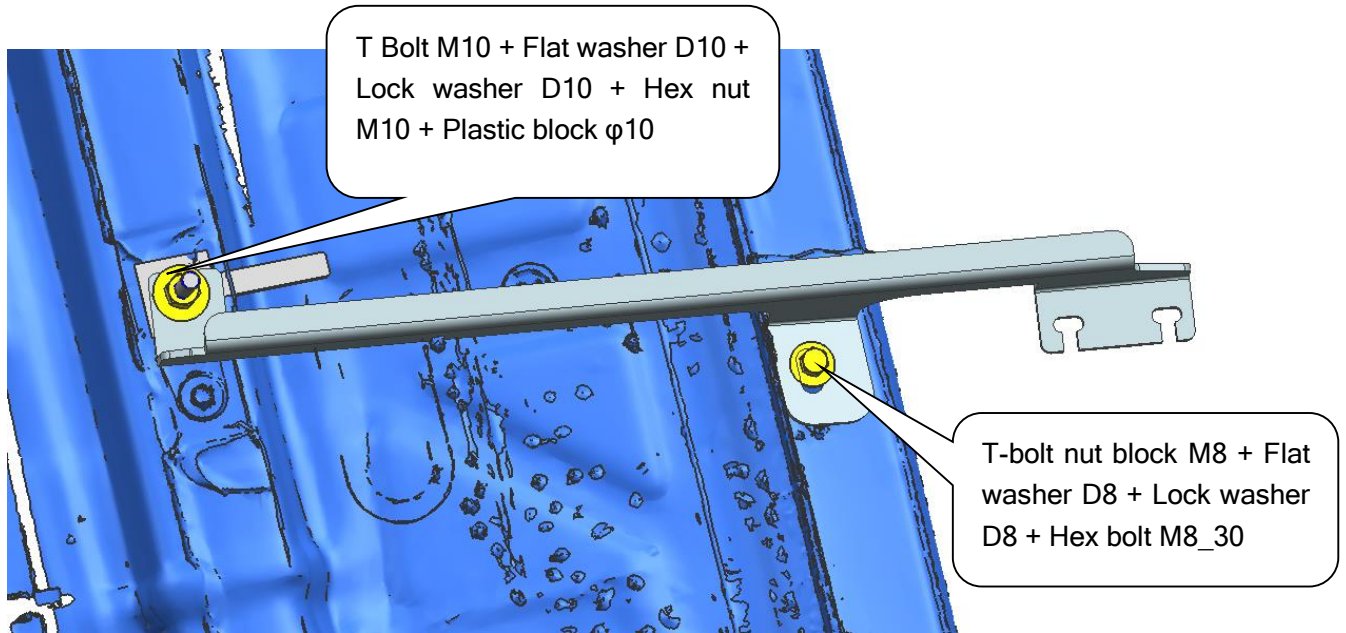Find out the hole position of the middle brackets before installation (refer to the mounting point of the bracket), put the T-bolt nut block M8 and T bolt M10 into the corresponding hole position, then mount the bracket with the corresponding accessories (flat washers, lock washers and nuts). (as shown in the figure below)



### 3. Install rear brackets

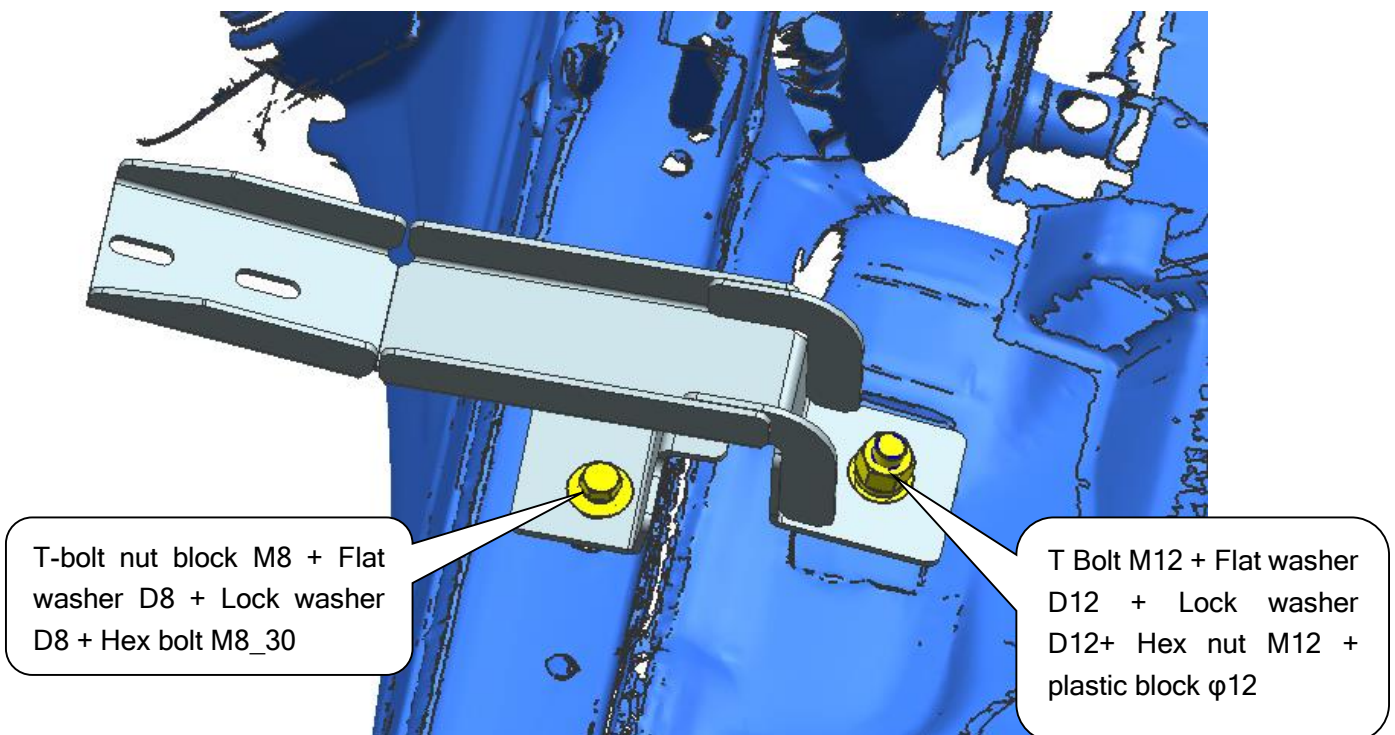
Find out the hole position of the rear brackets before installation (refer to the mounting point of the bracket), put the T-bolt nut block M8 and T bolt M12 into the corresponding hole position, then mount the bracket with the corresponding accessories (flat washers, lock washers and nuts). (as shown in the figure below)




### 4. Install running board

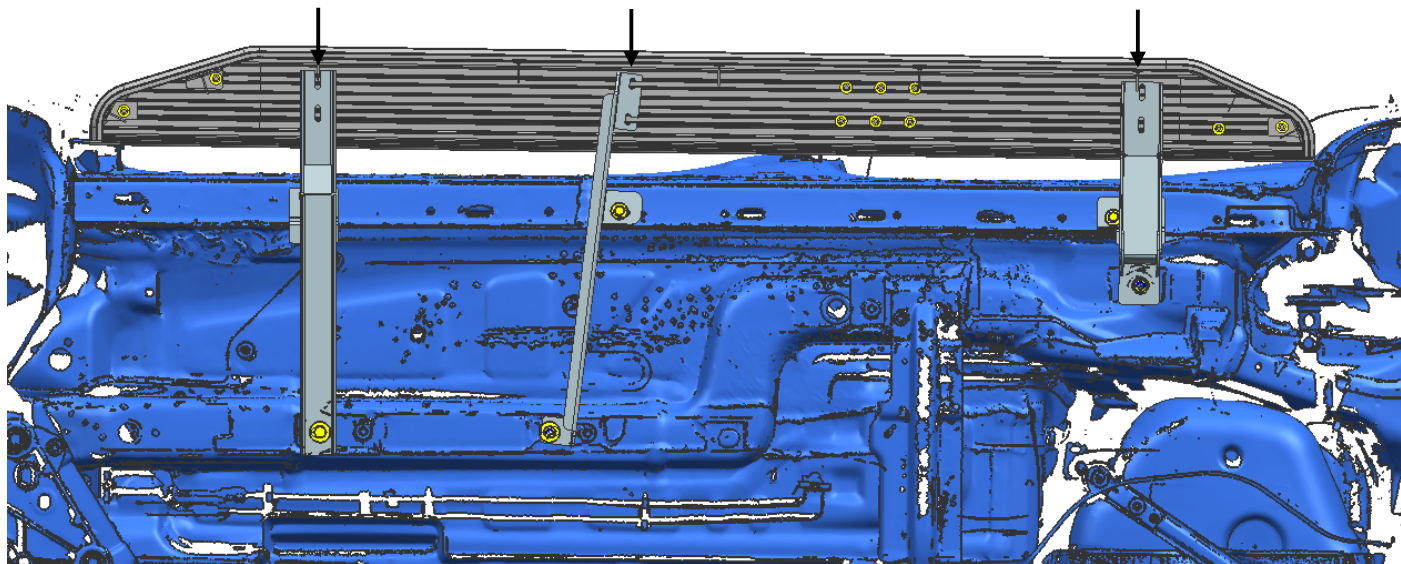Remove the original standard parts on the running board that are connected with the brackets, then install the running board and push them toward the body direction, adjust them to the optimal position, use standard parts to lock the brackets and running boards, and lock the bolts.





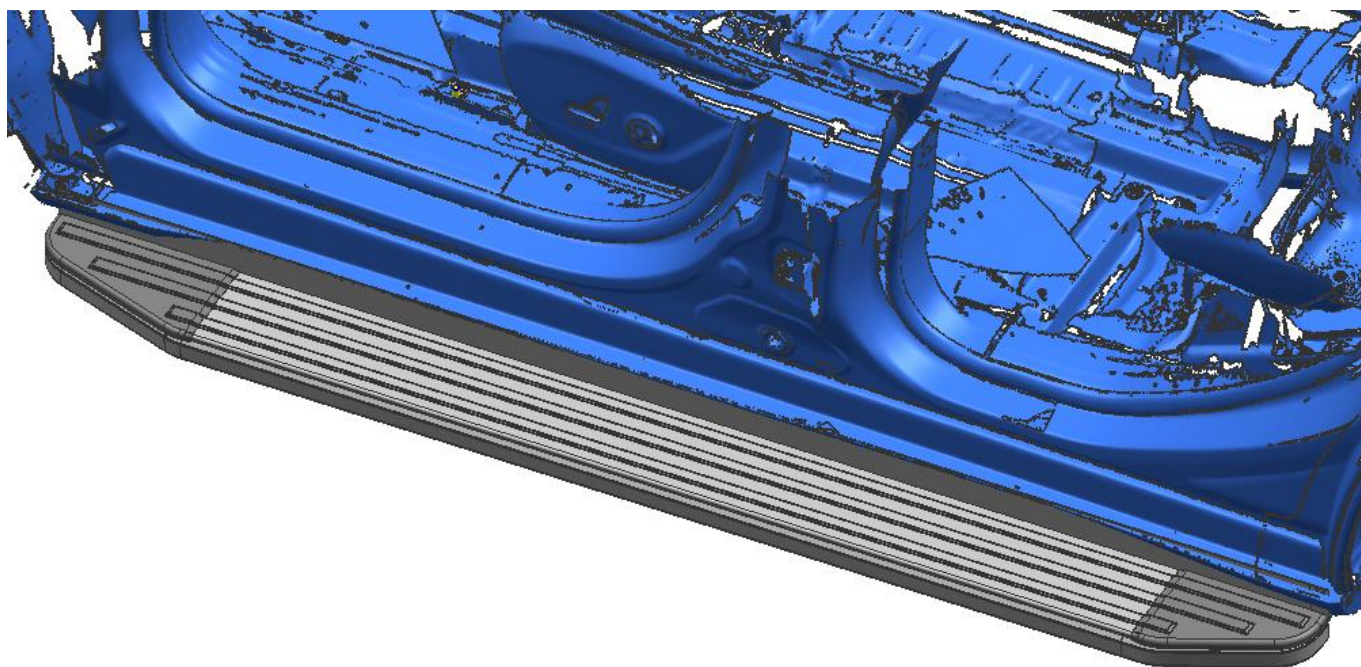Step 5: Installation is finished, pick up all tools.



## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.