



**INSTALLATION INSTRUCTIONS**

**PEERLESS RUNNING BOARD FOR TOYOTA RAV4 2019-2020**

**PART # PR-T369BK**

## Before Installation





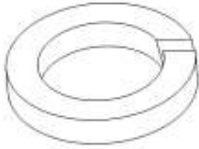
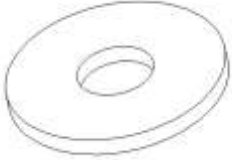

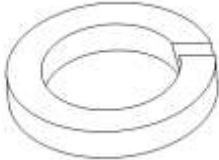
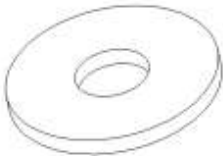
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


## Parts list

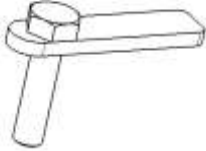NO.	QTY	PIC	NO.	QTY	PIC
①	1	Front mounting bracket (L)	②	1	Front mounting bracket (R)
③	1	Center mounting bracket (L)	④	1	Center mounting bracket (R)
⑤	1	Rear mounting bracket (L)	⑥	1	Rear mounting bracket (R)
⑦	6	Plastic buckle M8	⑧	4	T-bolt M8

⑨	6	 T-bolt M10	⑩	6	 Plastic buckle M10
⑪	2	 Flat head T-bolt M8	⑫	6	 Hex nut M8
⑬	6	 Spring washer D8	⑭	6	 Flat washer D8
⑮	6	 Hex nut M10	⑯	6	 Spring washer D10
⑰	6	 Flat washer D10			

## Installation Steps

### INSTALLING PICTURE:

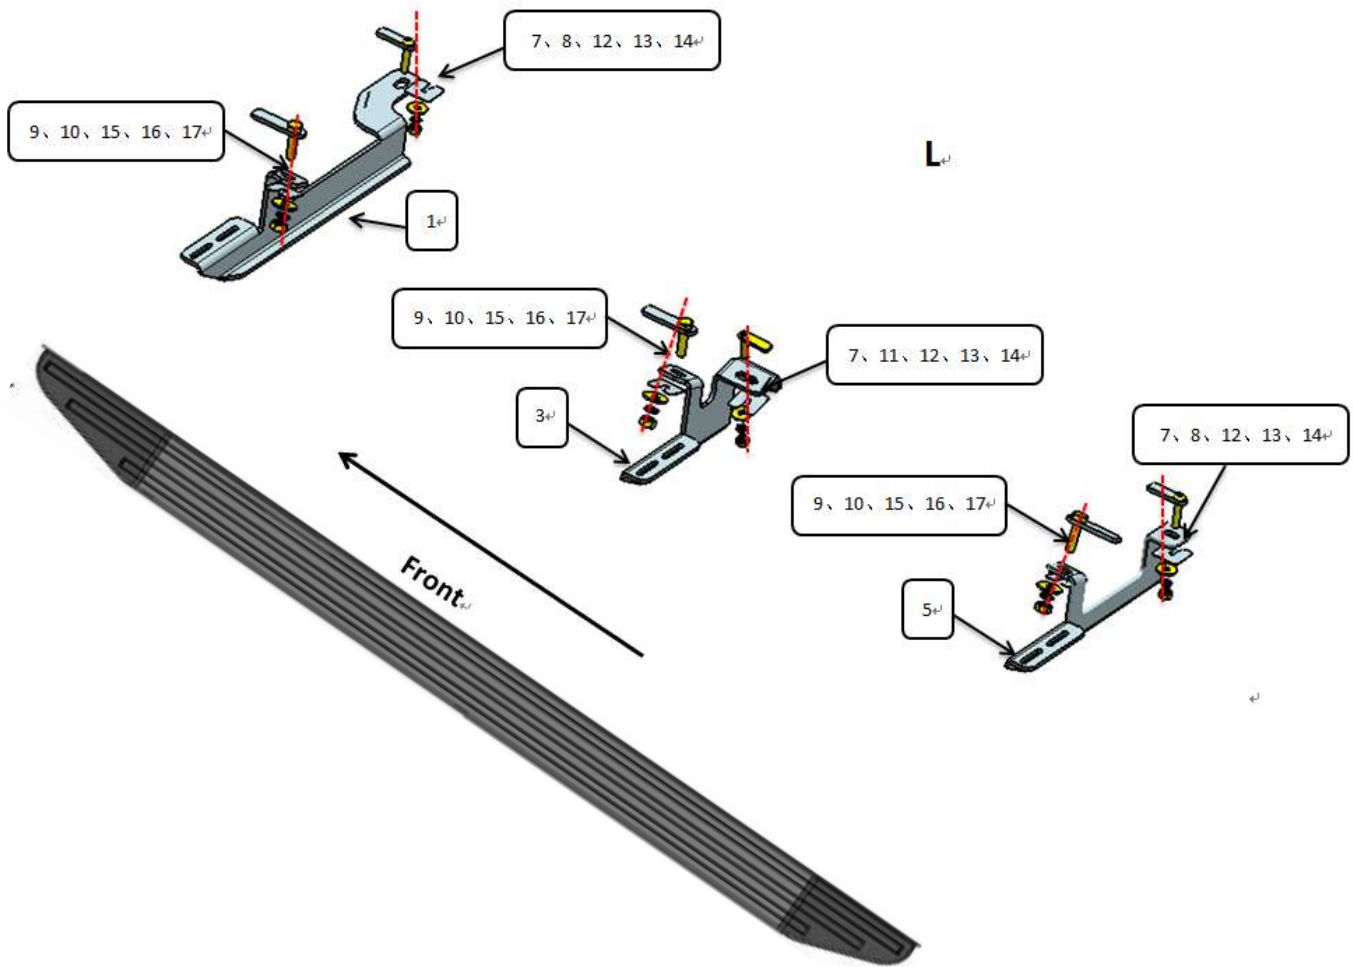

Step 1: Verify that all parts are present according to the manual.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation is finished, pick up all tools.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.