

TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS (FORD F150 5.5'&6.5' Bed 15+/  
DODGE RAM 1500 5.5'Bed 09+/CHEVY SILVERADO 1500 5.9' Bed 15+/TOYOTA TUNDRA 5.5' Bed 14+)



TEL: 1-866-XANATOS

# **INSTALLATION INSTRUCTIONS**

**TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS**

**(FORD F150 5.5'&6.5' Bed 15+/DODGE RAM 1500 5.5'Bed 09+/CHEVY  
SILVERADO 1500 5.9' Bed 15+/TOYOTA TUNDRA 5.5' Bed 14+)**

**PART # BSCP01B**








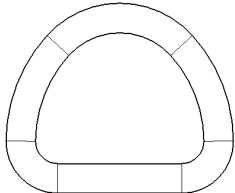
## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.



## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

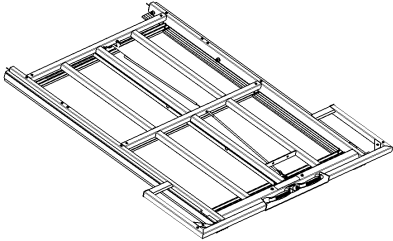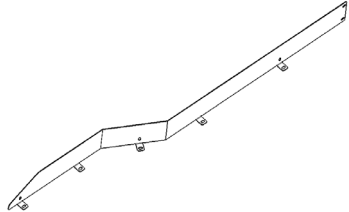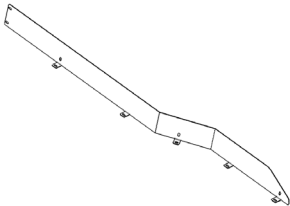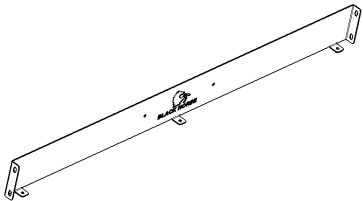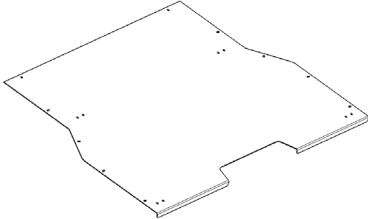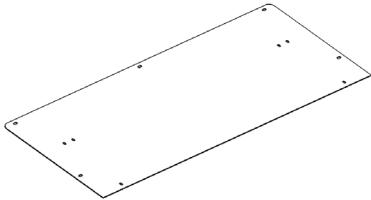NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Base Of Slide Tray	②	1	 Side Plate (L)
③	1	 Side Plate (R)	④	1	 Rear Plate
⑤	1	 Front Base Plate	⑥	1	 Rear Base Plate
⑦	1	 Red Decoration Plate	⑧	6	 Type D Buckle


**TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS (FORD F150 5.5'&6.5' Bed 15+/  
DODGE RAM 1500 5.5'Bed 09+/CHEVY SILVERADO 1500 5.9' Bed 15+/TOYOTA TUNDRA 5.5' Bed 14+)**

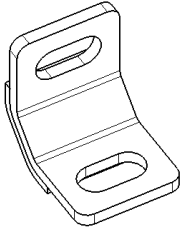⑨	6	 Bracket For Type Buckle	⑩	3	 Tape
<b>Hardware List:</b>					
⑪	16	Hex Flat Head Bolt M6_20	⑫	12	Lock Washer D6
⑬	24	Large Flat Washer D6 (6*18*1.6mm)	⑭	12	Hex Socket Button Head Bolt M6_16
⑮	12	Cap Nut M6	⑯	13	Hex Flange Nut M6
⑰	13	Assembly Bolt M6_20	⑱	1	Allen Wrench S=4
⑲	4	Hex Bolt (Full Thread) M10_65	⑳	8	Extra Large Washer D12 (12*44*4mm)
㉑	4	Lock Washer D10	㉒	4	Hex Nut M10
㉓	4	Plastic Washer φ16×12			


## Installation Steps

### Installation Figures:

Step 1: Install the red decoration plate in sequence as below figure shown. If rear plate has no logo, do not need to install the red decoration. Use hardware ⑫⑬⑭⑮ to install ④Rear Plate with ⑦Red Decoration Plate.

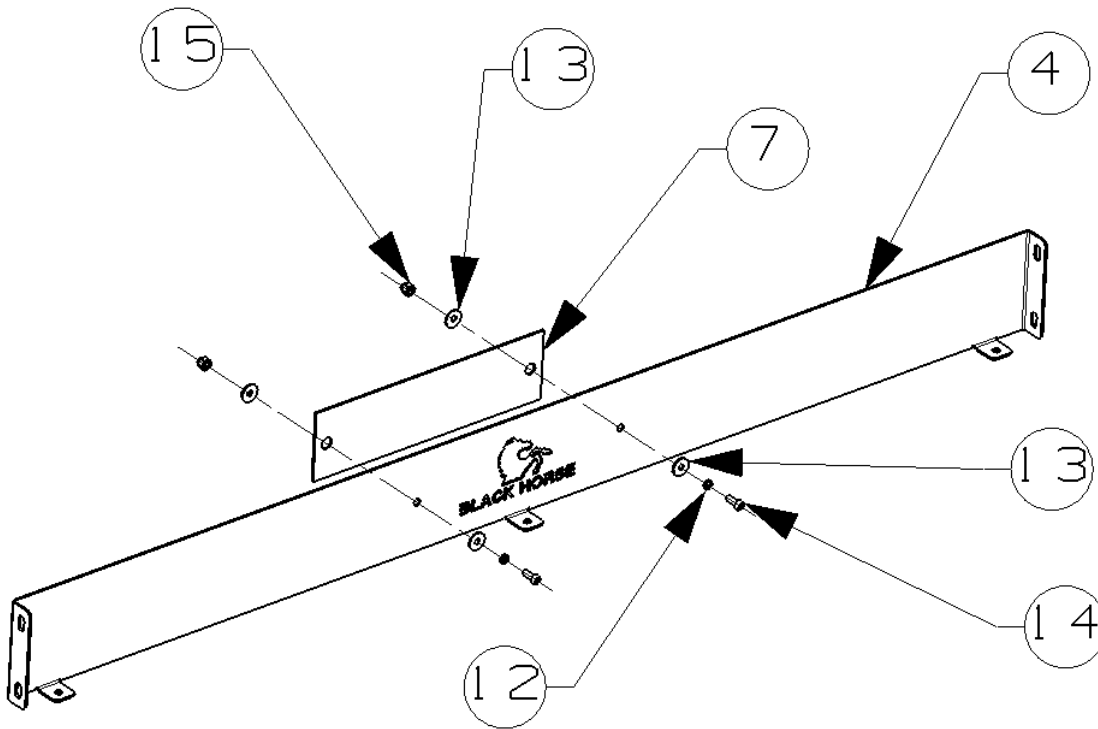


Step 2: Stick ⑩Tapes on ①Base Of Slide Tray.

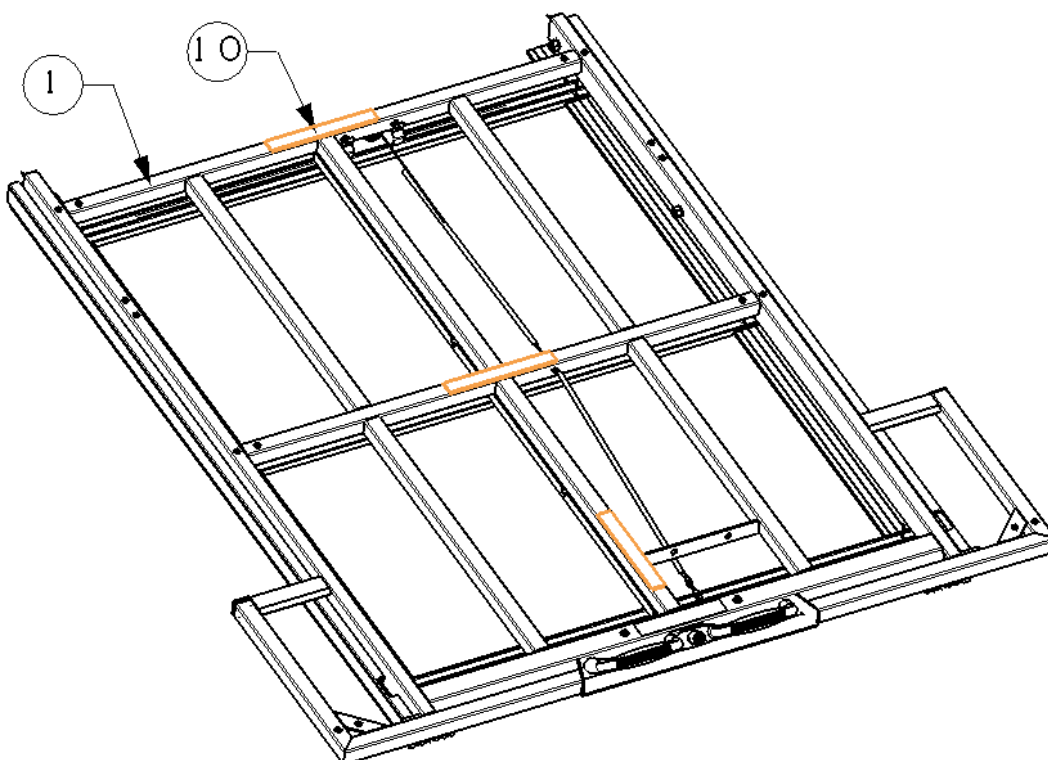


Step3: Use ⑪Hex Flat Head Bolts M6\_20 to install ①Base Of Slide Tray with Base Plates⑤⑥ in


TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS (FORD F150 5.5'&6.5' Bed 15+/  
DODGE RAM 1500 5.5'Bed 09+/CHEVY SILVERADO 1500 5.9' Bed 15+/TOYOTA TUNDRA 5.5' Bed 14+)  
sequence as below figure shown.

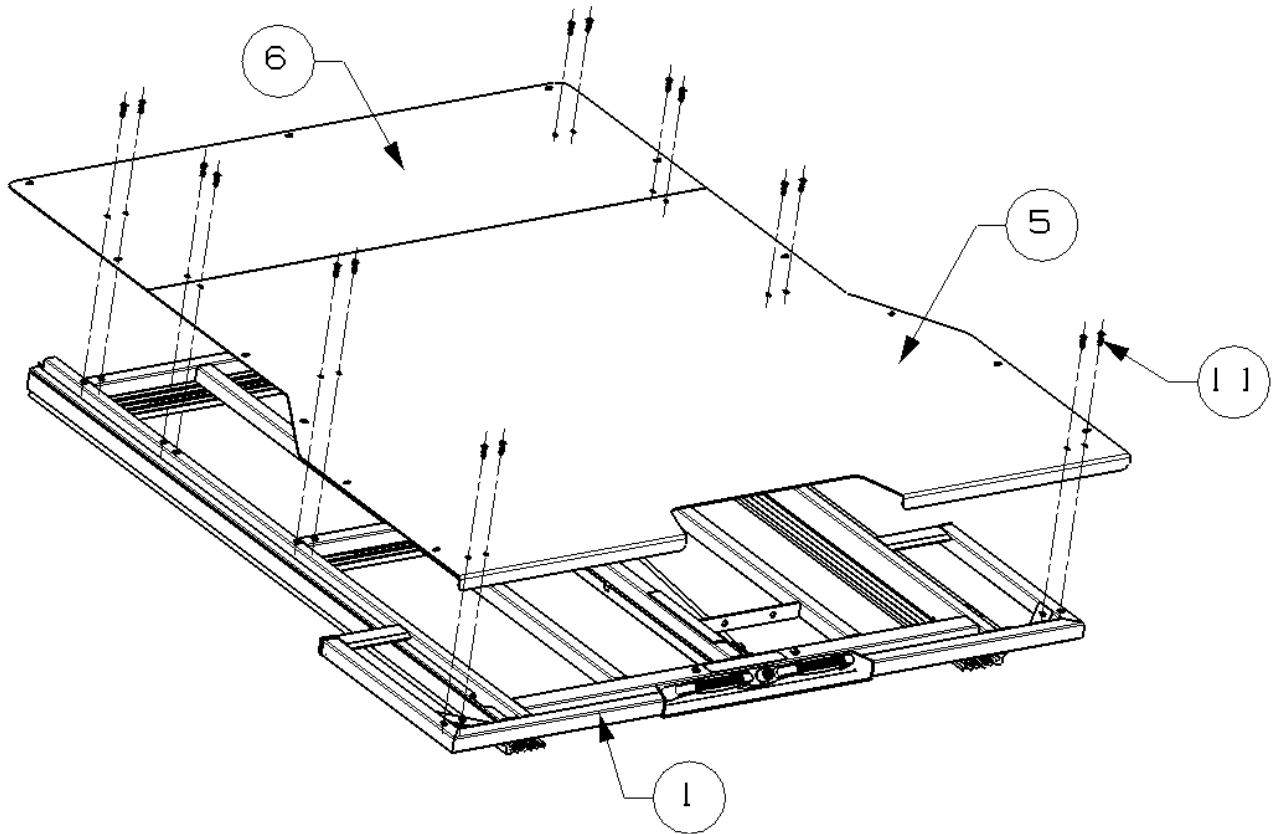

Step4: Use below hardware to install Side Plates②③ and ④Rear Plate.

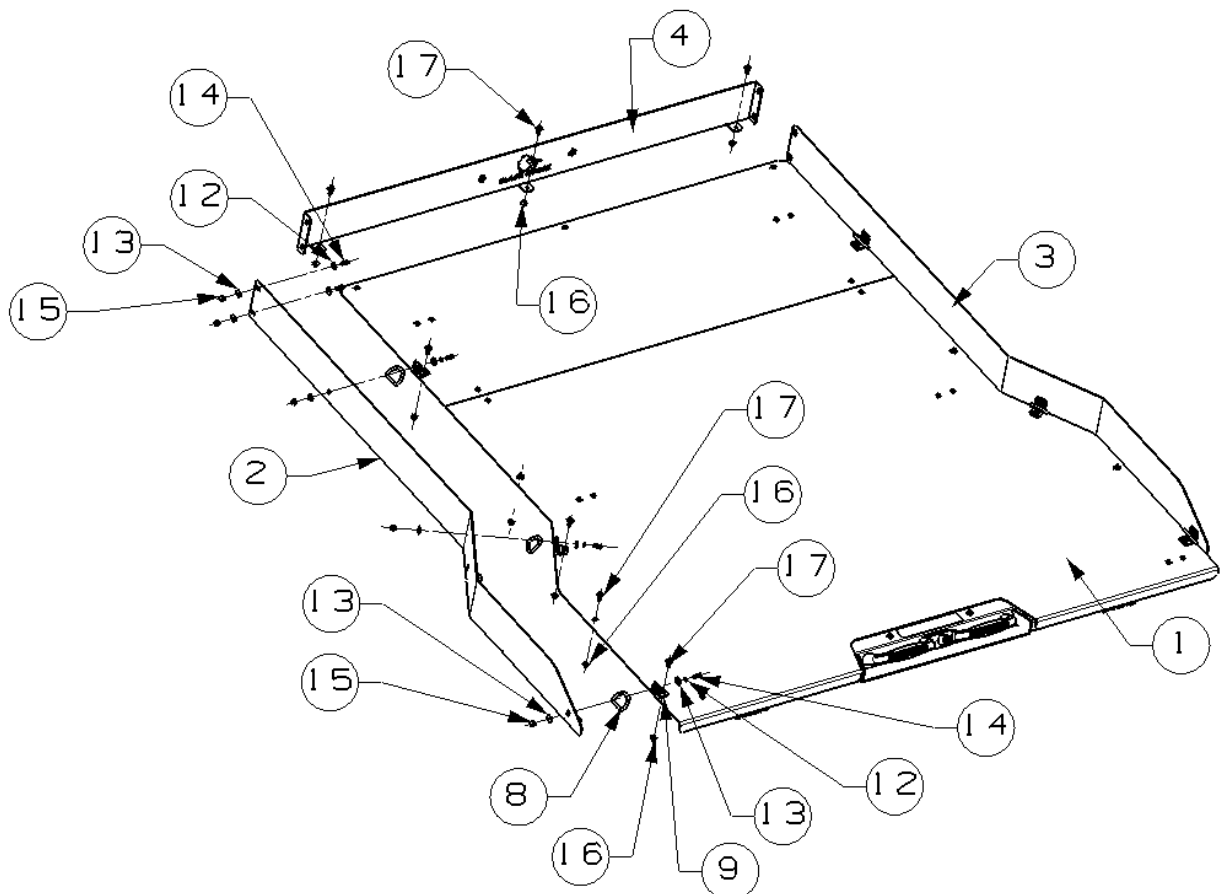


TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS (FORD F150 5.5'&6.5' Bed 15+/  
DODGE RAM 1500 5.5'Bed 09+/CHEVY SILVERADO 1500 5.9' Bed 15+/TOYOTA TUNDRA 5.5' Bed 14+)

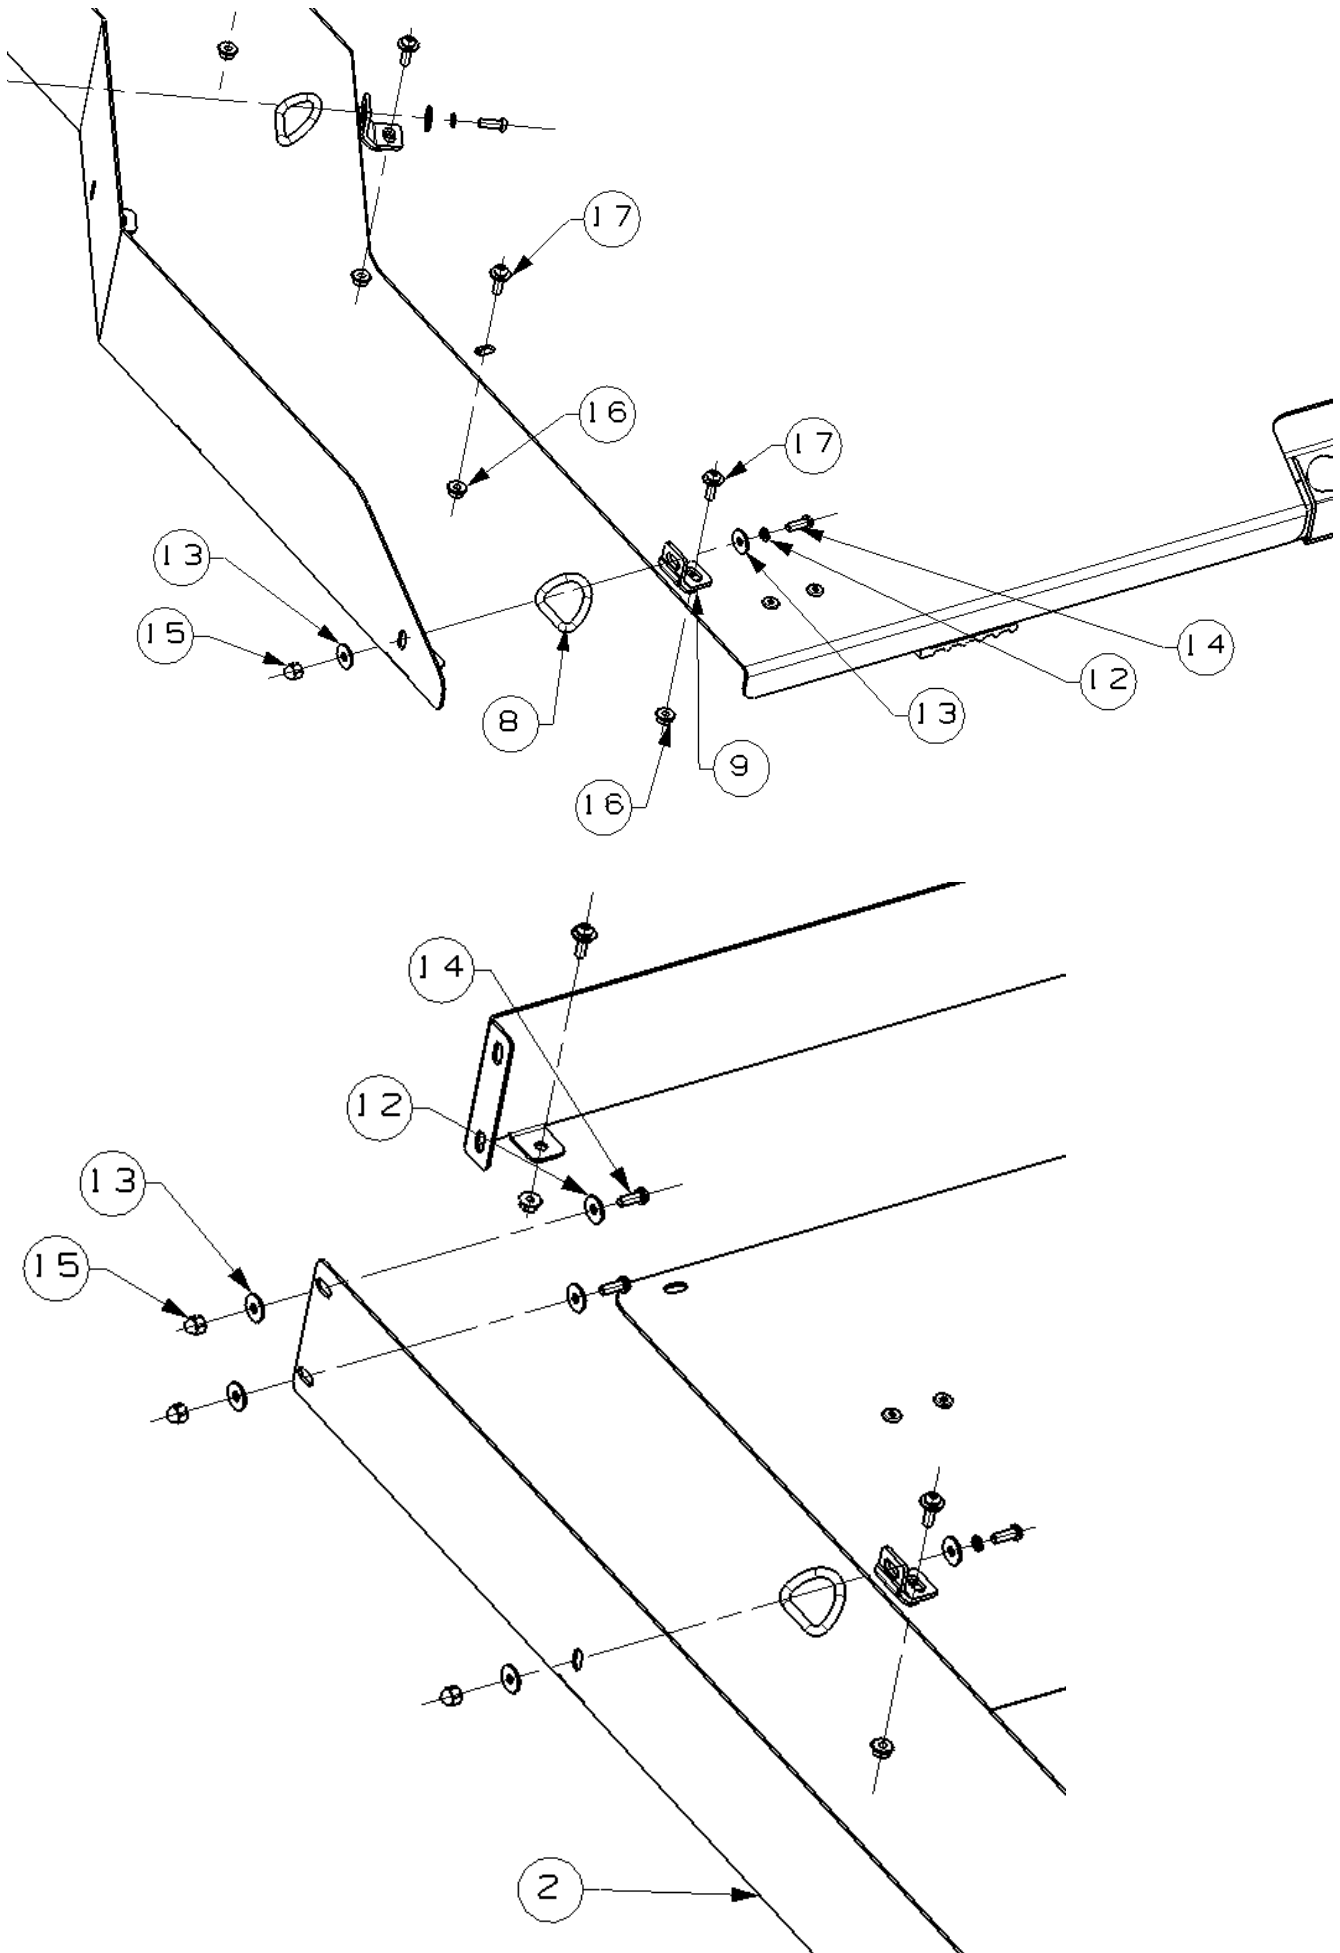


TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS (FORD F150 5.5'&6.5' Bed 15+/  
DODGE RAM 1500 5.5'Bed 09+/CHEVY SILVERADO 1500 5.9' Bed 15+/TOYOTA TUNDRA 5.5' Bed 14+)

Step5: Put the base and plate of slide tray on the truck bed, adjust it to appropriate position.



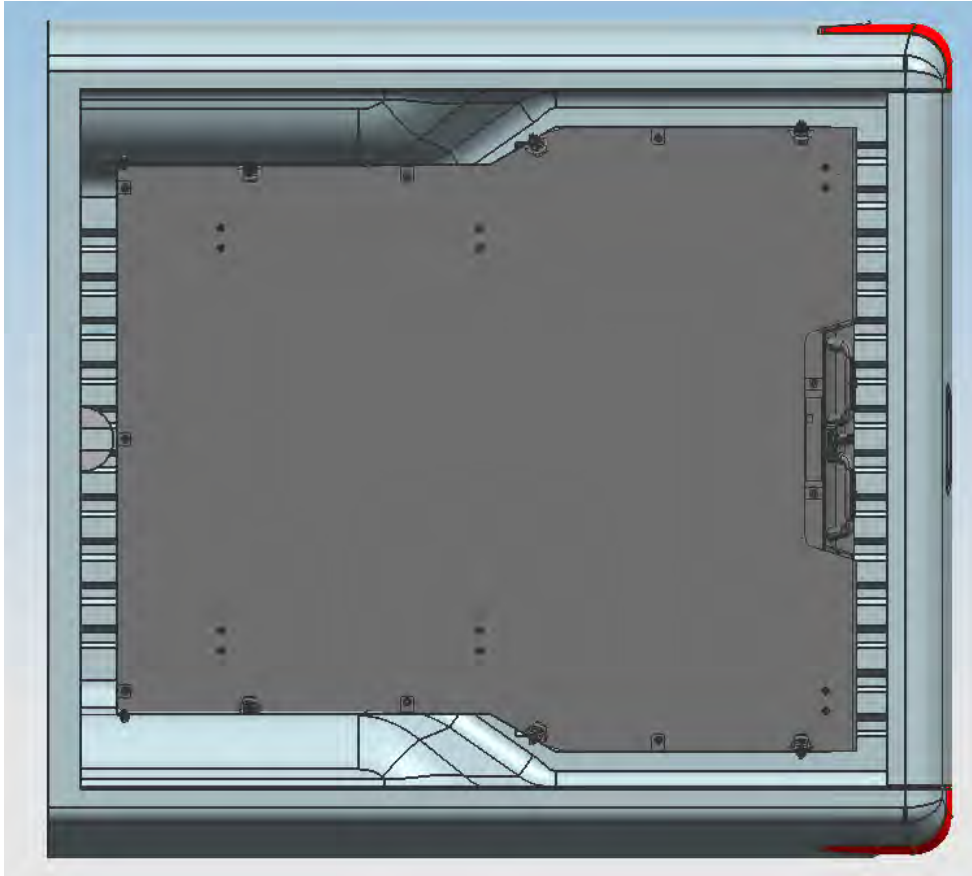


Step 6: After the position is adjusted, remove the plate of slide tray from the base in sequence as below figures shown.

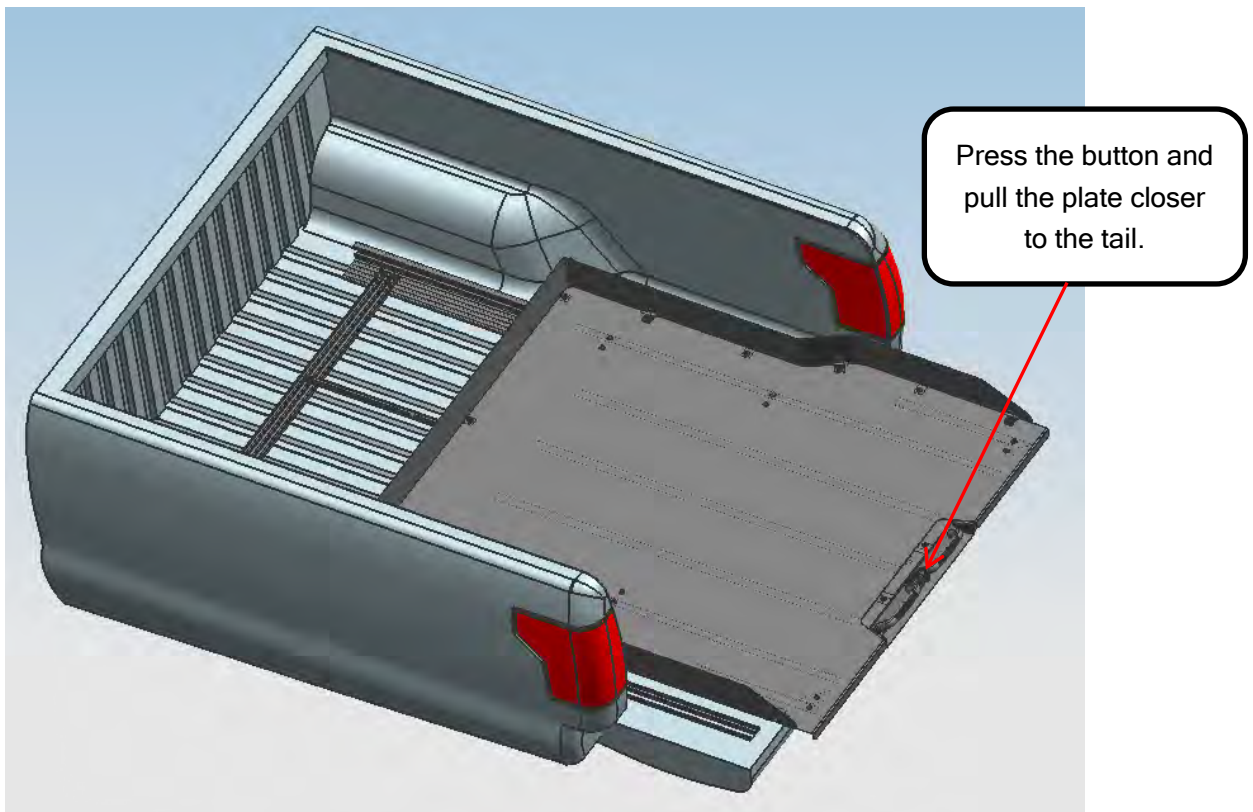




TOTALINER SLIDING CARGO TRAY FOR FULL-SIZE PICKUPS (FORD F150 5.5'&6.5' Bed 15+/  
DODGE RAM 1500 5.5'Bed 09+ /CHEVY SILVERADO 1500 5.9' Bed 15+ /TOYOTA TUNDRA 5.5' Bed 14+)

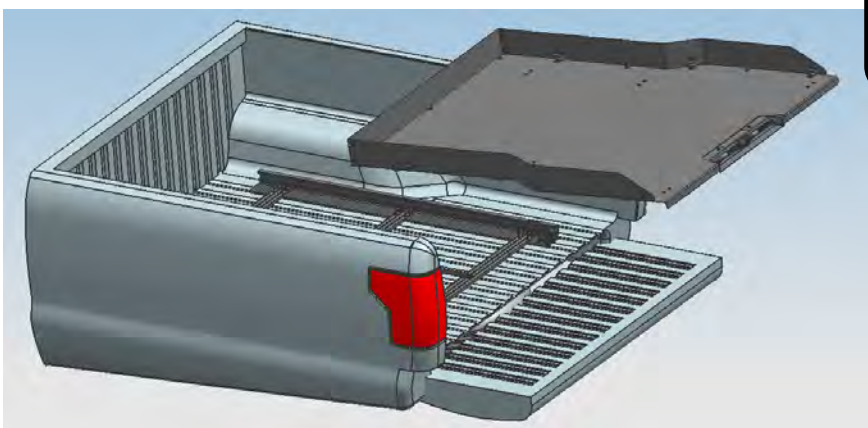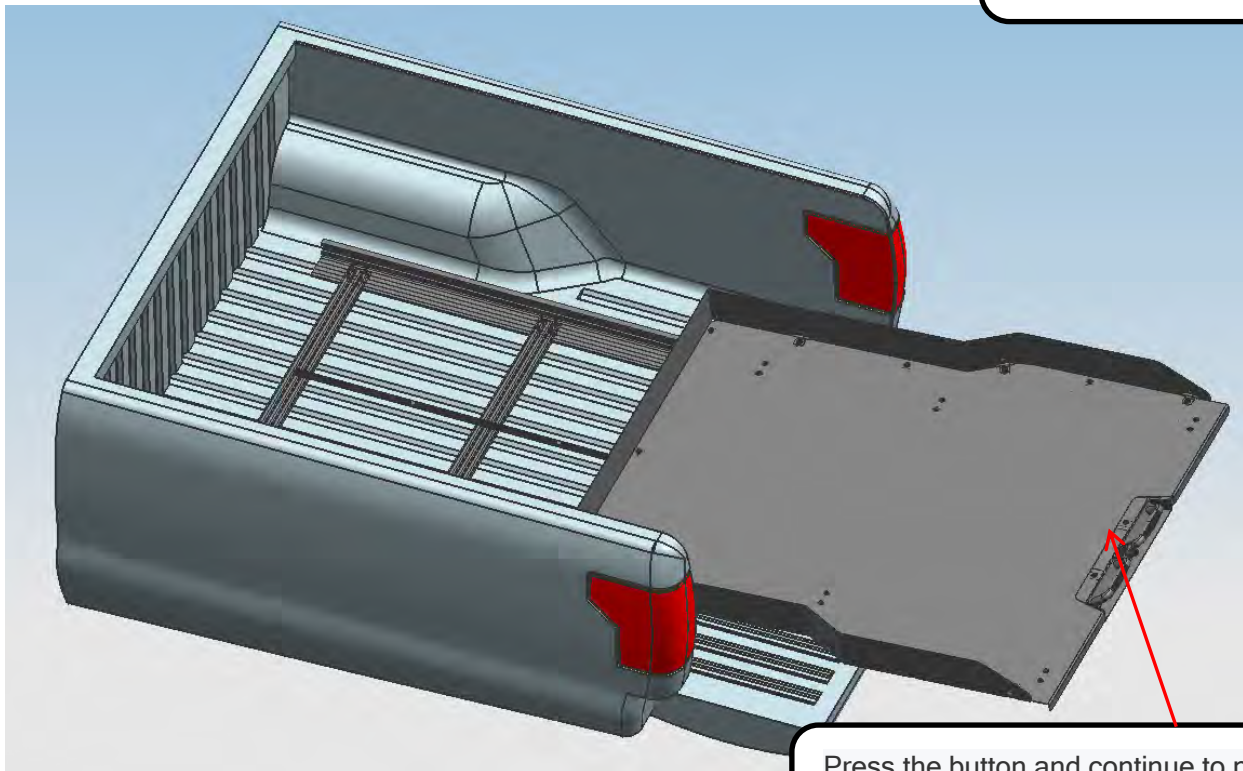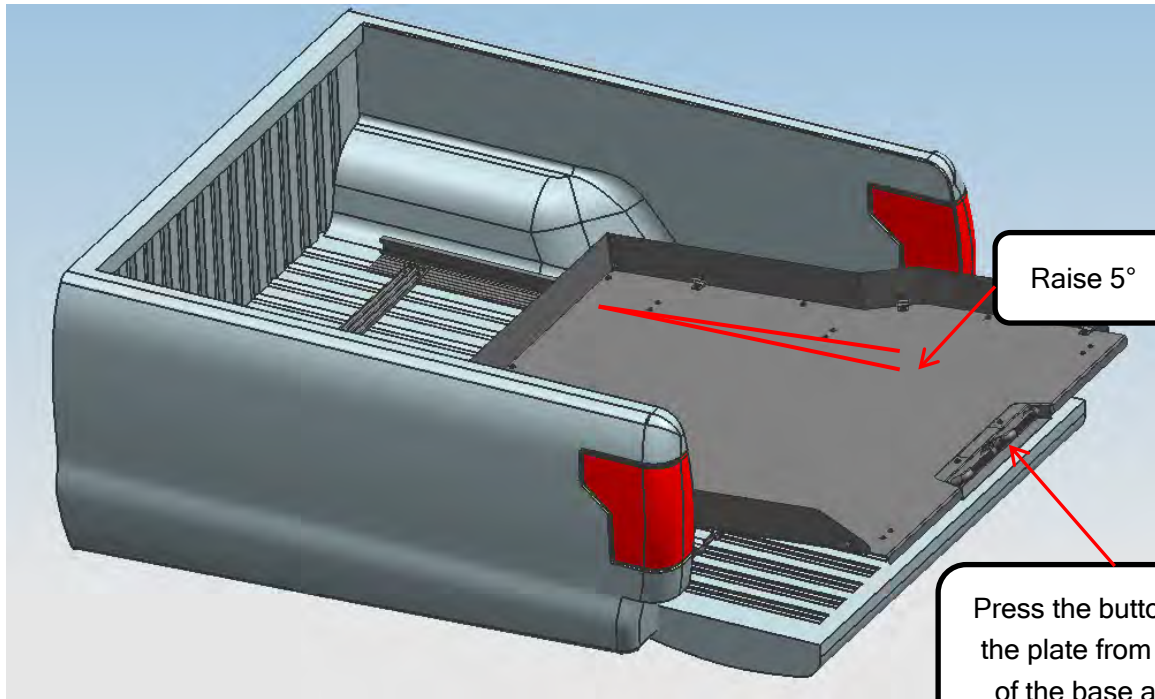




Step 7: Mark the holes position on the base and then drill 4 holes (ø12mm) on the aluminum base as the figure shown below. Holes on each side should be kept in same distance. Then drill the same holes position on the truck bed.

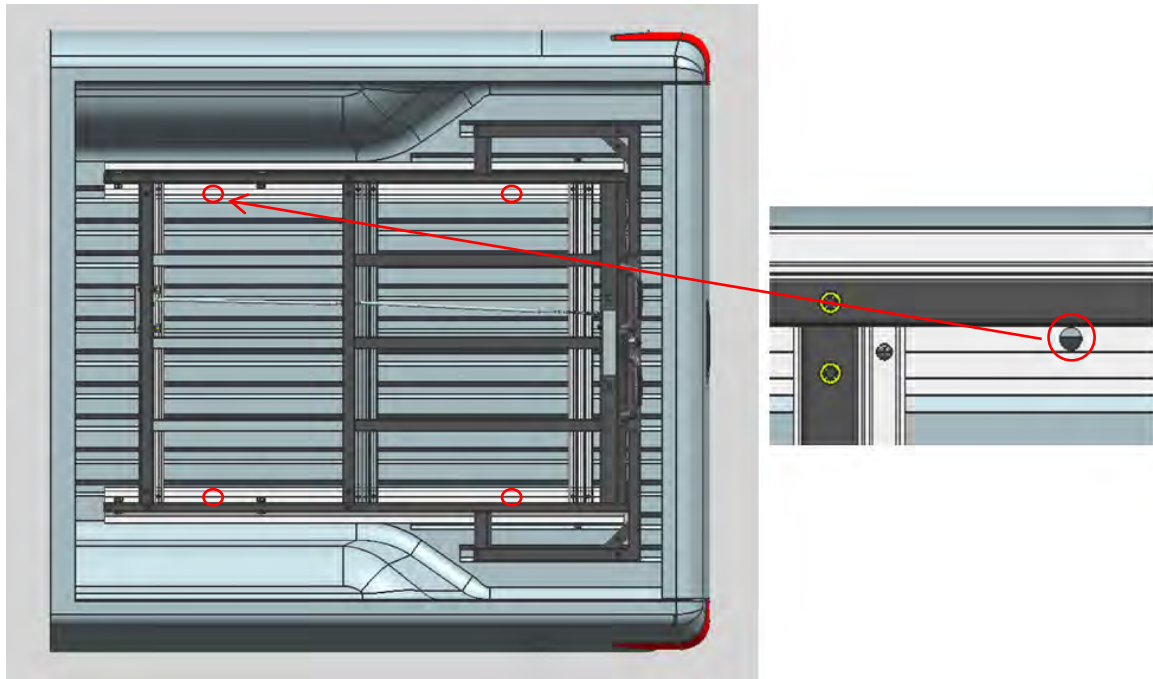

Step 8: Install the ①base of slide tray on the truck bed with hardware⑱⑳㉑㉒㉓.

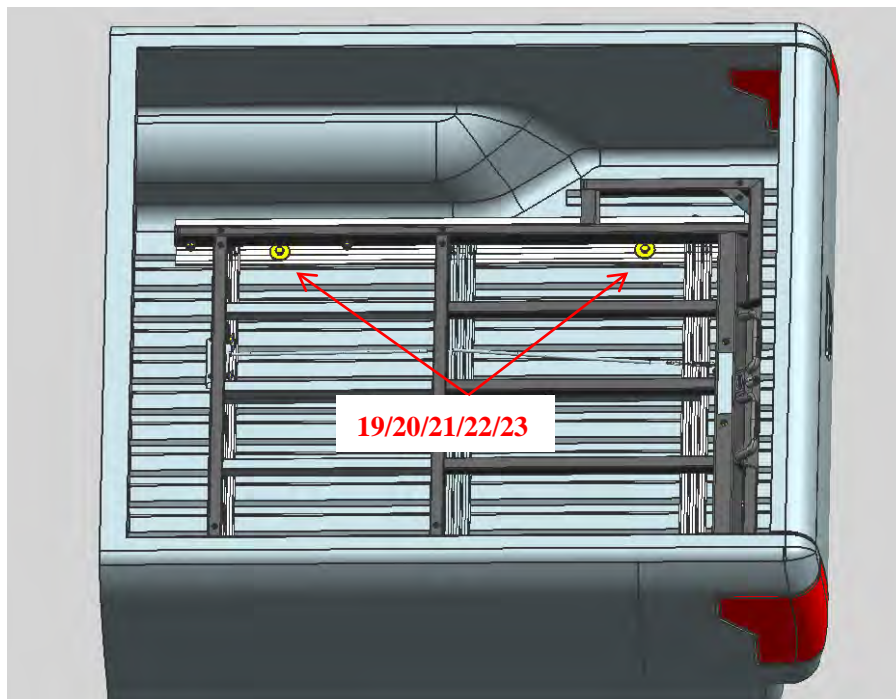

Step 9: Reinstall the plate on the base.

Step 10: Test and make sure that the slide tray is steadily fixed, fully tighten all hardware.

Step 11: Installation is finished, pick up all tools.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.