



**TEL: 1-866-XANATOS**

**INSTALLATION INSTRUCTIONS  
HANDRAIL FOR ROO FRACK  
WHPR1**

# INSTRUCTION MANUAL






**MODEL NO.:** KW1562

**PRODUCT DESCRIPTION:** HANDRAIL FOR ROO FRACK (1350\*1250)

## 1、Notes:

- ①All pictures in the instruction manual are for reference only. The pictures may be different from the real products, but the installation method is the same.
- ②For security, please check regularly whether all accessories connected well with the car before driving.

## 2、Parts List : (The following parts do not include standard car installation parts)


SN.	NAME	QTY.	SPEC.	GRAPHIC
1	HEXAGON BOLT	12	M8*20	
2	SPRING WASHER	12	D8	
3	FLAT WASHER	12	D8	
4	M8 WASHER PLATE	12		
5	HANDRAIL	2		



## 3、Installation Procedure:

**Step 1:** Check whether the accessories are complete by referring to the accessory list and installation drawing.

**Step 2:** As shown in the drawing, tighten the bar with bolts.

**Step 3:** Check whether the bolts are miss and all bolts are tightened.

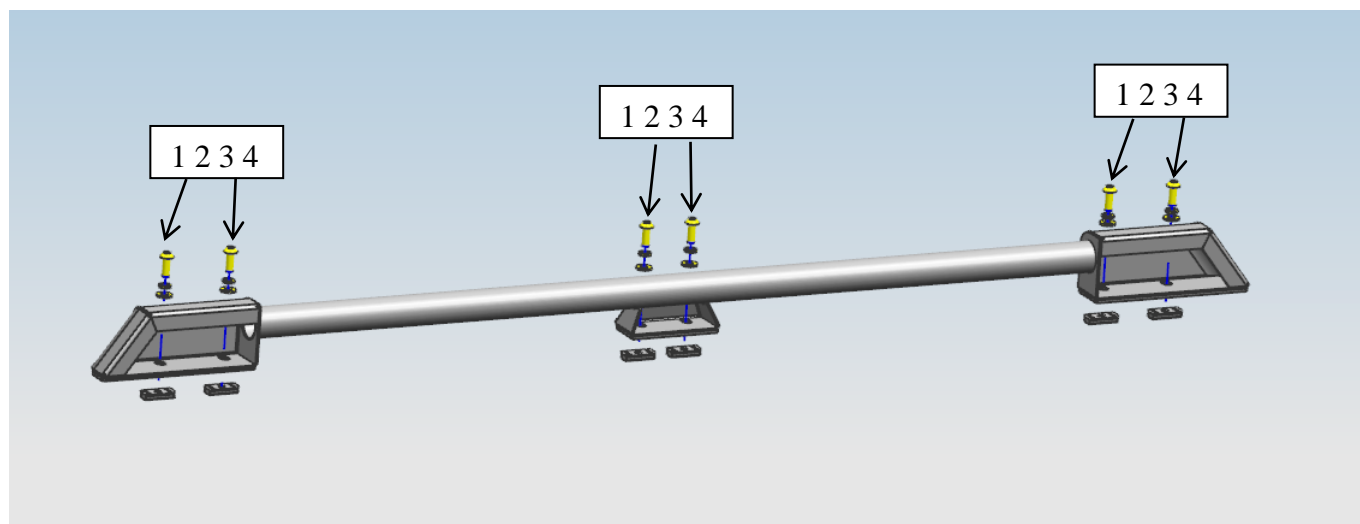

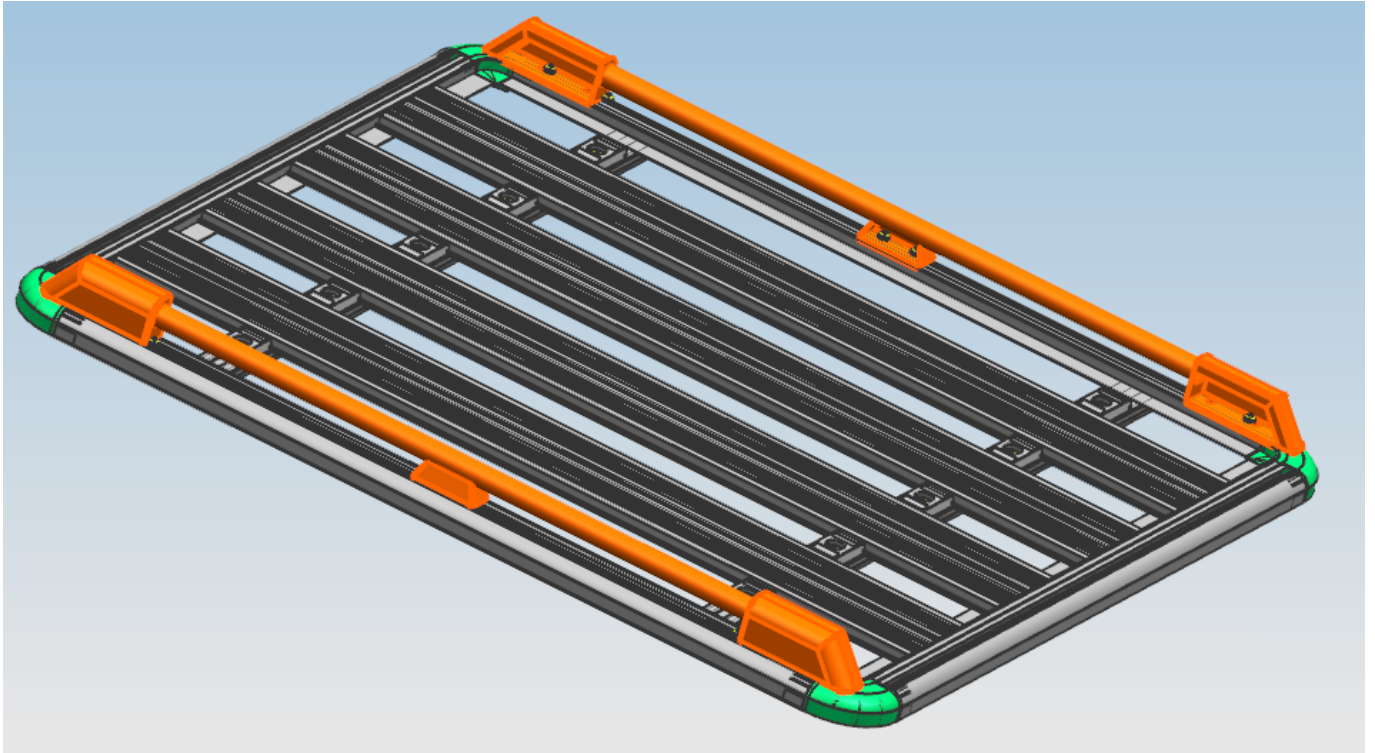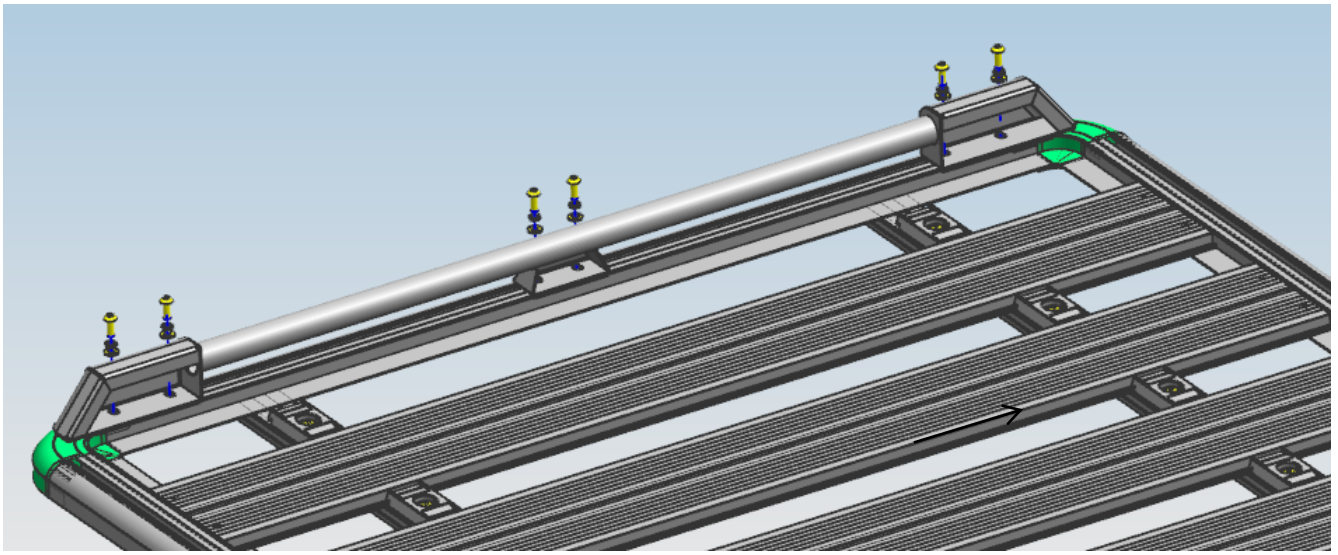

**4、 Disclaimer:** The related problems and losses caused by improper installation and use are not covered by our warranty.