

# INSTALLATION INSTRUCTIONS S/S MODULAR GRILLE GUARD FOR 2019-2024 TOYOTA RAV4 PART # 17A093904MSS

## **Before Installation**

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

#### Parts list

| NO. | QTY | PICTURE             | NO.  | QTY | PICTURE             |
|-----|-----|---------------------|------|-----|---------------------|
| 1   | 1   | GRILLE GUARD        | 2    | 1   | LEFT BRUSH GUARD    |
| 3   | 1   | RIGHT BRUSH GUARD   | 4    | 1   | BRACKET (L)         |
| (5) | 1   | BRACKET (R)         | 6    | 1   | SUPPORT BRACKET (L) |
| 7   | 1   | SUPPORT BRACKET (R) | 8    | 2   | PLATE BOLT          |
| 9   | 6   | HEX BOLT M10*35     | (10) | 8   | SPRING WASHER D10   |


Page 2 of 5

|     |    | Sa  | S MODULAR GRILLE GUARD FOR 2019 TOYOTA RAV |    |                                    |
|-----|----|---|--|----|------------------------------------|
| 11) | 14 | LARGE WASHER DAG                                | 12   | 8  |                                    |
|     |    | LARGE WASHER D10                                |  |    | HEX NUT M10                        |
| 13  | 1  | ALLEN WRENCH S=5                                | 14   | 12 | LARGE WASHER D8                    |
| 15  | 6  | TYPE 1 HEX LOCK NUT M8 WITH NON-METALLIC INSERT | 16   | 6  | HEX SOCKET BUTTON HEAD<br>SCREW M8 |

## InstallationSteps


# Installation Figure:

Step 1: Mount support bracket L&R 6 7 on the mounting point in the hood of the car, (Figure 1) . Do not fully tighten the bolts at this step.

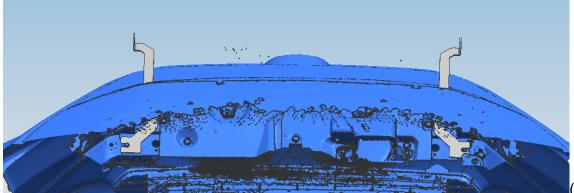


(Figure 1)

Step 2: Mount bracket L&R ④ ⑤ in the bottom of the frame with plate bolt ⑧, hex bolt m10\*35 ⑨, spring washer d10 ⑩, large washer d10 ⑪ and hex nut m10 ⑫. Do not fully tighten the bolts at this step.

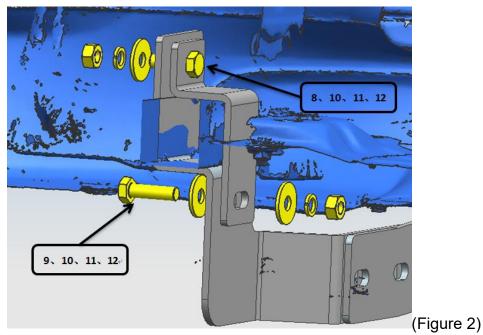


Step 3: Install guile guard ①, brush guard L&R ② ③ and support bracket L&R ⑥ ⑦ with allen wrench S=5 ①, large washer D8 ②, type 1 hex lock nut m8 with non-metallic insert ① and hex socket button head screw M8 ⑥, (Figure 3). Connect guile guard and brackets with hex bolt m10\*35 ⑤, spring washer d10 ①, large washer d10 ① and hex nut m10 ②, (Figure 4).

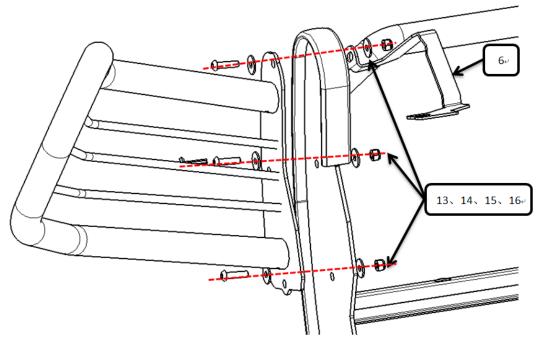

(Figure 3)


Page 4 of 5

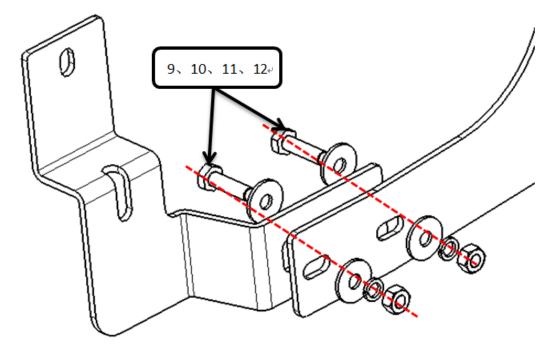

(Figure 4)

Step 4: Adjust the grille guard to perfect position and fully tighten all the hardware.

Step 5: Installation finished, pick up all tools.

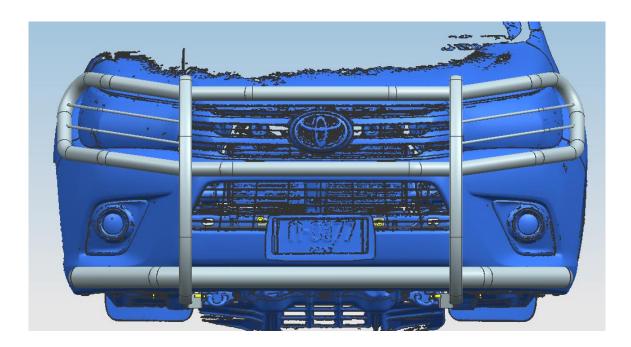

●NOTE: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.