



**TEL: 1-866-XANATOS**

# **INSTALLATION INSTRUCTIONS**

**PART # 17A110403MA**


**2013-2018 NISSAN PATHFINDER GRILLE GUARD**

**MODULAR**


**INSTALLATION INSTRUCTIONS**  
**2013-2018 NISSAN PATHFINDER GRILLE GUARD**  
**PART NO # 17A110403MA**

**PARTS LIST:**

No.	Part Description	QTY	No.	Part Description	QTY
<b>1</b>	Grille Guard	1	<b>10</b>	M8x30mm "T" Bolt	2
<b>2</b>	Mount bracket	2	<b>11</b>	M8 Flat washer	2
<b>3</b>	Reinforcing rib	2	<b>12</b>	M8 Lock washer	2
<b>4</b>	M12 Nut	2	<b>13</b>	M8 Nut	2
<b>5</b>	M12*110mm Hex Head Bolt	4	<b>14</b>	85*150mm "U" Bolt	2
<b>6</b>	12*35mm Hex Head Bolt	6	<b>15</b>	M10 Flat washer	4
<b>7</b>	M12 Flat washer	10	<b>16</b>	M10 Lock washer	4
<b>8</b>	M12 Lock washer	10	<b>17</b>	M10 Nut	4
<b>9</b>	M12 Nut	6	<b>18</b>		

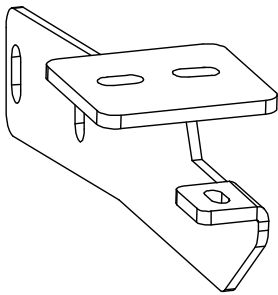


**Left**

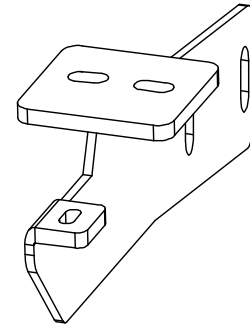


**Right**

**Mount bracket**

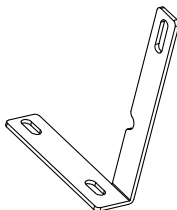

**Left**

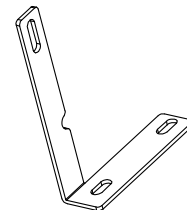

**Right**

**Mount bracket**

## INSTALLATION STEPS :

STEP 1:Check the parts in the box carefully if match above list .

STEP 2:Pls prepare the tools for installation, follow as:8-10 wrench or 17-19 wrench

STEP 3:Put the mount bracket into the girder of the car, and tighten it with the 6、7、9、10、11 。

STEP 4:Put the mount bracket into the girder of the car, and tighten it with the 4、8、9、10、11。

STEP 5:Put the mount bracket into the mount bracket of the car, and tighten it with the 16、17、18、19。

STEP 6:Install grille guard on the mount bracket, and tighten it with the 8、9、10、11。

STEP 7:Installation is finished。

