

INSTALLATION INSTRUCTIONS

PART#: 17A155900SS/17A155900A GRILL GUARD FOR HONDA ELEMENT 03-08

TEL: 1-866-XANATOS

PARTS LIST

- (1) FRONT BAR
- (2) FRAME MOUNT BRACKETS
- (2) TOP SUPPORT BRACKETS
- (4) 7/16" x 1" HEX BOLTS
- (6) 7/16 x 1 1/4 HEX BOLTS
- (2) 5/16 X 3/4 HEX BOLTS
- (2) 7/16 DUAL NUT PLATES


(16) 7/16" FLAT WASHERS


- (6) 7/16" HEX LOCK NUTS
- (2) 1/4" x 3/4" SCREWS
- (1) 1/4" HEX LOCK NUTS
- (2) 1/4 WASHERS
- (2) 5/16 NUT PLATES

PROCEDURE

- 1. Remove the plastic rivets securing the plastic guard located underneath the vehicle in order to install the front bar.
- 2. Start with the passenger side assembly, position one of the 7/16-nut plate behind the cross member opening and align the 7/16 nut plate with the two matching holes in the frame rail. Fasten the frame brackets to the bottom cross member as shown in the illustration using the 7/16 x 1" hex bolts and 7/16 washers.
- NOTE: ALIGN FRAME BRACKETS 24 5/8" FROM OUTSIDE TO OUTSIDE OF BRACKETS AND SECURE THEM.
- 3. Open hood to access existing holes on vehicle.
- 4. Attach top bracket support to the cross member existing hole using the 5/16 nut plate and 5/16 x 3/4 hex bolt as shown in illustration.
- 5. Using a utility knife, carefully cut slots on the plastic guard underneath the vehicle to fit around the frame brackets.
- 6. Re-attach the plastic guard
- 7. Attach front bar assembly to the lower brackets (inner edge) using the $7/16 \times 1-1/4$ " hex bolts, 7/16 hex nuts ,washers, and the top support bracket using the $\frac{1}{4} \times \frac{3}{4}$ screws, hex nuts, and washers.
- 8. Align front bar assembly with front of vehicle and secure all fasteners.

2003-05 HONDA ELEMENT

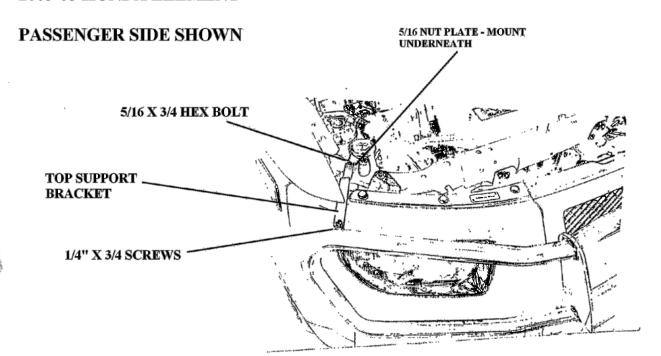

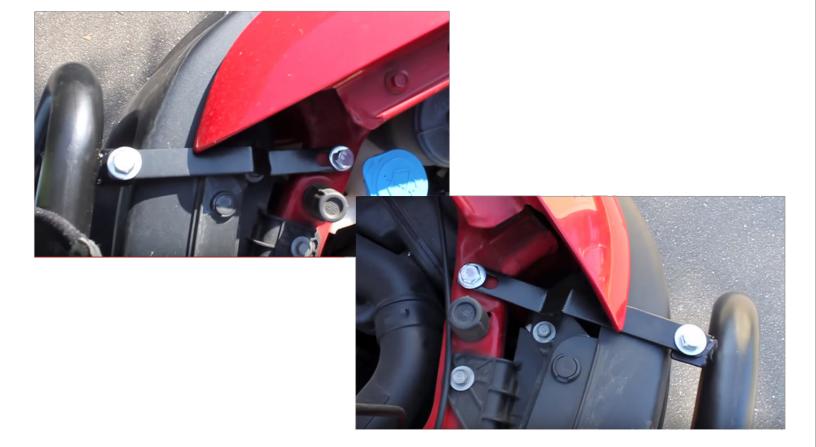

PASSENGER SIDE ASSEMBLY

