



**TEL: 1-866-XANATOS**

## **INSTALLATION INSTRUCTIONS**

**PART # CBB-FOC2005SP / CBS-FOC2005SP  
BULL BAR FOR FORD EXPLORER 06-10**


## PARTS LIST

- (1) BULL BAR
- (2) BRACKETS
- (2) M12\*35mm Bolt Plate
- (2) M12\*100mm Hex Bolts
- (2) M12 Hex Nuts
- (14) M12 Flat Washers
- (4) M12\*30mm Hex Bolts
- (6) M12 lock Washers
- (6) M12 Hex Nuts

## PROCEDURE

1. Begin installation by removing the factory lower valance and plastic splash shield as shown in Fig. 1 place splash shield aside.
2. From underneath vehicle. Locate mounting holes in frame Fig 2a and Fig 2b. Place bracket in place as shown and attach to frame using M12 x 100 nuts bolts and washers and the M12 bolt plates nuts and washers through bottom of frame rail.
3. Position guard to the outside of brackets and secure to brackets as shown in fig. 3. Attach brackets to guard and align guard with vehicle. Fully tighten all hardware at this time.

Fig1

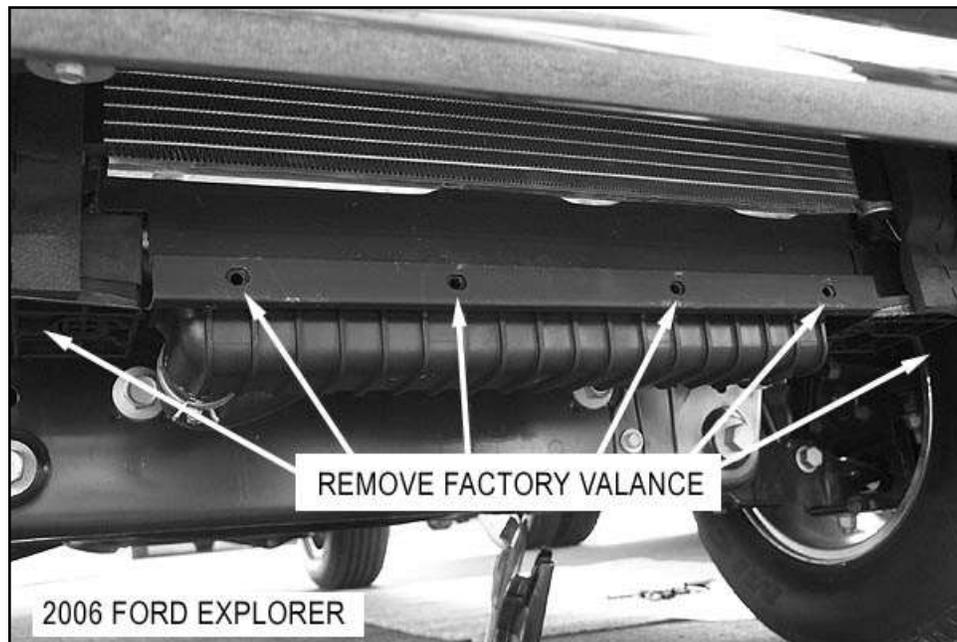

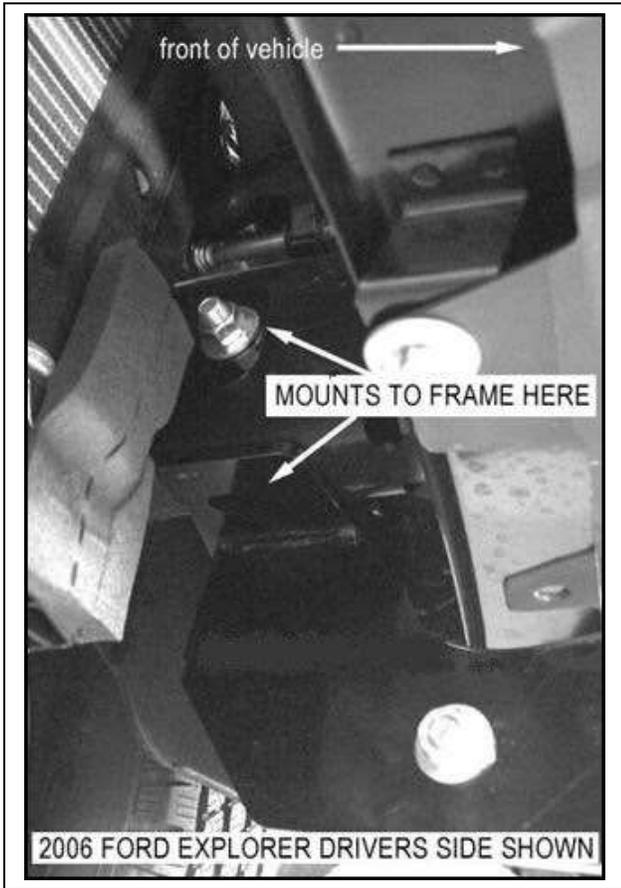


Fig 2a

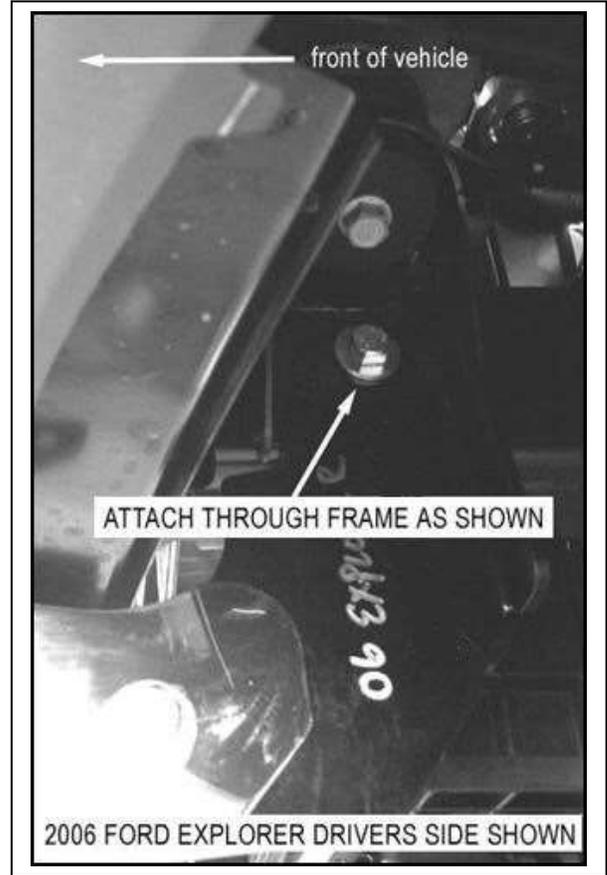


Fig. 2b

Fig. 3

