



# **INSTALLATION INSTRUCTIONS**

**BULL BAR (WITH SKID PLATE) FOR NISSAN MURANO 15-20**

**PART # CBB-NIA1602SP**

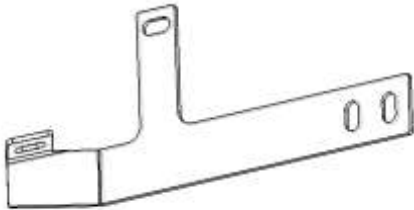
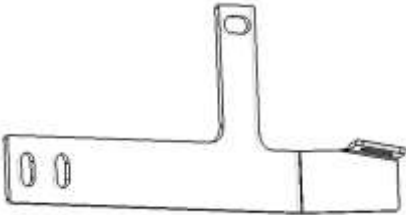
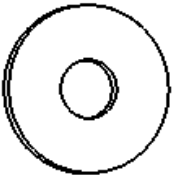

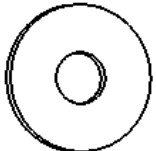


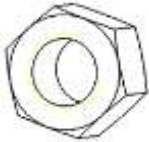
## Before Installation

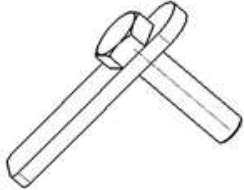

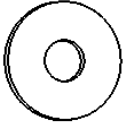



- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PIC	NO.	QTY	PIC
①	1		②	1	
		Bracket-L			Bracket-R
③	2		④	2	
		D14 Flat washer			M12*40 Hex bolt
⑤	12		⑥	4	
		D12 Flat washer			M12*35 Hex bolt
⑦	6		⑧	6	
		D12 Spring washer			M12 Hex nut

⑨	2	 M8 T-bolt	⑩	2	 D8 Spring washer
⑪	4	 D8 Spring washer	⑫	2	 M8 Hex nut
⑬	2	 M12 Plastic fixture block	⑭	2	 M8 Plastic fixture block

## Installation Steps

### INSTALLING PICTURE

FIG.1

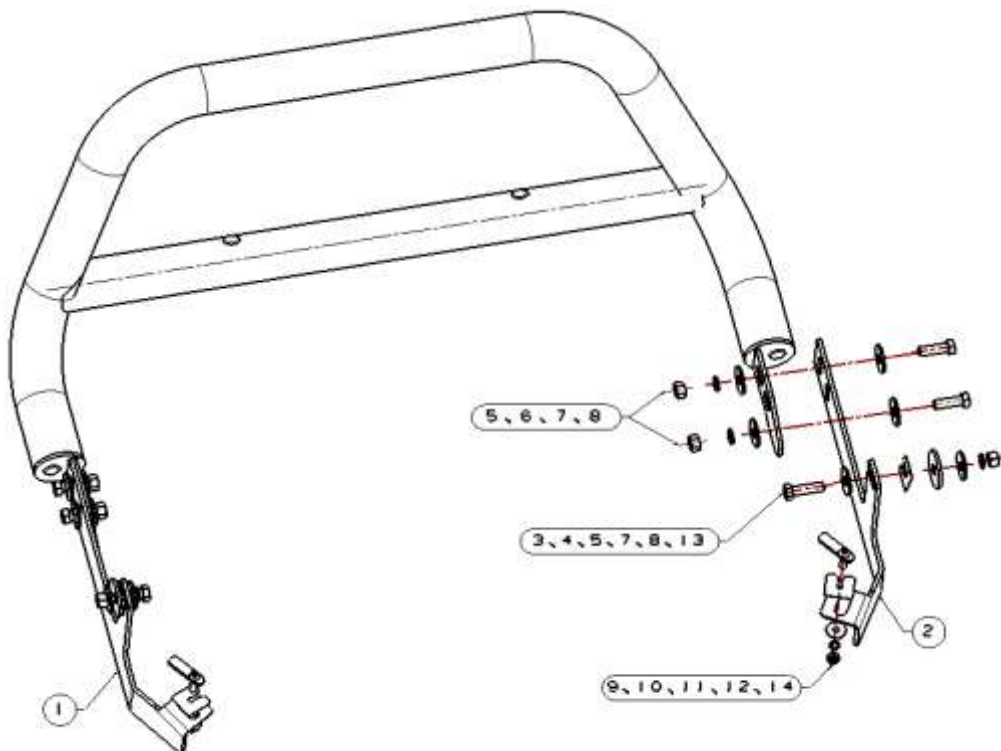
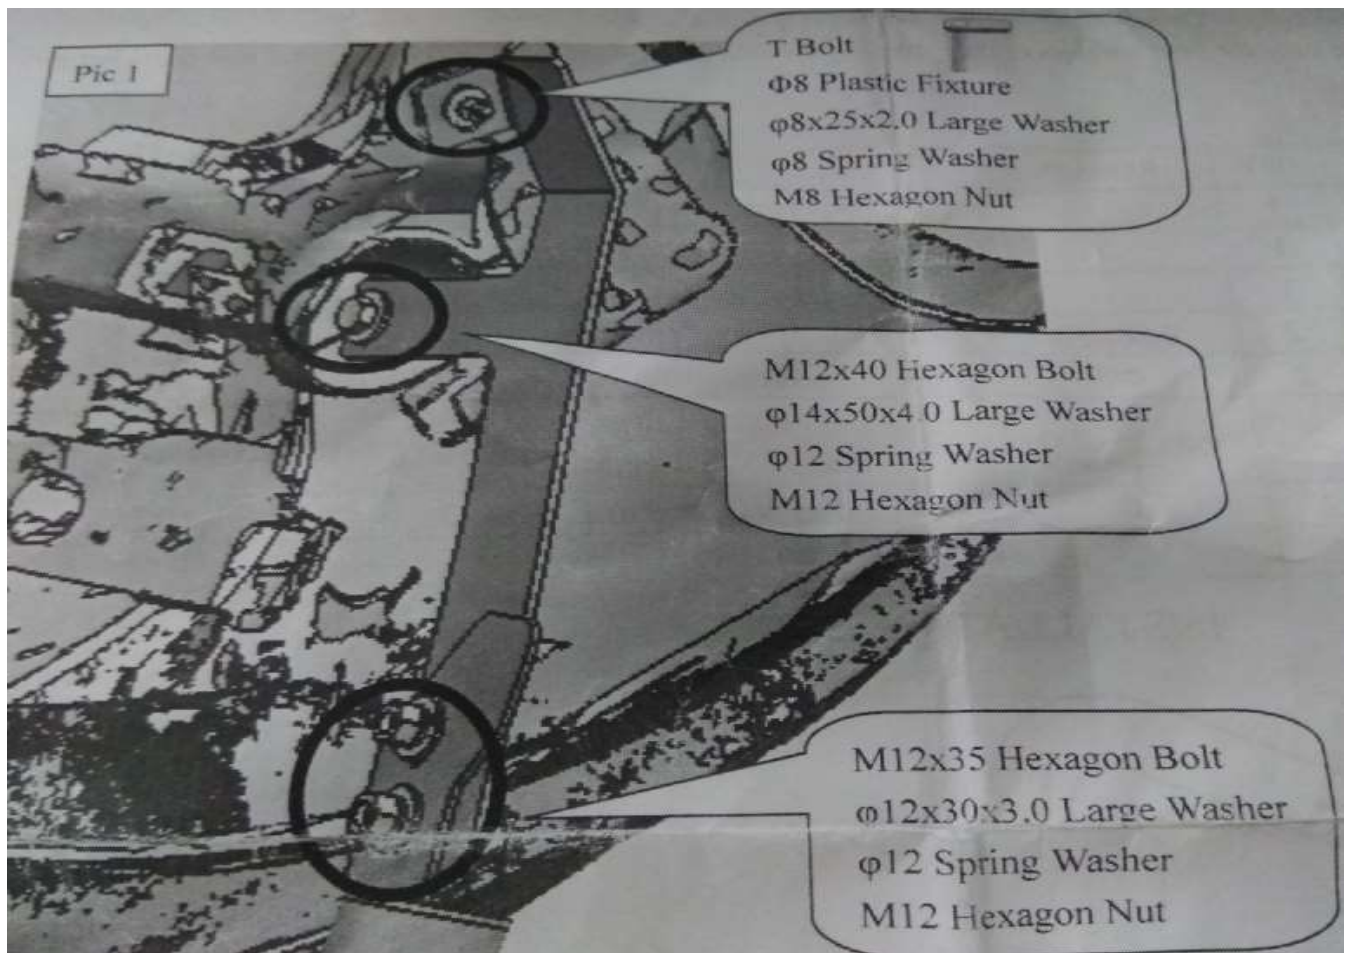
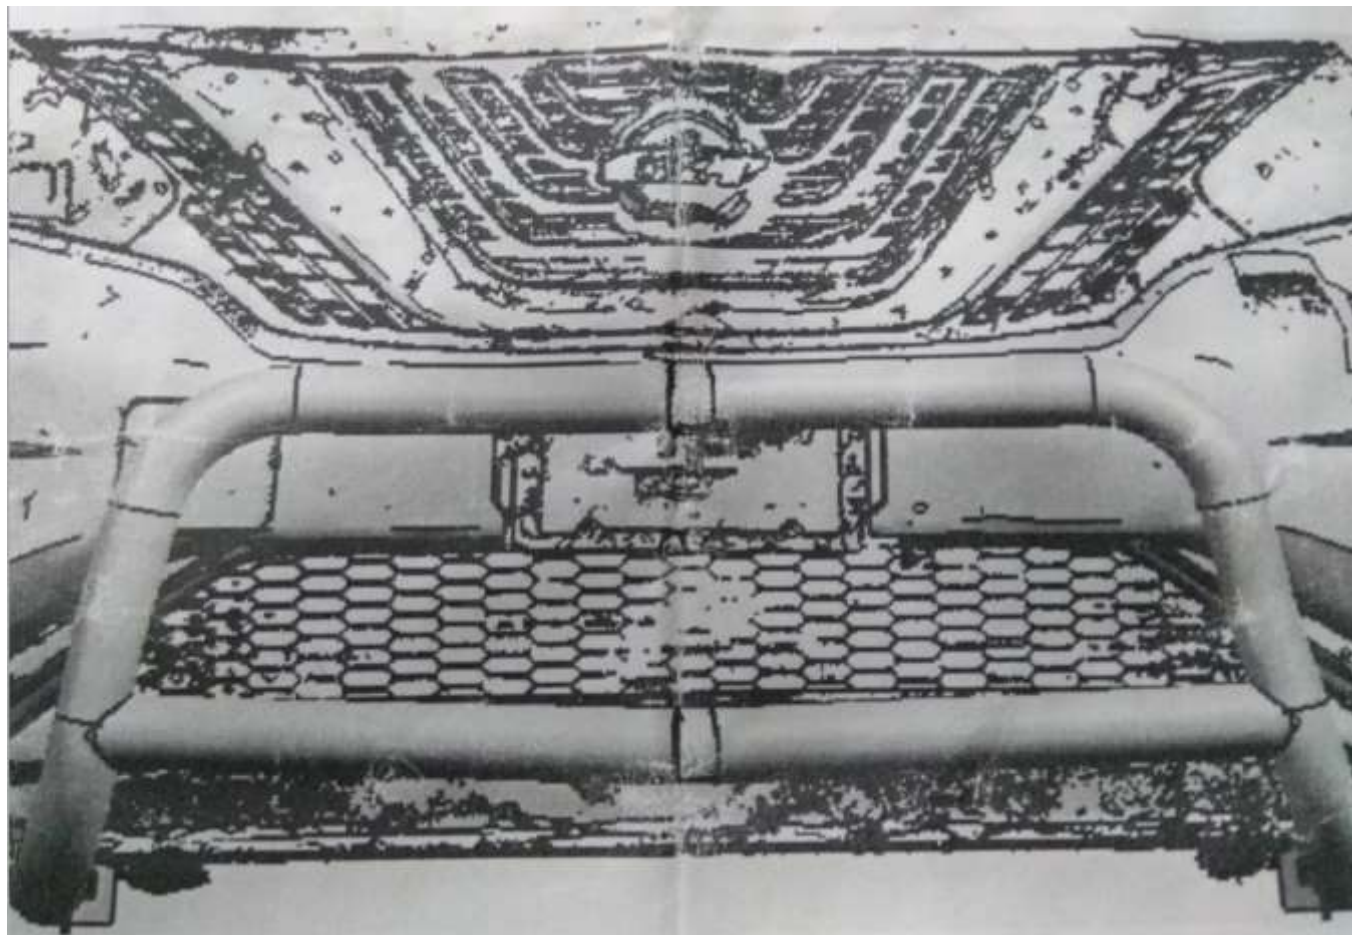


FIG.2



Step 1: Check all the contents are available in accordance with the above list.

Step 2: Find out the mounting position (FIG.2), using factory bolts to install bracket -L&R, then connect the bull bar and the brackets as FIG.1.



Step 3 : Installation is finished, pick up all tools.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.