




INSTRUCTIONS Part # TOB4701

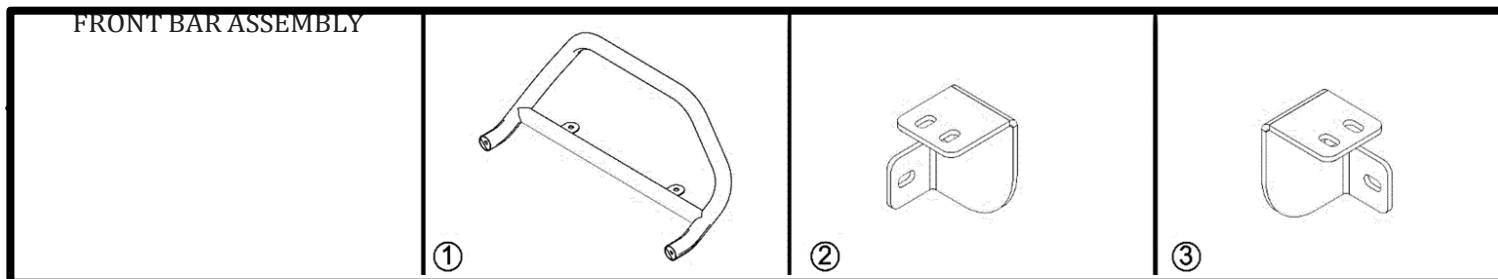

| ITEM | QTY | CONTENTS - CONTENIDO - CONTENU | TOOLS - HERRAMIENTA - OUTILS |
|------|-----|---|------------------------------|
| 1 | 1 | FRONT BAR ASSEMBLY | 3/4" SOCKET |
| 2,3 | 2 | BRACKET, PASSENGER (2) AND DRIVER (3) | 17MM SOCKET |
| 4 | 2 | 1/2-13 X 2.00" HEX HEAD BOLT | RATCHET TORQUE |
| 5 | 2 | 1/2" FLAT WASHER | WRENCH |
| 6 | 2 | 1/2" LOCK WASHER | |
| 1 | 1 | BARRA PARA PARRILLA | DADO DE 3/4" |
| 2,3 | 2 | SOPORTE, ACOMPAÑANTE (2) Y EL CONDUCTOR (3) | DADO DE 17MM |
| 4 | 2 | PERNOS CON CABEZA HEXAGONAL DE 1/2-13 X 2,00" | MANERAL |
| 5 | 2 | ARANDELAS PLANAS SAE DE 1/2" | LLAVE DE TORQUE |
| 6 | 2 | ARANDELAS DE PRESIÓN DE 1/2" | |
| 1 | 1 | MONTAGE DE LA BARRE PARE-CHOCES SAFARI | DOUILLE 3/4 PO |
| 2,3 | 2 | SUPPORTS, PASSAGER (2) ET CONDUCTEUR (3) | DOUILLE 17MM |
| 4 | 2 | BOULON A TETE HEXAGONALE DE 1/2-13 X 2,00 PO | CLIQUET |
| 5 | 2 | RONDELLE PLATE 1/2 PO | CLE DE COUPLE |
| 6 | 2 | RONDELLE A FREIM DE 1/2 PO | |

STEP 1. Verify all parts are present. Read instructions before beginning.

STEP 2. Locate and remove tie down loops and tow hook fasteners. Install driver's side bracket between frame and tie down loop and passenger side bracket between frame and tow hook. Replace previously removed fasteners, do not tighten down.

STEP 3. Attach Front Bar to mounting brackets using 1/2" Hex Head Bolts. Level and adjust Front Bar then tighten down all hardware.

Recommended torque values are 64 Ft. Lbs. for 1/2" fasteners and 61 Ft. Lbs.