





Attention

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

PART LIST

| | | | | |
|------|---|---|---|--|
| PIC |  |  |  |  |
| NAME | Side pedal shell | Pedal Frame | Hardware | |
| QTY | 1PAIR | 1PAIR | 1 package | |

Step 1: Disassemble the front and rear mudguards and the fasteners on the bottom of the car.



Step 2. Remove the two clips and plastic brackets used in the original side skirts of the car body (note: the white clip marked by the arrow in the figure below must be withdrawn like a nut).




Step 3: Assemble the parts removed from the original car to the new side tread shell as shown in the figure.



Step 4: Install the side pedal plastic frame (fasten the nut after adjusting the front and rear positions)



Step 5: Install the side pedal shell, and after the buckle holes are aligned, take a firm shot until the buckle is tight, and the small cover in the middle is covered.

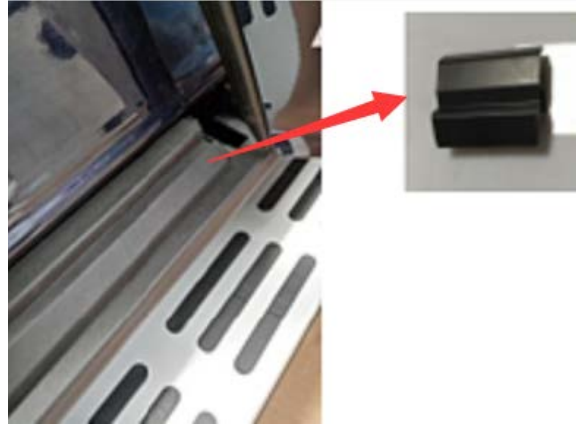

Step 6: Completion

