

TEL: 1-866-XANATOS

INSTALLATION INSTRUCTION

PART NO.BB2591

BULL BAR W/O SKID PLATE FOR TOYOTA RAV4 96-05



TAKE NOTE:


- 1) PICTURES HERE ARE ONLY FOR REFERENCE. THE PRODUCT YOU GET MAY BE DIFFERENT FROM THE PICTURE. BUT THE INSTALLING WAY IS THE SAME.
- 2) PLEASE LOOK THROUGH THIS LIST BEFORE INSTALLATION. PLEASE PROTECT YOUR VEHICLE WELL TO AOVID SCRATCHING.
- 3) PLEASE CHECK THE GRILL GUARD TO MAKE SURE THE HARDWARE IS TIGHTENED AND PLEASE CLEAN IT FOR KEEPING SHINNING.

SPECIALITY:

- 1) THOUGHTFUL DESIGN FOR MATCHING YOUR VEHICLE PROPERLY TO SHOW YOUR PERSONALITY.
- 2) NO DRILLING AND EASY INSTALLATION.

SPARE PARTS

NO.	DESCRIPTION	QUANITY	MEASURE	NO.	DESCRIPTION	QUANITY	MEASURE
1	GRILL GUARD	1		5	FLAT WASHER	8	12mm
2	BRACKET L	1		6	SPRING WASHER	4	12mm
3	BRACKET R	1		\bigcirc	HEX NUT	4	M12
4	HEX BOLT	4	M12X35				

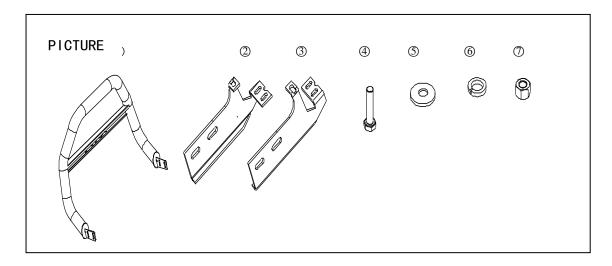


TOOLS:TOW 19mm WRENCH.

INSTALLING STEP


STEP ONE: REFER TO THE SPARE PARTS LIST AND DISTINGUISH THE LEFT AND RIGHT BRAKCET. MAKE SURE PARTS ARE OK.

TEP TWO: INSTALL THE BRACKET AS BELOW.

- 1、 REMOVE THE FRONT SKID PLATE. THEN SEE THE ORIGINAL BOLTS AS BELOW.
- 2. REMOVE THE ORIGINAL BOLTS, AND INSTALL THE RIGHT BRACKET (SAME INSTALLING WAY FOR THE LEFT BRACKET).

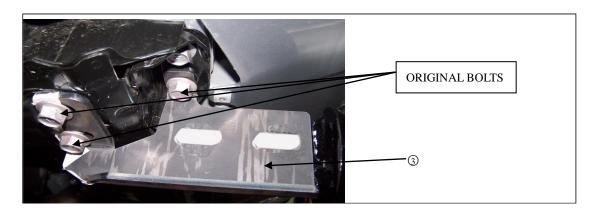

3、INSTALL ① WITH BRACKETS AND TIGHTEN BOLTS. SEE THE PICTURE BELOW.

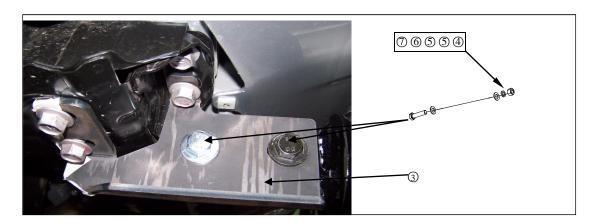

STEP THREE: MAKRE SURE BOLTS ARE TIGHTENED AND THE GRILL GUARD IS FIXING STRONG ENOUGH.

STEP FOUR: FINISH.

NOTE: DAMAGE ARISING FROM INCORRECT INSTALLATION AND USAGE IS OUT OF OUR QUALITY.