




INSTALLATION INSTRUCTIONS APPLICATION 1997-2001 HONDA CRV

TEL ☐ 1-866-XANATOS

Black A Bar CBB-HOB3501 MOUNT KIT

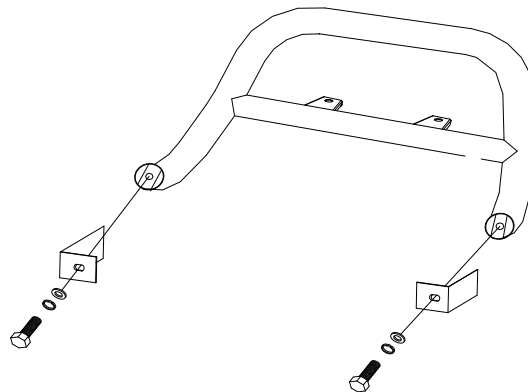

QTY	PARTS KIT CONTENTS DESCRIPTION	TOOLS REQUIRED
1	MOUNT BRACKET-DRIVER SIDE	1/2" SOCKET
1	MOUNT BRACKET-PASSENGER SIDE	1/2" WRENCH
2	M12×50 HEX BOLT	9/16" SOCKET
2	Φ12 SAE FLAT WASHERS	3/4" SOCKET
2	Φ12 LOCK WASHERS	3/4" WRENCH
2	M10×30 HEX BOLT	TORQUE WRENCH
4	Φ10 FLAT WASHER	PATCHET
2	Φ10 LOCK WASHER	
2	M8×25 HEX BOLT	
2	M8 HEX NUT	
4	Φ8 FLAT WASHER	
2	Φ8 LOCK WASHER	

- STEP 1: REMOVE THE CONTENTS FROM THE BOX AND CHECK FOR ANY DAMAGE. VERIFY ALL PARTS AGAINST PARTS LIST.
- STEP 2: READ AND UNDERSTAND INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION.
- STEP 3: INSTALL MOUNT BRACKET USING BOTTOM M8 ANS M10MM FASTENERS THROUGH TABS AS SHOWN IN FIG 1, 2 AND 3. LEAVE LOOSE.
- STEP 4: INSTALL BACKING PLATE USING M10 FASTENERS AS SHOWN (FIG. 1 AND 3) LEAVE LOOSE.
- STEP 5: MOUNT SAFARI BAR USING M12 FASTENERS. (SEE FIG 3 TO 4)

STEP6. Center and level Safari Bar. TIGHTEN AND Torque fasteners as LISTED. M12 fasteners to 65FT.LBS, M10 –32 FT.LBS,M8-17 FTLB

