

INSTALLATION INSTRUCTION

2022-2024 Nissan Pathfinder

Bull Bar

PART # C70



**BLACK HORSE
OFF ROAD**

Attention:


- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might happen.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affection for your fitting.

Part List:

NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
1	Bracket(Left)	1		6	Spring Washer	6	Φ10
2	Bracket(Right)	1		7	Hexagon Nut	6	M10
3	Shaped Bolts Sleeve	2		8	Shaped Bolts	2	M10
4	Hexagon Bolt	4	M10*35	9			
5	Large Washer	10	Φ10*30*2.5	10			

Note: The installation methods on the left and right sides are the same.


INSTALLATION PICTURE

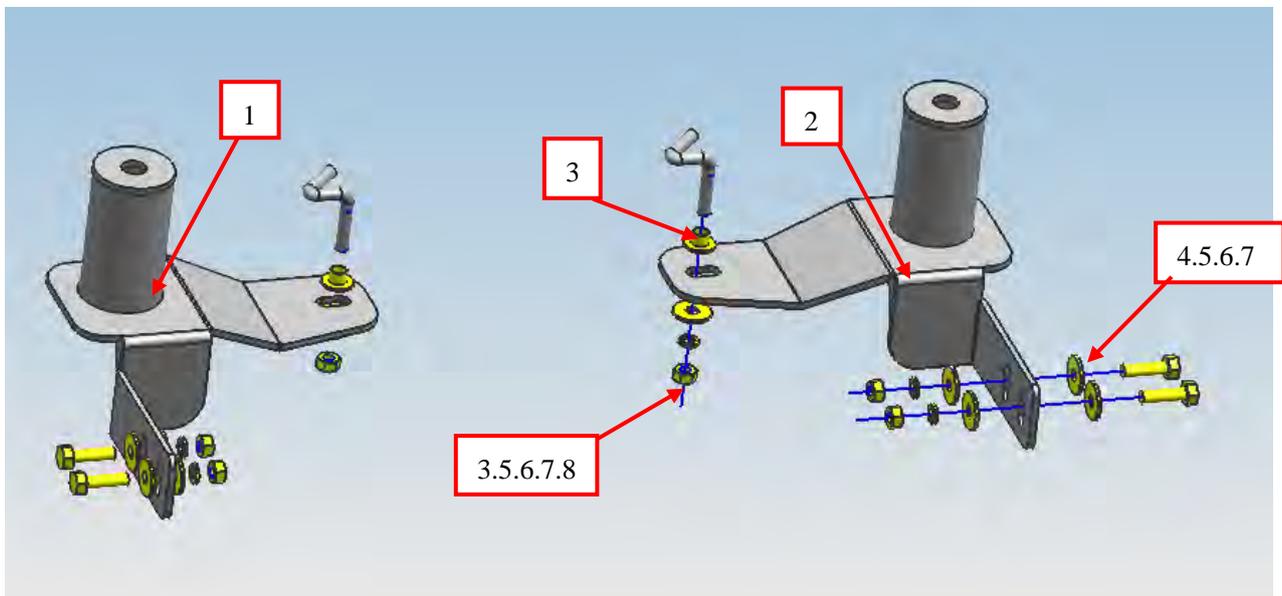

INSTALLATION STEP

Step 1: Refer to the Part List to check if all the hardware are included.

Step 2: Install brackets (left/right) according to the bottom hole position of the vehicle, but do not fasten.

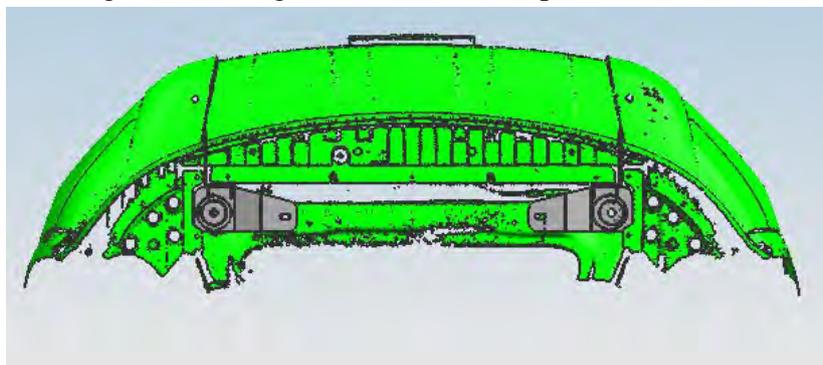

Step 3: Install running board on the brackets and then adjust brackets to the proper positions.

Step 4: Check if all hard ware are installed and fasten all.

Disclaimer: Caused due to improper installation initiates or some related problem and losses, are beyond our company's quality assurance.