



TEL: 1-866-XANATOS

# **INSTALLATION INSTRUCTIONS**

**ARMOUR II ROLL BAR FOR 1/2 TON TRUCKS (GM SILVERADO  
14+/FORD F150 15+/DODGE RAM 15+/TOYOTA TUNDRA 07-21)**

**PART # AR2-01B**

**PROTECTED BY ONE OR MORE PATENT**







## Before Installation














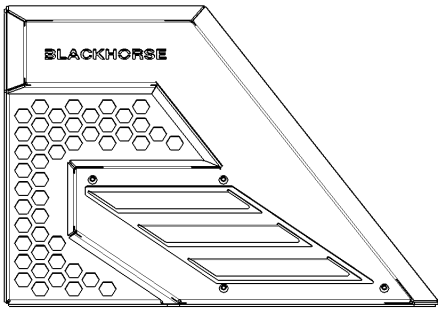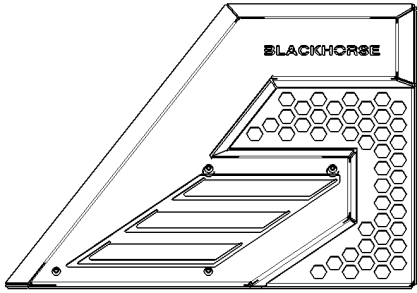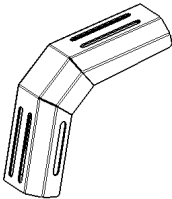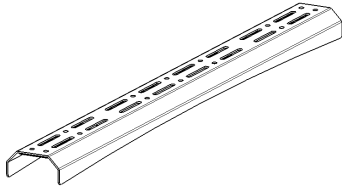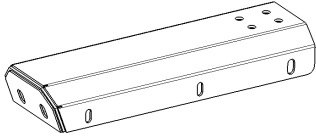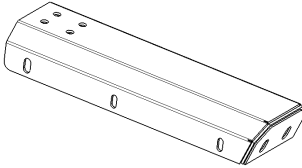



- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.


## Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 SIDE PLATE (L)	②	1	 SIDE PLATE (R)
③	2	 CONNECTING PLATE 1	④	1	 CENTRE BAR
⑤	1	 CONNECTING PLATE 3 (L)	⑥	1	 CONNECTING PLATE 3 (R)


⑦	1		⑧	1	
		MOUNTING BASE (L)			MOUNTING BASE (R)
⑨	26		⑩	26	
		HEX FLANGE NUT M8			FLAT WASHER D8 (8X24X2MM)
⑪	26		⑫	6	
		BUTTON HEAD BOLT M8_30			BUTTON HEAD BOLT ASSEMBLY M6_20
⑬	6		⑭	12	
		HEX FLANGE NUT M6			FLAT WASHER D10 (10X30X2.5MM)
⑮	6		⑯	6	
		LOCK WASHER D10			HEX NUT M10
⑰	6		⑱	6	
		HEX BOLT (FULL THREAD) M10_35			FLAT RIVETED NUT M10_18
⑲	1		⑳	1	
		ALLEN WRENCH S=4			ALLEN WRENCH S=5
㉑	5		㉒	2	
		BLACK ADHESIVE 1			BLACK ADHESIVE OF MOUNTING BASE 2
㉓	2				
		BLACK ADHESIVE OF MOUNTING BASE 3 (L & R)			

## Installation Steps


**Step1:** Assemble connecting plates 1&3&centre plates and side plates with standard parts ⑨ ⑩ ⑪ / ⑫ ⑬, as the following picture shown. Lock all standard parts once adjust the position to be proper.

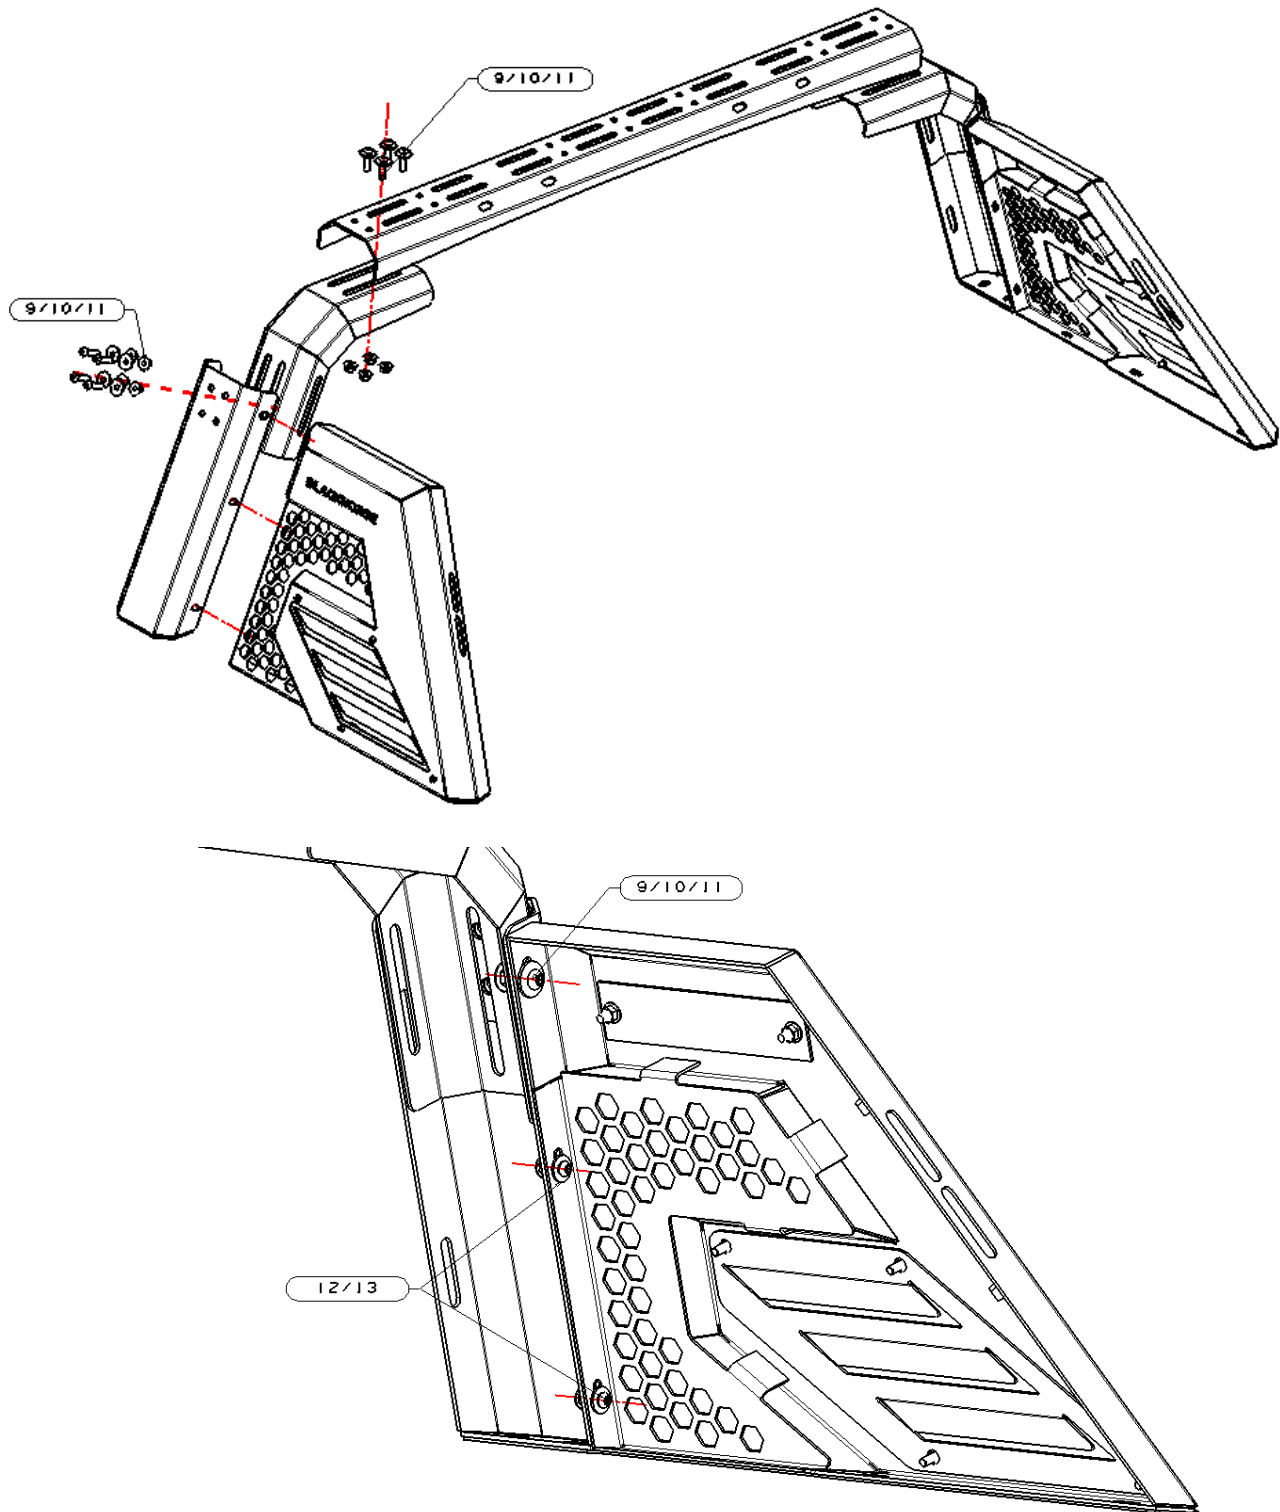


**Step2:** Stick the black adhesive (20) (21) (22) on the mounting base (L&R)

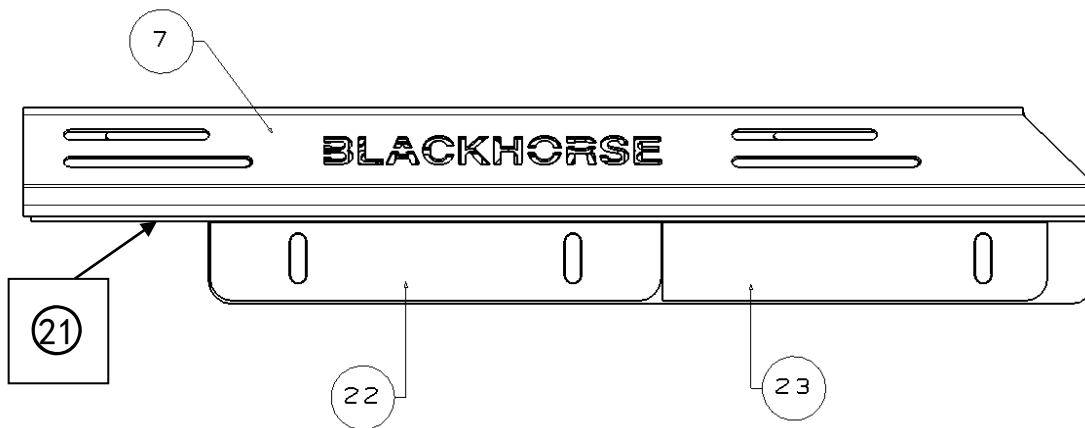

**Step3:** Connect the roll bar with mounting base by ha standard parts (9) (10) (11) / (12) (13)

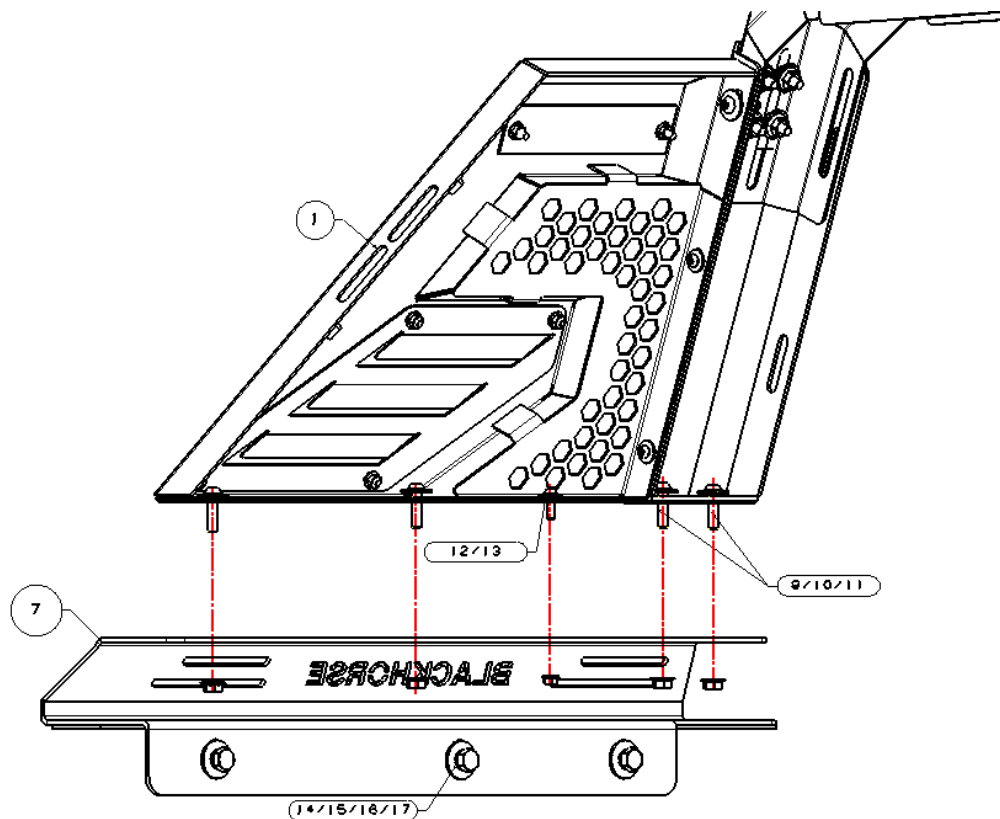

**Step 4:** Install roll bar on truck rail by hard standard parts ⑭ ⑮ ⑯ ⑰

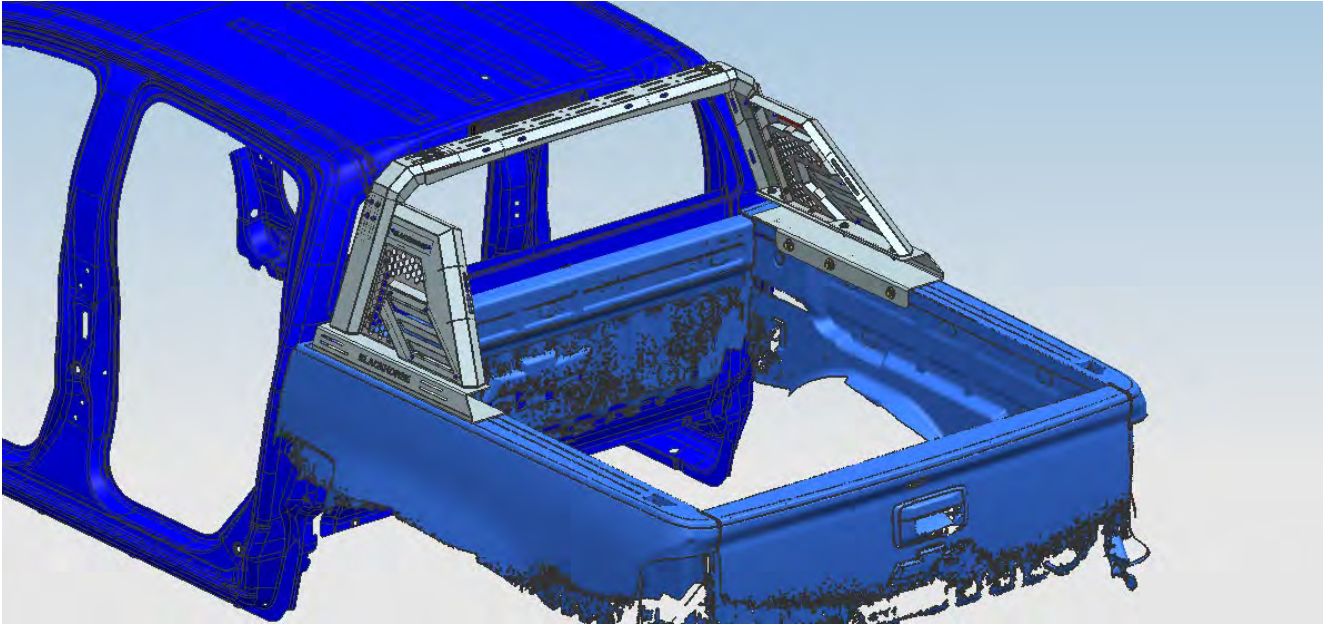

Installation completed and pick up all the tools.

## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.