



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

BLACK MODULAR GLADIATOR ROLL BAR WITH BRAKE LIGHT

FOR NISSAN FRONTIER 2022

PART # GLRB-22B

PROTECTED BY ONE OR MORE PATENT

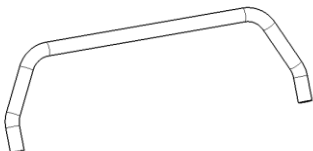
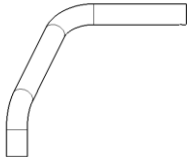
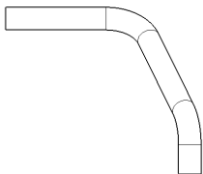


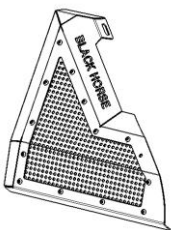
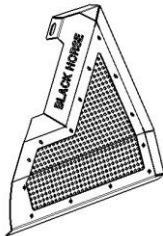
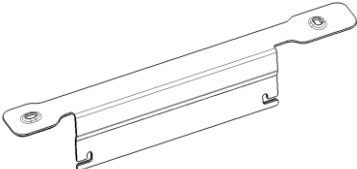
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

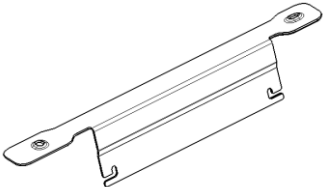
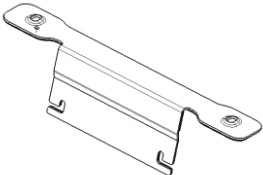

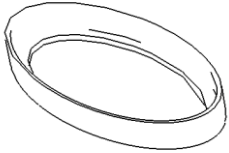

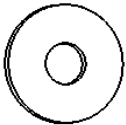


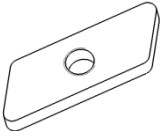
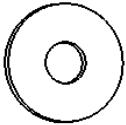


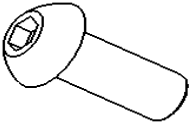

Care and Cleaning






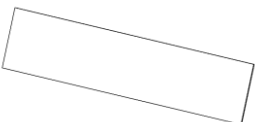


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

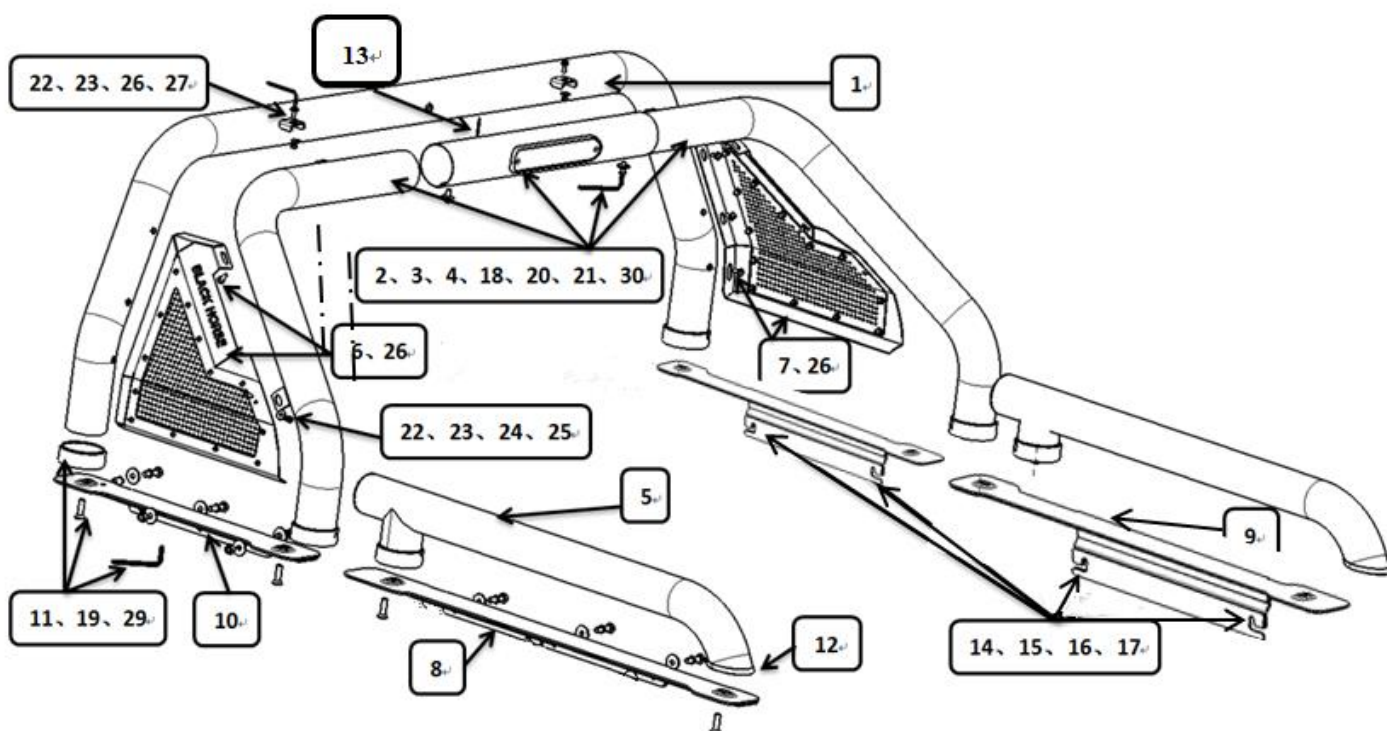
NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 MAIN TUBE	②	1	 SIDE TUBE (Driver/Left)
③	1	 SIDE TUBE (Passenger/Right)	④	1	 SIDE TUBE (MIDDLE)
⑤	2	 SIDE RAIL	⑥	1	 SIDE PLATE (Driver/Left)
⑦	1	 SIDE PLATE (Passenger/Right)	⑧	1	 REAR MOUNTING BASE (Driver/Left)

BLACK MODULAR GLADIATOR ROLL BAR WITH BRAKE LIGHT FOR NISSAN FRONTIER 2022

⑨	1	 REAR MOUNTING BASE (Passenger/Right)	⑩	2	 FRONT MOUNTING BASE (D&P)
⑪	6	 RUBBER COVER 1	⑫	2	 RUBBER COVER 2
⑬	1	 ALLEN WERNCH S=2.5	⑭	8	 FLAT WASHER D10 (10X30X2.5MM)
⑮	8	 HEX BOLT (FULL THREAD) M10_25	⑯	8	 LOCK WASHER D10
⑰	8	 NUT PLATE M10	⑱	2	 FLAT WASHER D8 (8X24X2MM)
⑲	8	 HEX SOCKET COUNTERSUNK HEAD SCREW M10_35	⑳	2	 LOCK WASHER D8
㉑	2	 BUTTON HEAD BOLT M8_20	㉒	4	 HEX NUT M6

23	4	 FLAT WASHER D6 (6X18X1.6MM)	24	2	 BUTTON HEAD BOLT M6_20
25	2	 LOCK WASHER D6	26	10	 BUTTON HEAD BOLT ASSEMBLY M6_20
27	1	 ALLEN WERNCH S=4	28	2	 RED PLASTIC PLATE
29	1	 ALLEN WERNCH S=6	30	1	 ALLEN WERNCH S=5

Installation Fig.



Step 1: Verify that all parts are present according to the manual.

Step 2: Connect side tube (D&P) and central side tube with accessories ② ③ ④ ⑱ ⑳ ㉑ ㉒ ㉓, adjust to the suitable position, and then lock tighten.

Step 3: Connect the main tube and side tube with accessories ㉔ ㉕ ㉖ ㉗, notice: don't lock tighten.

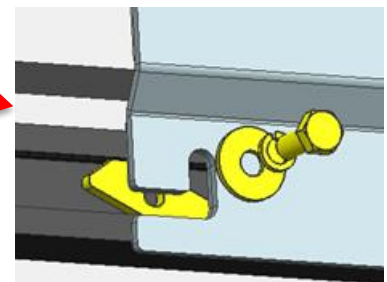
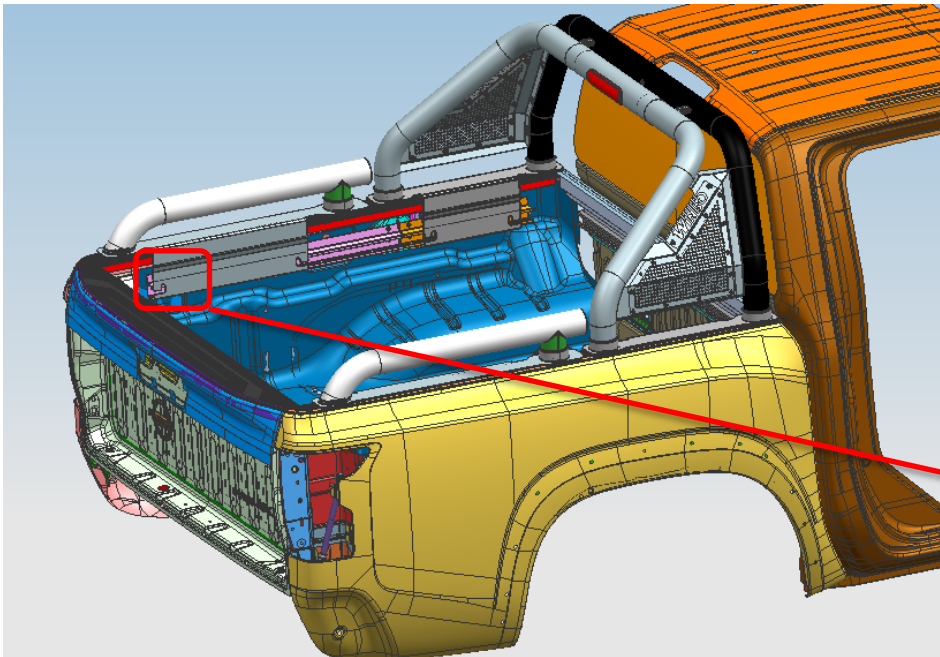
Step 4: Install the side decorated plate with accessories ⑥ ㉘ ㉙ ㉚ ㉛ ㉜, notice: don't lock tighten.

Step 5: Adjust all the parts to suitable position, install front mounting base (D&P) with accessories ⑪ ⑲ ㉝, then fully fasten all accessories.

Step 6: Place the roll bar on truck bed and adjust suitable position, Slide ㉞ Plate Nut M10 into the trunk chute. Use standard parts ⑭ ⑮ ⑯ ㉟ to fix roll bar on the trunk.

Step 7: To firmly fix the roll bar, install the red plastic plate on the decoration part.

Step 8: Complete installation, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.