



TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

**MAX T BULL BAR FOR 2024-2026 TOYOTA TACOMA
(BBMAX12T+MT06) (WITH LISCENCE PLATE RELOCATOR)**

PART # MBT-MT0612

PROTECTED BY ONE OR MORE PATENT






Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

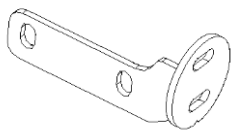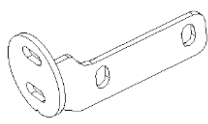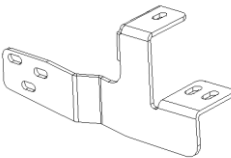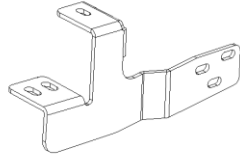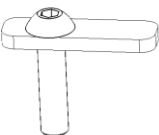NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Bull Bar	②	1	 Support Bracket (L)
③	1	 Support Bracket (R)	④	1	 Mounting Bracket (L)
⑤	1	 Mounting Bracket (R)	⑥	1	 Frame Bracket (L)
⑦	1	 Frame Bracket (R)	⑧	2	 T Bolt (M10x40 Button Head Bolt)(55x16-17-5)
⑨	2	 PVC Plastic Retainer φ10 (δ0.7*40*40)			

Standard parts:


NO.	NAME	QTY	REMARK	NO.	NAME	QTY	REMARK
⑩	Flat Washer	4	D8_22_2	⑪	Lock Washer	4	D8
⑫	Hex Bolt (Full Thread)	4	M8_35	⑬	Flat Washer	10	D10_27_3
⑭	Lock Washer	6	D10	⑮	Hex Bolt (Full Thread)	4	M10_35
⑯	Hex Nut	6	M10	⑰	Button Head Bolt Assembly	2	M6_20/A2-70
⑱	Allen Wrench	1	S=4				

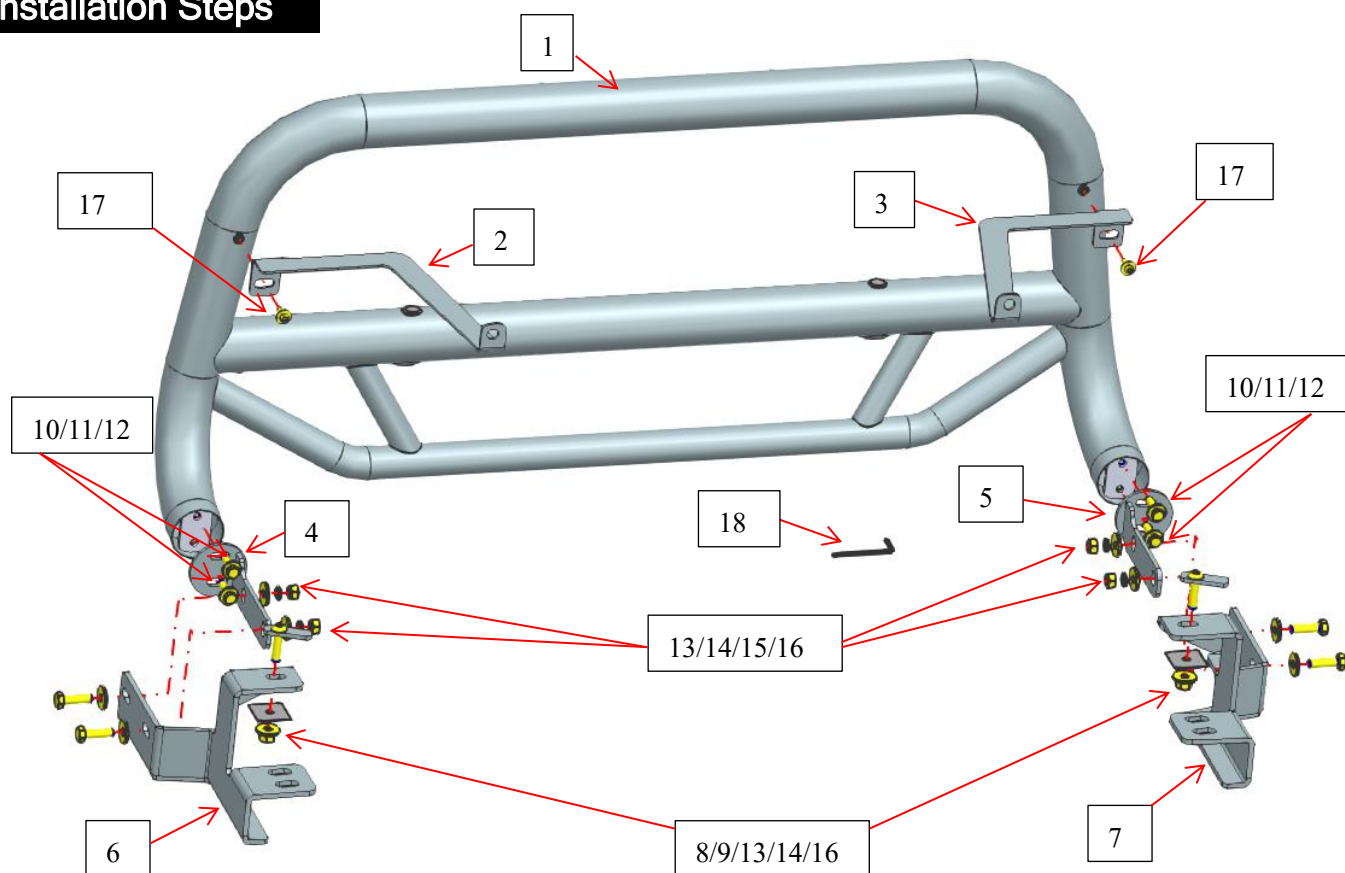Installation Steps**STEP 1:**


Remove contents from box. Verify all parts are present. Read instructions carefully before starting installation. Do not attempt installations alone, personal injury or damage to the truck may result.

STEP 2:


1. Follow (Fig 1 – 7) to remove front clip from vehicle, then remove shutter veins. After, replace front clip to vehicle.

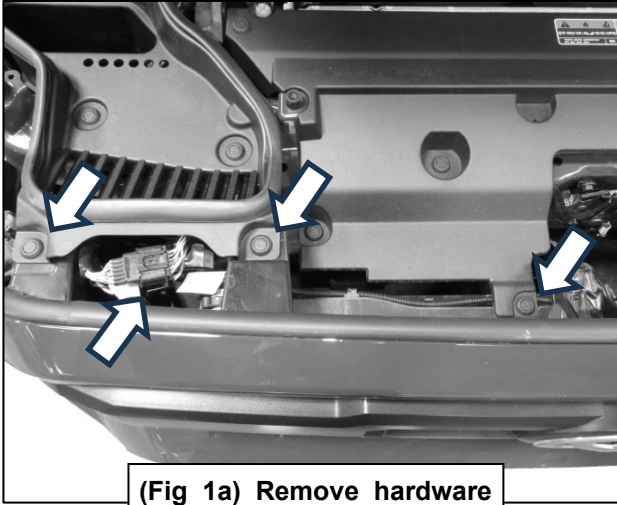


(Fig 1a) Remove hardware holding front clip to vehicle

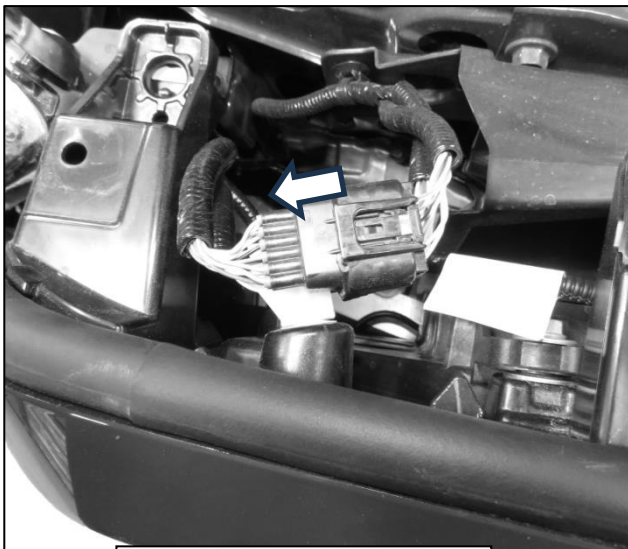


(Fig 2) Unplug wire harness

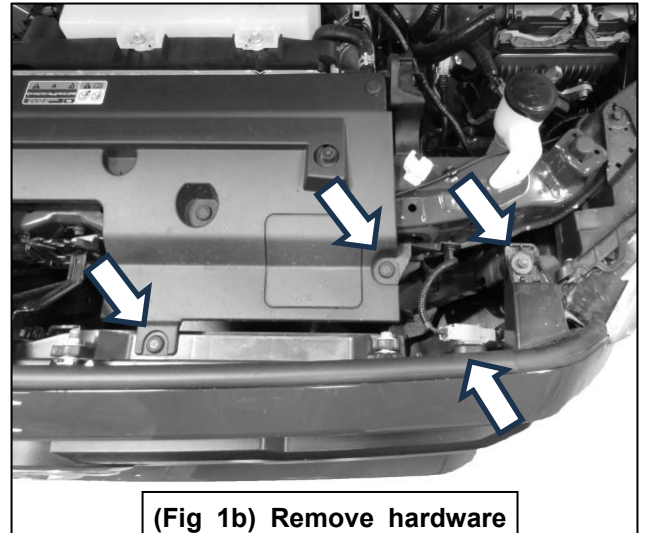


(Fig 1b) Remove hardware holding front clip to vehicle

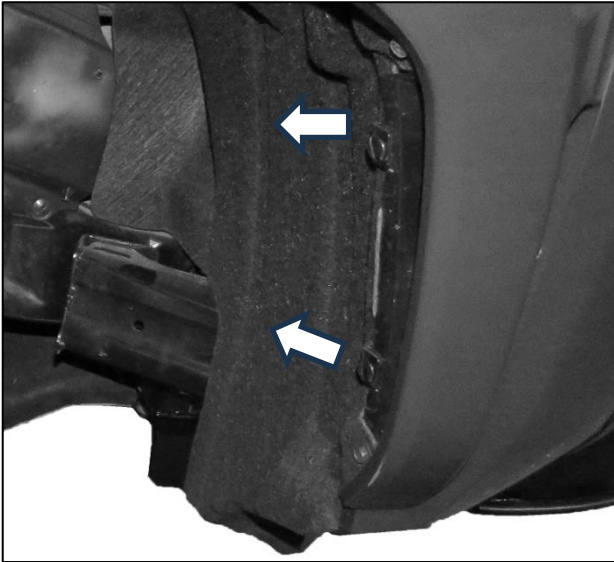


(Fig 3) Remove clips and peel wheel well liner from vehicle

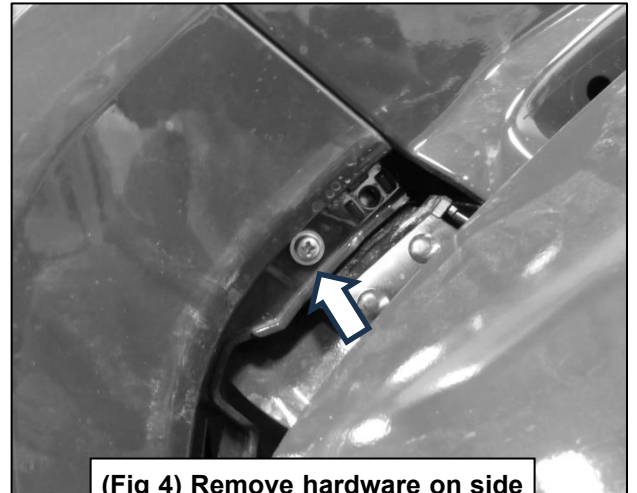

(Fig 4) Remove hardware on side of vehicle to remove front clip

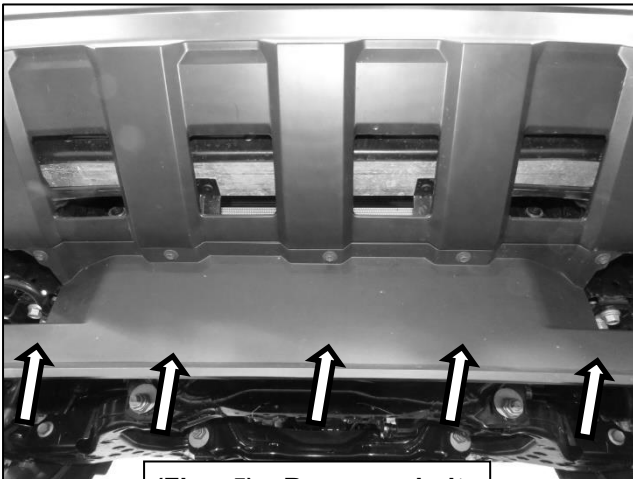

(Fig 5) Remove bolts from underneath bumper

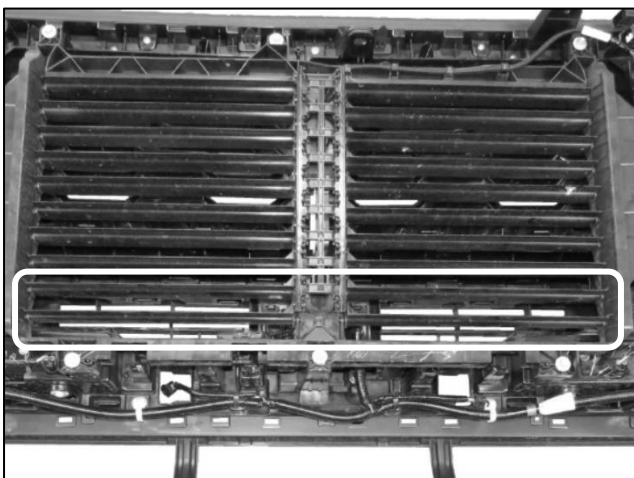


(Fig 7) Remove bottom two shutter veins from front clip, then reattach front clip to vehicle




(Fig 6) Pull Bumper from sides and forward to detach from vehicle


2. Follow (Fig 8 – 19) to attach Support and Frame Mounting Brackets, the attach Grille Guard to Brackets. Complete each step on both Passenger and Driver side. Ensure all hardware is hand tightened at this point.

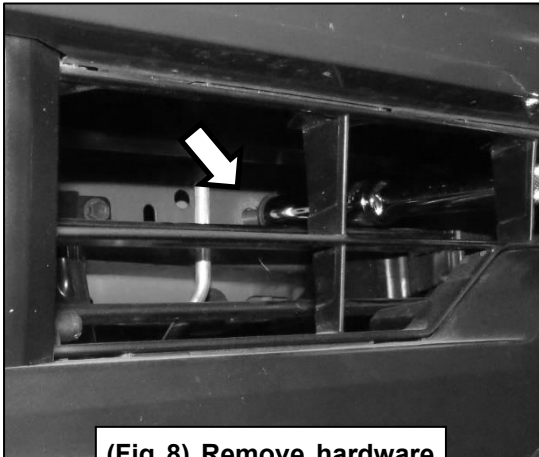

(Fig 8) Remove hardware from behind Grille

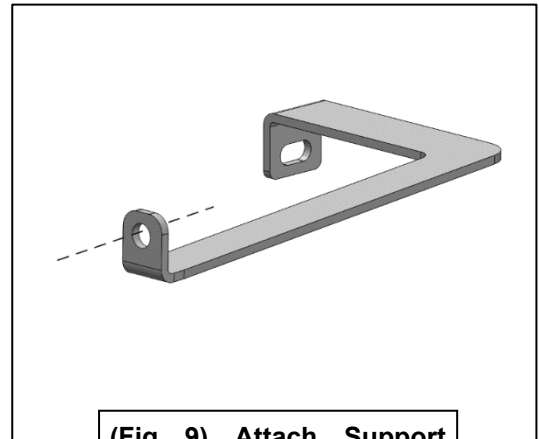


(Fig 9) Attach Support Bracket reusing hardware

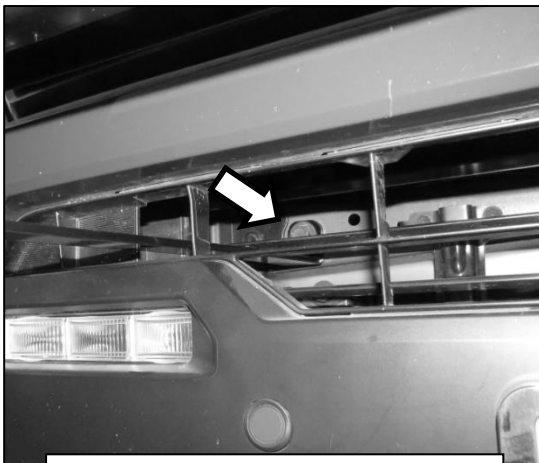


(Fig 10) Attached Support Bracket

- (1) 10mm Bolt Plate
- (1) Plastic Retainer
- (1) 10mm Flat Washer
- (1) 10mm Lock Washer

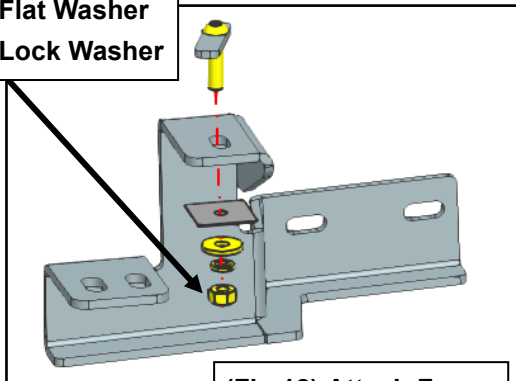

(Fig 12) Attach Frame Mounting Bracket

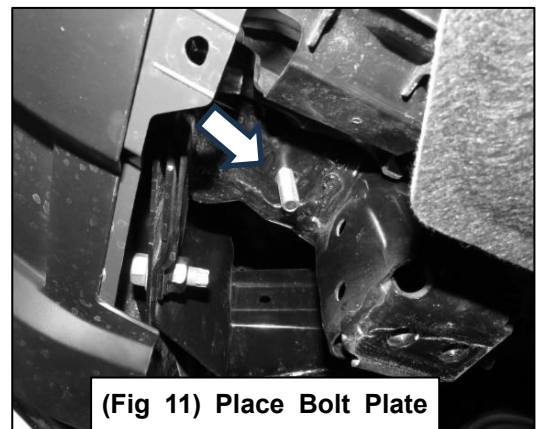


(Fig 11) Place Bolt Plate in upper Frame Mounting Bracket mounting point




(Fig 13) Remove hardware from lower Frame Mounting Bracket mounting point




(Fig 15) Attached Frame Mounting Bracket

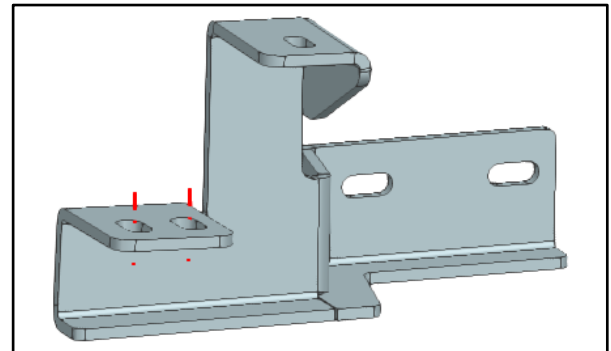

(Fig 14) Attach Frame Mounting Bracket reusing hardware

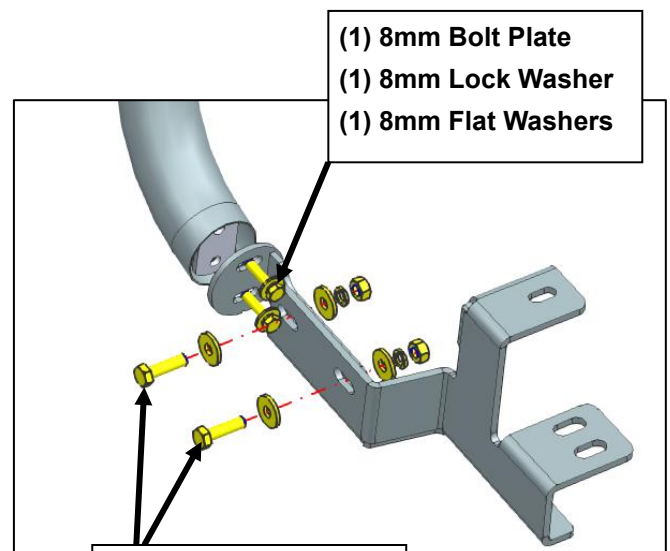


- (1) 8mm Bolt Plate
- (1) 8mm Lock Washer
- (1) 8mm Flat Washers

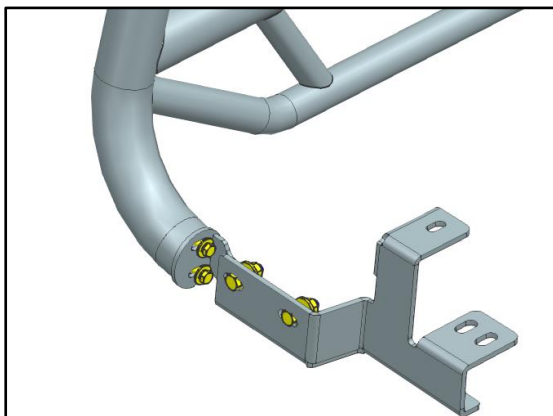


(Fig 16) Lock and install the Bull Bar with the brackets

- (3) 10mm Bolt Plate
- (3) 10mm Lock Washer
- (6) 10mm Flat Washers
- (1) 10mm Hex Nut

- (1) Button Head Bolt Assembly
- (1) Support Bracket

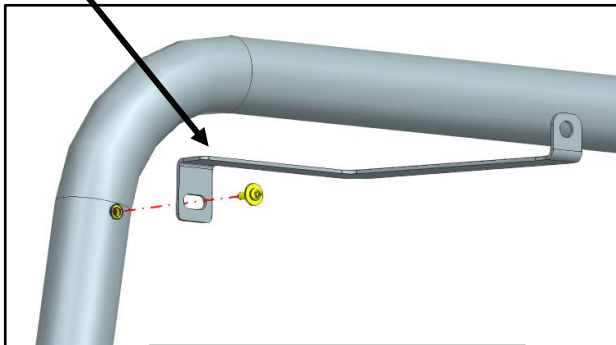


(Fig 17) Install the support bracket on bull bar

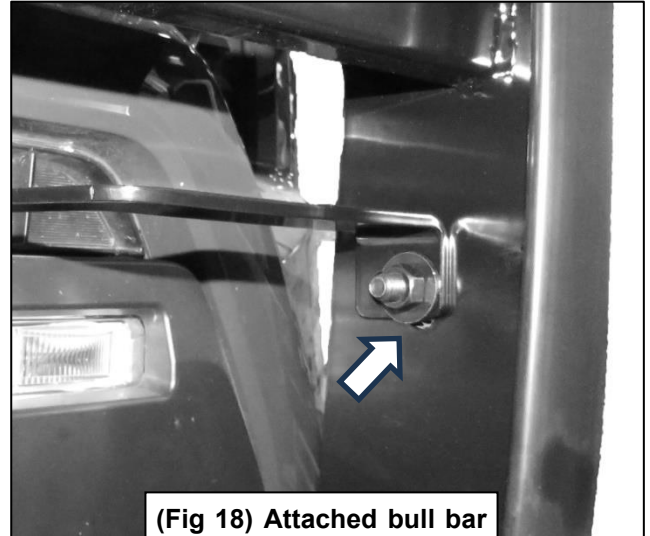

(Fig 18) Attached bull bar to Support Bracket

3. Finish installation.

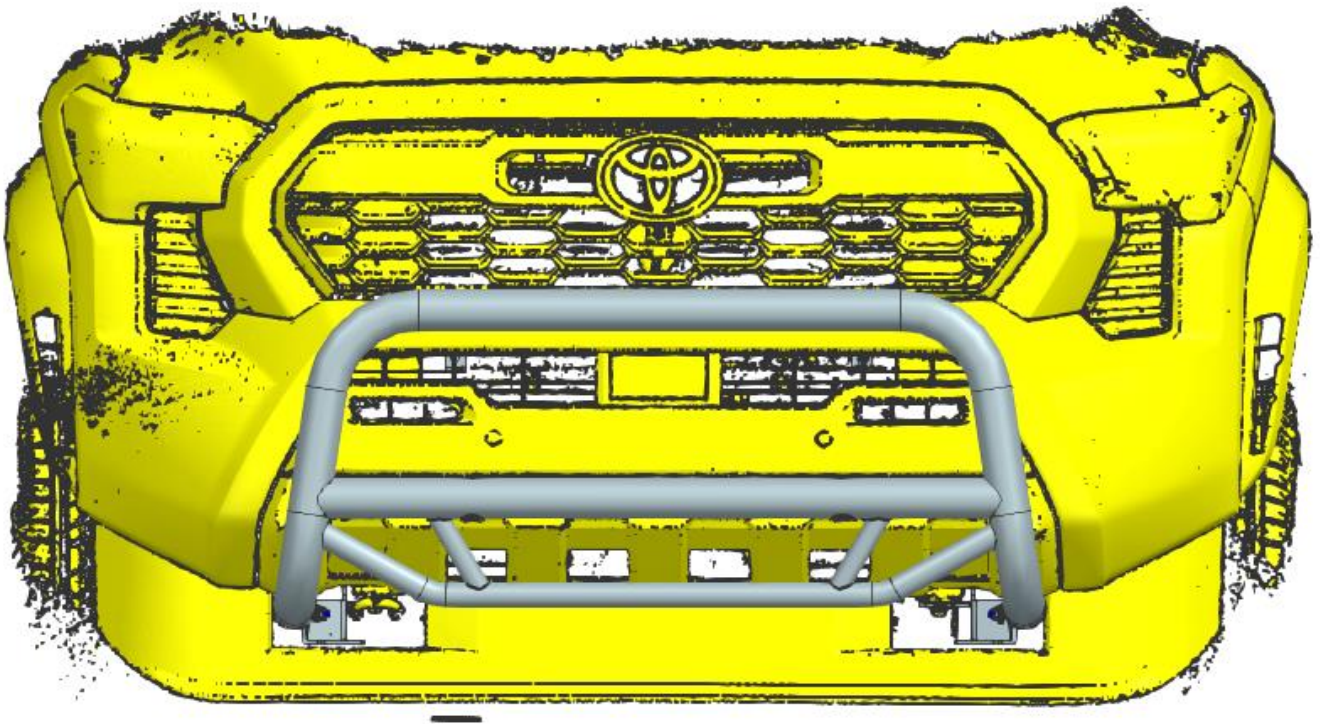

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.